

**Installation
and
Configuration
Guide**

HP StorageWorks HSG80 ACS Solution Software V8.8 for OpenVMS

Product Version: 8.8-1

First Edition (March 2005)

Part Number: AA-RV1PA-TE

This guide provides installation and configuration instructions and reference material for operation of the HSG80 ACS Solution Software V8.8-1 for OpenVMS.



© Copyright 2000-2005 Hewlett-Packard Development Company, L.P.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information contained in this document is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Compaq Computer Corporation is a wholly-owned subsidiary of Hewlett-Packard Company.

Intel® is a U.S. registered trademark of Intel Corporation.

Microsoft®, MS-DOS®, MS Windows®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

Hewlett-Packard Company shall not be liable for technical or editorial errors or omissions contained herein. The information is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Hewlett-Packard Company products are set forth in the express limited warranty statements for such products. Nothing herein should be construed as constituting an additional warranty.

HSG80 ACS Solution Software V8.8 for OpenVMS Installation and Configuration Guide
First Edition (March 2005)
Part Number: AA-RV1PA-TE

contents

About this Guide	11
Overview	12
Intended Audience	12
Related Documentation	12
Chapter Content Summary	14
Conventions	16
Document conventions	16
Symbols in Text	16
Symbols on Equipment	17
Rack Stability	18
Getting Help	19
Technical Support	19
Storage web site	19
HP Authorized Reseller	20
Configuration Flowchart	20
1 Planning a Subsystem	25
Defining Subsystems	26
Controller Designations A and B	26
Controller Designations “This Controller” and “Other Controller”	27
What is Failover Mode?	29
Multiple-Bus Failover Mode	29
Selecting a Cache Mode	31
Read Caching	31
Read-Ahead Caching	31
Write-Back Caching	31
Write-Through Caching	31
Enabling Mirrored Caching	32
What is the Command Console LUN?	33
Determining the Address of the CCL	33

Determining Connections	34
Naming Connections	34
Numbers of Connections	35
Assigning Unit Numbers	36
Matching Units to Host Connections in Multiple-Bus Failover Mode	36
Assigning Unit Numbers Depending on SCSI_VERSION	37
Assigning Host Connection Offsets and Unit Numbers in SCSI-3 Mode	37
Assigning Host Connection Offsets and Unit Numbers in SCSI-2 Mode	38
Assigning Unit Identifiers	38
Using CLI to Specify Identifier for a Unit	39
Using SWCC to Specify LUN ID Alias for a Virtual Disk	39
What is Selective Storage Presentation?	39
Restricting Host Access by Disabling Access Paths	40
Restricting Host Access in Multiple-Bus Failover Mode	41
Enabling the Access Path of Selected Host Connections	41
Restricting Host Access by Offsets	43
Worldwide Names (Node IDs and Port IDs)	44
Restoring Worldwide Names (Node IDs)	45
Unit Worldwide Names (LUN IDs)	46
2 Planning Storage Configurations	47
Where to Start	48
Determining Storage Requirements	49
Configuration Rules for the Controller	49
Addressing Conventions for Device PTL	50
Examples - Model 2200 Storage Maps, PTL Addressing	53
Choosing a Container Type	60
Creating a Storageset Profile	63
Planning Considerations for Storageset	64
Stripeset Planning Considerations	64
Mirrorset Planning Considerations	68
Keep these points in mind when planning mirrorsets	69
RAIDset Planning Considerations	69
Keep these points in mind when planning RAIDsets	70
Striped Mirrorset Planning Considerations	71
Storageset Expansion Considerations	73
Partition Planning Considerations	73
Defining a Partition	74
Guidelines for Partitioning Storagesets and Disk Drives	74

Changing Characteristics Through Switches	75
Enabling Switches	75
Changing Switches.....	75
Specifying Storageset and Partition Switches	76
RAIDset Switches	76
Mirrorset Switches	76
Partition Switches.....	76
Specifying Initialization Switches	77
Chunk Size	77
Increasing the Request Rate	78
Increasing Sequential Data Transfer Performance	79
Save Configuration.....	79
Destroy/Nodeestroy	80
Geometry	80
Specifying Unit Switches	81
Creating Storage Maps	81
Using LOCATE Command to Find Devices	81
Example Storage Map—Model 4310R Disk Enclosure	83
3 Preparing the Host System87
Installing RAID Array Storage System	88
Making a Physical Connection.....	92
Preparing to Install Host Bus Adapter	92
Installing Host Bus Adapter.....	92
Verifying/Installing Required Versions	93
Solution Software Upgrade Procedures	93
New Features, ACS 8.8 for OpenVMS	95
Host Connection Table Management Improvements.....	95
Host Connection Table Locking	95
Viewing Host Connection Table Lock State.....	96
Adding Rejected Host Connections to Locked Host Connection Table	99
Implementation Notes	99
Selective Management Presentation	100
Removing Management Agent Host systems	100
Adding Management Agent Host systems	101
Display Enabled Management Agents	101
Enabling SAN Security	102
Linking WWIDs for Snap and Clone Units.....	103
CLI format	103

Implementation Notes	104
SMART Error Eject	105
Error Threshold for Drives	109
4 Installing and Configuring the HSG Agent	111
Why Use StorageWorks Command Console (SWCC)?	112
Installation and Configuration Overview	113
About the Network Connection for the Agent	114
Before Installing the Agent.	116
Options for Running the Agent.	116
Downloading the Host Kit Software From the Web	117
Installing and Configuring the Agent	117
Removing the Agent	123
5 FC Configuration Procedures	125
Establishing a Local Connection	126
Setting Up a Single Controller	127
Powering On and Establishing Communication	127
Cabling a Single Controller	127
Configuring a Single Controller Using CLI.	128
Verifying the Node ID and Checking for Any Previous Connections	128
Configuring Controller Settings	129
Restarting the Controller	130
Setting Time and Verifying all Commands.	130
Plugging in the FC Cable and Verify Connections	133
Repeating Procedure for Each Host Adapter.	133
Verifying Installation.	133
Setting Up a Controller Pair	134
Powering Up and Establishing Communication	134
Cabling a Controller Pair	134
Configuring a Controller Pair Using CLI.	135
Configuring Controller Settings	136
Restarting the Controller	137
Setting Time and Verifying All Commands	137
Plugging in the FC Cable and Verify Connections	140
Repeating Procedure for Each Host Adapter Connection	140
Verifying Installation.	141
Configuring Devices.	141
Configuring Storage Containers	141

Configuring a Stripeset	142
Configuring a Mirrorset	143
Configuring a RAIDset	144
Configuring a Striped Mirrorset	144
Configuring a Single-Disk Unit (JBOD)	145
Configuring a Partition	146
Assigning Unit Numbers and Unit Qualifiers	147
Assigning a Unit Number to a Storageset	147
Assigning a Unit Number to a Single (JBOD) Disk	147
Assigning a Unit Number to a Partition	148
Assigning Unit Identifiers	148
Using CLI to Specify Identifier for a Unit	148
Using SWCC to Specify LUN ID Alias for a Virtual Disk	149
Preferring Units	149
Configuration Options	150
Changing the CLI Prompt	150
Mirroring cache	150
Adding Disk Drives	150
Adding a Disk Drive to the Spareset	150
Removing a Disk Drive from the Spareset	151
Enabling Autospare	151
Deleting a Storageset	152
Changing Switches for a Storageset or Device	152
Displaying the Current Switches	153
Changing RAIDset and Mirrorset Switches	153
Changing Device Switches	153
Changing Initialize Switches	153
Changing Unit Switches	153
Verifying Storage Configuration from Host	154
6 Using CLI for Configuration	155
CLI Configuration Example	158
7 Backing Up, Cloning, and Moving Data	165
Backing Up Subsystem Configurations	166
Creating Clones for Backup	167
Moving Storagesets	171

A	Subsystem Profile Templates	175
	StorageSet Profile	176
	Storage Map Template 1 for the BA370 Enclosure	178
	Storage Map Template 2 for the Second BA370 Enclosure	179
	Storage Map Template 3 for the TSingle-Bushird BA370 Enclosure	180
	Storage Map Template 4 for the Model 4214R Disk Enclosure	181
	Storage Map Template 5 for the Model 4254 Disk Enclosure	183
	Storage Map Template 6 for the Model 4310R Disk Enclosure	185
	Storage Map Template 7 for the Model 4350R Disk Enclosure	187
	Storage Map Template 8 for the Model 4314R Disk Enclosure	188
	Storage Map Template 9 for the Model 4354R Disk Enclosure	190
B	Installing, Configuring, and Removing the Client	191
	Why Install the Client?	192
	Before You Install the Client	193
	Installing the Client	194
	Installing the Integration Patch	195
	Should I Install the Integration Patch?	195
	Performing the Integration Patch Installation	195
	Integrating Controller's SWCC Storage Window with CIM	196
	Finding the Controller's Storage Window	197
	Troubleshooting Client Installation	197
	Invalid Network Port Assignments During Installation	197
	"There is no disk in the drive" Message	198
	Adding Storage Subsystem and its Host to Navigation Tree	199
	Removing Command Console Client	201
	Where to Find Additional Information	202
	About the User Guide	202
	About the Online Help	202
	Glossary	203
	Index	225
	Figures	
	1 General configuration flowchart (panel 1)	21
	2 General configuration flowchart (panel 2)	22
	3 SWCC storage configuration flowchart (panel 3)	23
	4 Location of controllers and cache modules in a Model 2200 enclosure	26

5	Location of controllers and cache modules in a BA370 enclosure	27
6	“This controller” and “other controller” for the Model 2200 enclosure	28
7	“This controller” and “other controller” for the BA370 enclosure	28
8	Typical multiple-bus configuration	30
9	Mirrored caching	32
10	Connections in multiple-bus failover mode	35
11	Limiting host access in multiple-bus failover mode	42
12	Placement of the worldwide name label on the Model 2200 enclosure	45
13	Placement of the worldwide name label on the BA370 enclosure	46
14	Mapping a unit to physical disk drives	51
15	PTL naming convention	51
16	How data is laid out on disks in BA370 enclosure configuration	52
17	Storage container types	61
18	Three-member RAID 0 stripeset (example 1)	65
19	Three-member RAID 0 stripeset (example 2)	66
20	Mirrorsets maintain two copies of the same data (example 1)	68
21	Mirrorset (example 2)	68
22	Five-member RAIDset using parity	70
23	Striped mirrorset (example 1)	72
24	Striped mirrorset (example 2)	72
25	One example of a partitioned single-disk unit	73
26	Large chunk size increases request rate	78
27	Dual-Bus Enterprise Storage RAID Array Storage System	90
28	Single-Bus Enterprise Storage RAID Array Storage System	91
29	An example of a network connection	115
30	Maintenance port connection	126
31	Single controller cabling	128
32	Controller pair failover cabling	135
33	Storage container types	142
34	Example storage map for the BA370 Enclosure	156
35	Example, three non-clustered host systems	157
36	Example, logical or virtual disks comprised of storagesets	158
37	CLONE utility steps for duplicating unit members	168
38	Navigation Window	199
39	Navigation window showing storage host system “Atlanta”	200
40	Navigation window showing expanded “Atlanta” host icon	200

Tables

1	Summary of Chapter Contents	14
2	Document Conventions	16
3	Unit Assignments and SCSI_VERSION	38
4	PTL addressing, single-bus configuration, six Model 4320R enclosures	55
5	PTL addressing, dual-bus configuration, three Model 4350R enclosures	57
6	PTL addressing, single-bus configuration, six Model 4314R enclosures	58
7	PTL addressing, dual-bus configuration, three Model 4354A enclosures	59
8	Comparison of Container Types	62
9	Example of Storageset Profile	63
10	Example Chunk Sizes	79
11	Model 4310 disk enclosure, example of storage map	83
12	SWCC Features and Components	112
13	Installation and Configuration Overview	113
14	Information Needed to Configure Agent	121

about this guide

This Installation Guide describes how to install and configure the HSG80 ACS Solution Software Version 8.8-1 for OpenVMS.

This guide provides information to help you:

- Plan the storage array subsystem
- Install and configure the storage array subsystem on individual operating system platforms

“About this Guide” topics include:

- [Overview](#), page 12
- [Chapter Content Summary](#), page 14
- [Conventions](#), page 16
- [Rack Stability](#), page 18
- [Getting Help](#), page 19
- [HP Authorized Reseller](#), page 20
- [Configuration Flowchart](#), page 20

This book does not contain information about the operating environments to which the controller may be connected, nor does it contain detailed information about subsystem enclosures or their components. See the documentation that accompanied these peripherals for information about them.

Overview

This section covers the following topics:

[Intended Audience](#), page 12

[Related Documentation](#), page 12

Intended Audience

This book is intended for use by system administrators and system technicians who have a basic experience with storage and networking.

Related Documentation

In addition to this guide, corresponding information can be found in:

- ACS V8.8-1 controller documentation (software delivered via PCMCIA cards)
- *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*, EK-G80CL-RA. C01
- *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Maintenance and Service Guide*, EK-G80MS-SA. C01
- *HP StorageWorks HSG60 and HSG80 Array Controller Software Troubleshooting Guide*, EK-G80TS-SA. C01
- StorageWorks Command Console (SWCC) v2.5 documentation (client software delivered in solutions kits)
- *HP StorageWorks HP StorageWorks Command Console Version 2.5 User Guide*, AA- RV1UA -TE
- *HP StorageWorks HP StorageWorks Command Console Version 2.5 Release Notes*, AV- RV1TA -TE
- *HP StorageWorks Command Console V2.5 Online Help*, AA-RS20A-TE and AA-RS21A-TE
- Host-specific documentation (SWCC Agent and HBA software delivered in solutions kits)
- Installation and Configuration Guide (platform-specific) - the guide you are reading

- *HP StorageWorks HSG80 ACS Solution Software Release Notes* (platform-specific)
- *HP StorageWorks Enterprise/Modular Storage RAID Array Fibre Channel Arbitrated Loop Configurations for Windows, Tru64, and Sun Solaris Application Note* (AA-RS1ZB-TE) - Solution software host support includes the following platforms:
 - IBM AIX
 - HP-UX
 - Linux (Red Hat x86/Alpha, SuSE x86/Alpha, Caldera x86)
 - Novell NetWare
 - Open VMS
 - Sun Solaris
 - Tru64 UNIX
 - Windows NT/2000/Windows Server 2003 (32-bit)

Additional support required by HSG80 ACS Solution Software Version 8.8-1, but delivered through external programs, includes the following:

- Heterogeneous “rules-based” SAN configurations
- Host-Bus Adapter (HBA) products
- Applicable Storage Utility Management Suite (SUMS) components
- Vendor-specific switch products
- Secure Path products (Windows, NetWare, Sun, AIX, HP-UX)
- Data Replication Manager (DRM) under ACS 8.8-1P
- Enterprise Volume Manager (EVM) under ACS 8.8-1S
- Enterprise Backup Solution (EBS)
- Additional ACS variants (W, R)

Chapter Content Summary

[Table 1](#) below summarizes the content of the chapters.

Table 1: Summary of Chapter Contents

Chapters	Description
1. Planning a Subsystem	This chapter focuses on technical terms and knowledge needed to plan and implement storage array subsystems.
2. Planning Storage Configurations	Plan the storage configuration of your subsystem, using individual disk drives (JBOD), storage set types (mirrorsets, stripesets, and so on), and/or partitioned drives. This chapter describes addressing conventions, configuration rules, creating storage profiles, and creating storage maps.
3. Preparing the host system	How to prepare your OpenVMS host computer to accommodate the HSG80 controller storage subsystem.
4. Installing and Configuring the HSG Agent	The Agent for HSG for a specific operating system polls the storage.
5. FC Configuration Procedures	How to configure a subsystem that uses Fibre Channel (FC) fabric topology. In fabric topology, the controller connects to its hosts through switches. How to verify that multiple paths exist to virtual disk units under OpenVMS.
6. Using CLI for Configuration	How-to example of configuring a storage subsystem using the Command Line Interpreter (CLI).

Table 1: Summary of Chapter Contents (Continued)

Chapters	Description
7. Backing Up, Cloning, and Moving Data	<p>Description of common procedures that are not mentioned elsewhere in this guide.</p> <p>Backing Up Subsystem Configuration</p> <p>Cloning Data for Backup</p> <p>Moving Storagesets</p>
Appendix A. Subsystem Profile Templates	<p>This appendix contains storageset profiles to copy and use to create your system profiles. It also contains an enclosure template to use to help keep track of the location of devices and storagesets in your shelves. Four (4) templates will be needed for the subsystem.</p>
Appendix B. Installing, Configuring, and Removing the Client	<p>The Client monitors and manages a storage subsystem.</p> <p>The following information is included in this appendix:</p> <ul style="list-style-type: none">■ Why Install the Client?■ Before You Install the Client■ Installing the Client■ Installing Integration Patch■ Troubleshooting the Client Installation■ Adding Storage Subsystem and its Host to the Navigation Tree■ Removing the Command Console Client■ Where to Find Additional Information

Conventions

Conventions consist of the following:

- [Document conventions](#)
- [Symbols in Text](#)
- [Symbols on Equipment](#)

Document conventions

This document follows the conventions in [Table 2](#).

Table 2: Document Conventions

Element	Convention
Cross-reference links	Blue text: Figure 1
Key names, menu items, buttons, and dialog box titles	Bold
File names, application names, and text emphasis	<i>Italics</i>
User input, command names, system responses (output and messages)	Monospace font COMMAND NAMES are uppercase unless they are case sensitive
Variables	<i>Monospace, italic font</i>
web site addresses	Sans serif font (http://www.hp.com)

Symbols in Text

These symbols may be found in the text of this guide. They have the following meanings.



WARNING: Text set off in this manner indicates that failure to follow directions in the warning could result in bodily harm or loss of life.



Caution: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or data.

Note: Text set off in this manner presents commentary, sidelights, or interesting points of information.

Symbols on Equipment



 
Any enclosed surface or area of the equipment marked with these symbols indicates the presence of electrical shock hazards. Enclosed area contains no operator serviceable parts.

WARNING: To reduce the risk of injury from electrical shock hazards, do not open this enclosure.



Any RJ-45 receptacle marked with these symbols indicates a network interface connection.

WARNING: To reduce the risk of electrical shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



Any surface or area of the equipment marked with these symbols indicates the presence of a hot surface or hot component. Contact with this surface could result in injury.

WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching.



Power supplies or systems marked with these symbols indicate the presence of multiple sources of power.

WARNING: To reduce the risk of injury from electrical shock, remove all power cords to completely disconnect power from the power supplies and systems.



Any product or assembly marked with these symbols indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manually handling material.

Rack Stability



WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:

- **The leveling jacks are extended to the floor.**
 - **The full weight of the rack rests on the leveling jacks.**
 - **In single rack installations, the stabilizing feet are attached to the rack.**
 - **In multiple rack installations, the racks are coupled.**
 - **Only one rack component is extended at any time. A rack may become unstable if more than one rack component is extended for any reason.**
-

Getting Help

If you still have a question after reading this guide, contact an HP authorized service provider or access our web site.

Technical Support

Telephone numbers for worldwide technical support are listed on the following HP web site: <http://www.hp.com/support/>. From this web site, select the country of origin.

Note: For continuous quality improvement, calls may be recorded or monitored.

Outside North America, call technical support at the nearest location. Telephone numbers for worldwide technical support are listed on the following web site: <http://www.hp.com>.

Be sure to have the following information available before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Detailed, specific questions

Storage web site

The Storage web site has the latest information on this product, as well as the latest drivers. Access the Storage web site at: <http://www.hp.com/storage>. From this web site, select the appropriate product or solution.

HP Authorized Reseller

For the name of your nearest authorized reseller:

- In the United States, call 1-800-345-1518
- In Canada, call 1-800-263-5868
- Elsewhere, see the Storage web site for locations and telephone numbers

Configuration Flowchart

A three-part flowchart ([Figure 1](#), [Figure 2](#), and [Figure 3](#)) is shown on the following pages. Refer to these charts while installing and configuring a new storage subsystem. All references in the flowcharts pertain to pages in this guide, unless otherwise indicated.

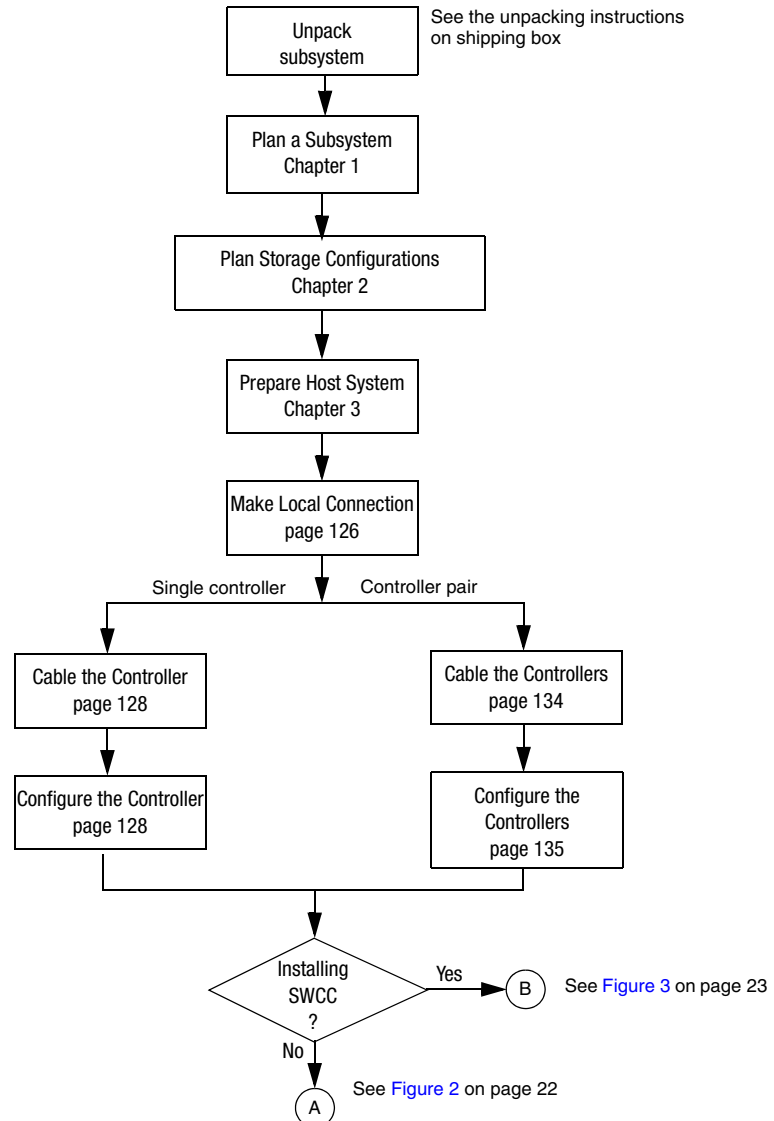


Figure 1: General configuration flowchart (panel 1)

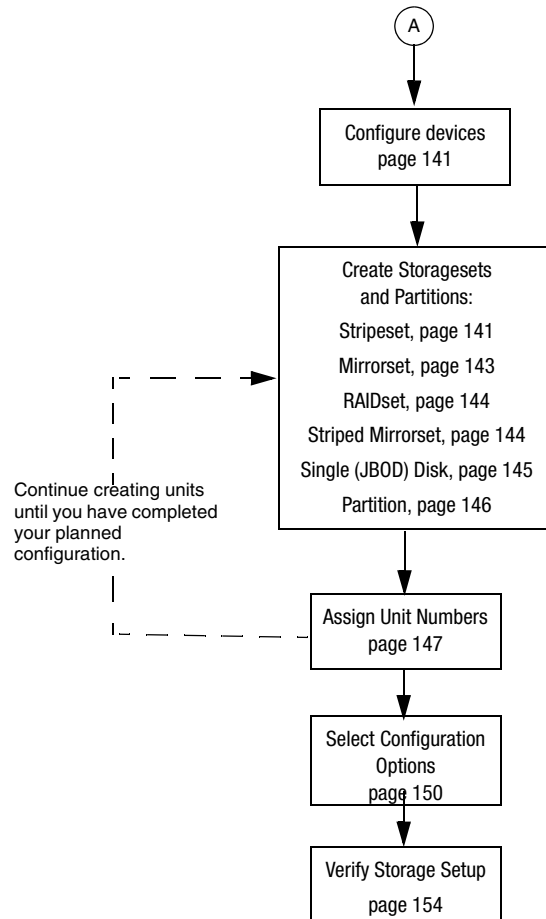


Figure 2: General configuration flowchart (panel 2)

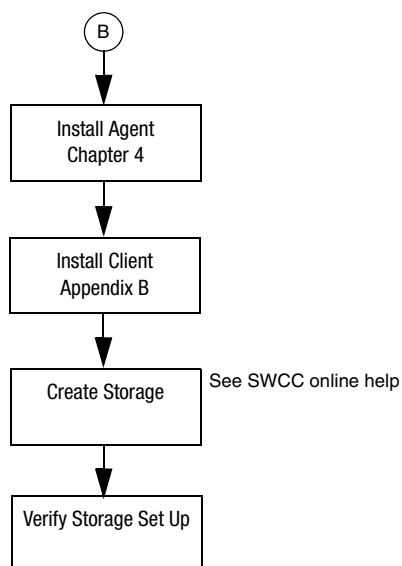


Figure 3: SWCC storage configuration flowchart (panel 3)

Planning a Subsystem

1

This chapter provides information that helps you plan how to configure the storage array subsystem. This chapter focuses on the technical terms and knowledge needed to plan and implement storage subsystems.

Note: This chapter frequently references the command line interface (CLI). For the complete syntax and descriptions of the CLI commands, see the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

The following information is included in this chapter:

- [Defining Subsystems](#), page 26
- [What is Failover Mode?](#), page 29
- [Selecting a Cache Mode](#), page 31
- [Enabling Mirrored Caching](#), page 32
- [What is the Command Console LUN?](#), page 33
- [Determining Connections](#), page 34
- [Assigning Unit Numbers](#), page 36
- [What is Selective Storage Presentation?](#), page 39

Refer to Chapter 2 when planning the types of storage containers you need. Storage containers are individual disk drives (JBOD), storageset types (mirrorsets, stripesets, and so on), and/or partitioned drives.

Defining Subsystems

This section describes the terms *this controller* and *other controller*. It also presents graphics of the Model 2200 and BA370 enclosures.

Note: The HSG80 controller uses the BA370 or Model 2200 enclosure.

Controller Designations A and B

The terms A, B, “this controller,” and “other controller,” respectively are used to distinguish one controller from another in a two-controller (also called dual-redundant) subsystem.

Controllers and cache modules are designated either A or B depending on their location in the enclosure, as shown in [Figure 4](#) for the Model 2200 enclosure and in [Figure 5](#) for the BA370 enclosure.

Model 2200 Enclosure

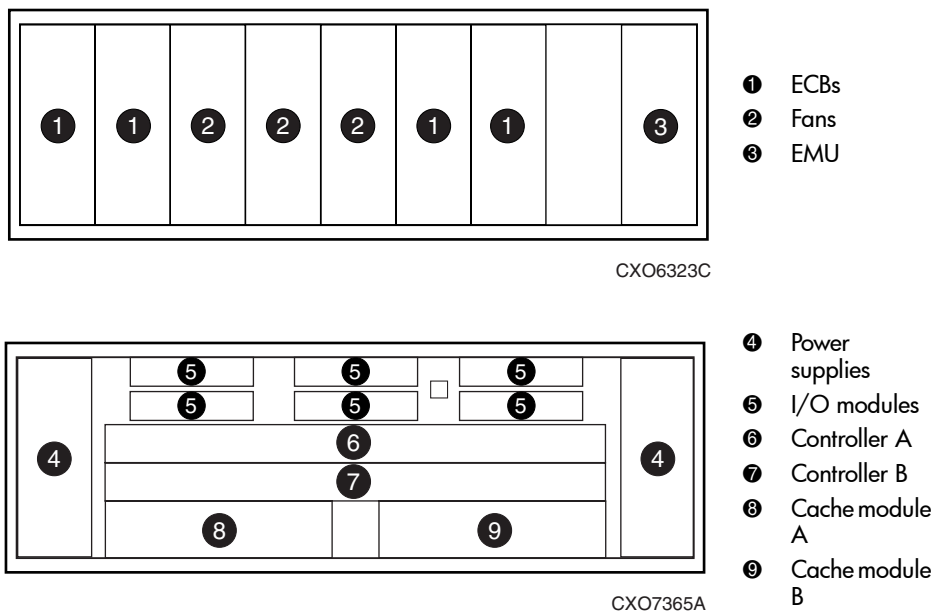


Figure 4: Location of controllers and cache modules in a Model 2200 enclosure

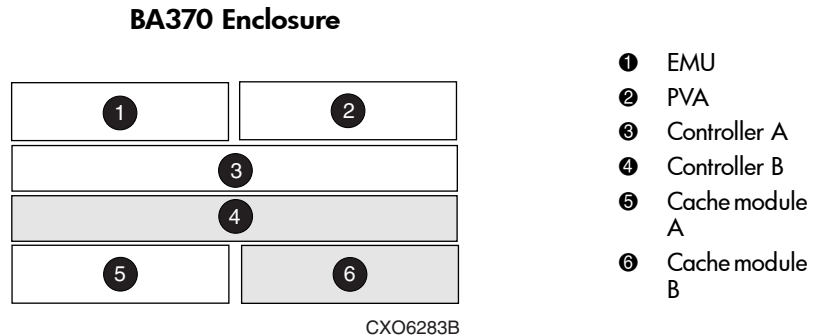


Figure 5: Location of controllers and cache modules in a BA370 enclosure

Controller Designations “This Controller” and “Other Controller”

Some CLI commands use the terms “this” and “other” to identify one controller or the other in a dual-redundant pair. These designations are a shortened form of “this controller” and “other controller.” These terms are defined as follows:

- **“this controller”**—the controller that is the focus of the CLI session. “This controller” is the controller to which the maintenance terminal is attached and through which the CLI commands are being entered. “This controller” can be abbreviated to “this” in CLI commands.
- **“other controller”**—the controller that is not the focus of the CLI session and through which CLI commands are not being entered. “Other controller” can be abbreviated to “other” in CLI commands.

Figure 6 shows the relationship between “this controller” and “other controller” in a Model 2200 enclosure. Figure 7 shows the same relationship in a BA370 enclosure.

Model 2200 Enclosure

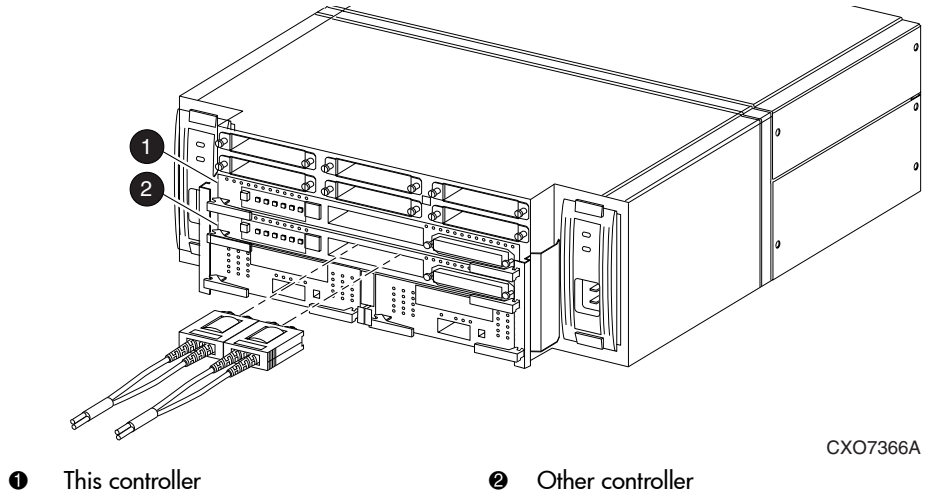


Figure 6: “This controller” and “other controller” for the Model 2200 enclosure

BA370 Enclosure

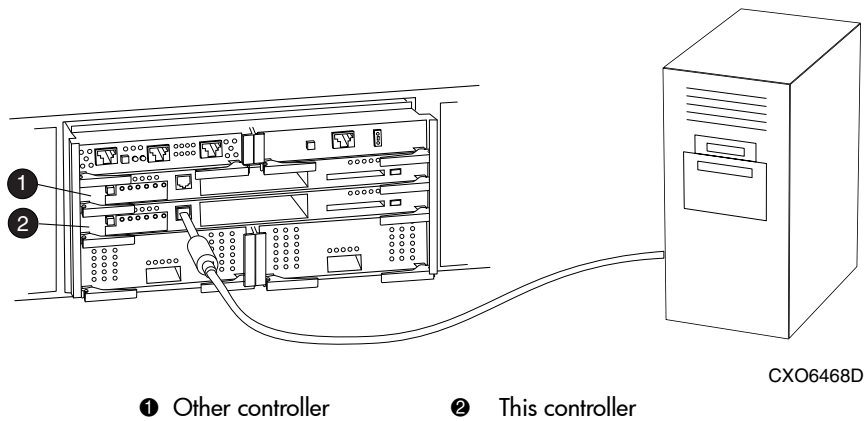


Figure 7: “This controller” and “other controller” for the BA370 enclosure

What is Failover Mode?

Failover is a way to keep the storage array available to the host if one of the controllers becomes unresponsive. A controller can become unresponsive because of a controller hardware failure. Failover keeps the storage array available to the hosts by allowing the surviving controller to take over total control of the subsystem.

Multiple-Bus Failover Mode

Multiple-bus failover mode has the following characteristics:

- Host controls the failover process by moving the units from one controller to another
- All units (0 through 199) are visible at all host ports
- Each host has two or more paths to the units

All hosts must have operating system support or additional software that supports multiple-bus failover mode. With this software, the host sees the same units visible through two (or more) paths. When one path fails, the host can issue commands to move the units from one path to another. A typical multiple-bus failover configuration is shown in [Figure 8](#).

In multiple-bus failover mode, you can specify which units are normally serviced by a specific controller of a controller pair. Units can be preferred to one controller or the other by the *PREFERRED_PATH* switch of the *ADD UNIT* (or *SET unit*) command. For example, use the following command to prefer unit D101 to “this controller”:

```
SET D101 PREFERRED_PATH=THIS_CONTROLLER
```


Note: This is an initial preference, which can be overridden by the hosts.

Keep the following points in mind when configuring controllers for multiple-bus failover:

- Multiple-bus failover can compensate for a failure in any of the following:
 - Controller
 - Switch or hub
 - Fibre Channel link

— Host Fibre Channel adapter

- A host can redistribute the I/O load between the controllers.
- All hosts must have operating system software that supports multiple-bus failover mode.

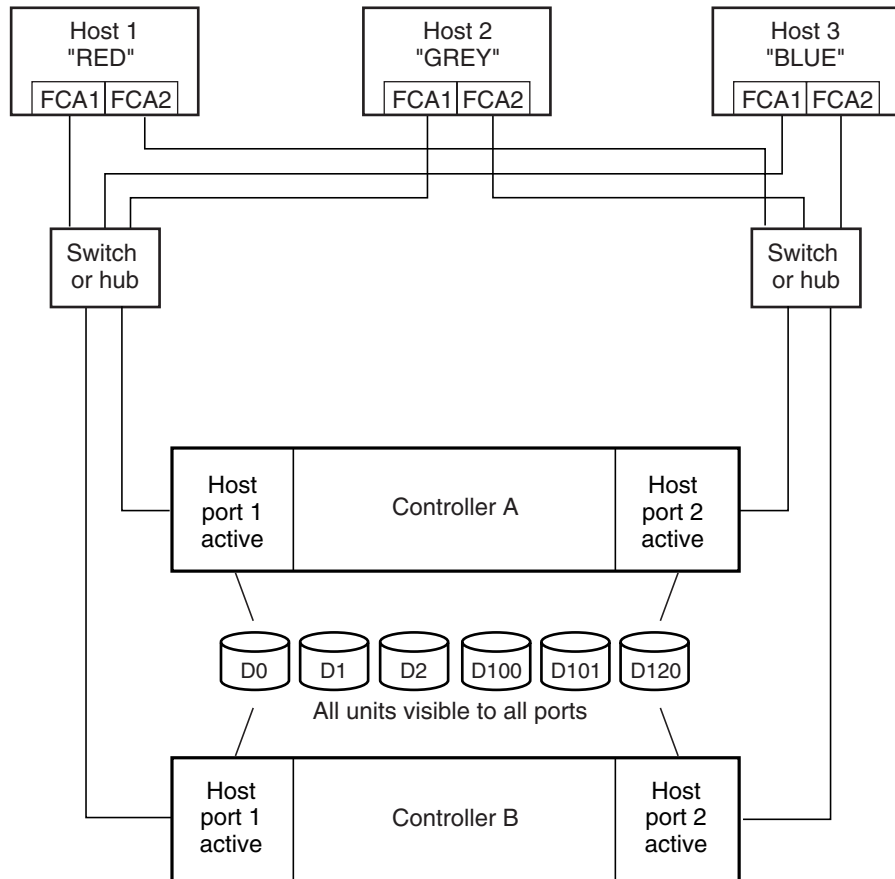

NOTE: FCA = Fibre Channel Adapter

CXO7094B

Figure 8: Typical multiple-bus configuration

Selecting a Cache Mode

The cache module supports read, read-ahead, write-through, and write-back caching techniques. The cache technique is selected separately for each unit. For example, you can enable only read and write-through caching for some units while enabling only write-back caching for other units.

Read Caching

When the controller receives a read request from the host, it reads the data from the disk drives, delivers it to the host, and stores the data in its cache module. Subsequent reads for the same data will take the data from cache rather than accessing the data from the disks. This process is called read caching.

Read caching can improve response time to many of the host's read requests. By default, read caching is enabled for all units.

Read-Ahead Caching

During read-ahead caching, the controller anticipates subsequent read requests and begins to prefetch the next blocks of data from the disks as it sends the requested read data to the host. This is a parallel action. The controller notifies the host of the read completion, and subsequent sequential read requests are satisfied from the cache memory. By default, read-ahead caching is enabled for all units.

Write-Back Caching

Write-back caching improves the subsystem's response time to write requests by allowing the controller to declare the write operation complete as soon as the data reaches cache memory. The controller performs the slower operation of writing the data to the disk drives at a later time.

By default, write-back caching is enabled for all units, but only if there is a backup power source for the cache modules (either batteries or an uninterruptable power supply).

Write-Through Caching

Write-through caching is enabled when write-back caching is disabled. When the controller receives a write request from the host, it places the data in its cache module, writes the data to the disk drives, then notifies the host when the write

operation is complete. This process is called write-through caching because the data actually passes through—and is stored in—the cache memory on its way to the disk drives.

Enabling Mirrored Caching

In mirrored caching, half of each controller's cache mirrors the companion controller's cache, as shown in [Figure 9](#).

The total memory available for cached data is reduced by half, but the level of protection is greater.

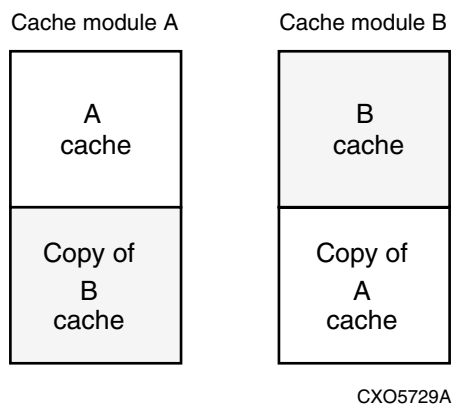


Figure 9: Mirrored caching

Before enabling mirrored caching, make sure the following conditions are met:

- Both controllers support the same size cache.
- Diagnostics indicate that both caches are good.
- No unit errors are outstanding, for example, lost data or data that cannot be written to devices.
- Both controllers are started and configured in failover mode.

What is the Command Console LUN?

StorageWorks Command Console (SWCC) software communicates with the HSG80 controllers through an existing storage unit, or logical unit number (LUN). The dedicated LUN that SWCC uses is called the Command Console LUN (CCL). The CCL serves as the communication device for the HS-Series Agent and identifies itself to the host by a unique identification string. By default, a CCL device is enabled within the HSG80 controller on host port 1. The HSG80 uses with your platform.

Note: OpenVMS requires the controllers be set to SCSI-3 mode.

The CCL does the following:

- Allows the RAID Array to be recognized by the host as soon as it is attached to the SCSI bus and configured into the operating system.
- Serves as a communications device for the HS-Series Agent. The CCL identifies itself to the host by a unique identification string. This string, *HSG80CCL*, is returned in response to the inquiry command.

In dual-redundant controller configurations, the commands described in the following sections alter the setting of the CCL on both controllers. The CCL is enabled only on host port 1. At least one storage device of any type must be configured on host port 2 before installing the Agent on a host connected to host port 2.

Select a storageset that you plan to configure and that is not likely to change. This storageset can be used by the Agent to communicate with the RAID Array. Deleting this storageset (LUN) later breaks the connection between the Agent and the RAID Array.

Determining the Address of the CCL

CCL is enabled by default. Its address can be determined by using the following CLI command:

```
HSG80 > SHOW THIS_CONTROLLER
```

Determining Connections

The term “connection” applies to every path between a Fibre Channel adapter in a host computer and an active host port on a controller.


Note: In ACS Version 8.8-1, the maximum number of supported connections is 96.

Naming Connections

It is highly recommended that you assign names to connections that have meaning in the context of your particular configuration.

Note: Some non-alpha /numeric characters may not work with some hosts.

One system that works well is to name each connection after its host, its adapter, its controller, and its controller host port, as follows:

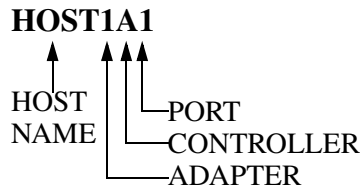

Examples:

A connection from the first adapter in the host named RED that goes to port 1 of controller A would be called RED1A1.


A connection from the third adapter in host GREEN that goes to port 2 of controller B would be called GREEN3B2.

Note: Connection names can have a maximum of 9 characters.

Numbers of Connections

The number of connections resulting from cabling one adapter into a switch or hub depends on failover mode and how many links the configuration has:

If a controller pair is in multiple-bus failover mode, each adapter has two connections, as shown in [Figure 10](#).

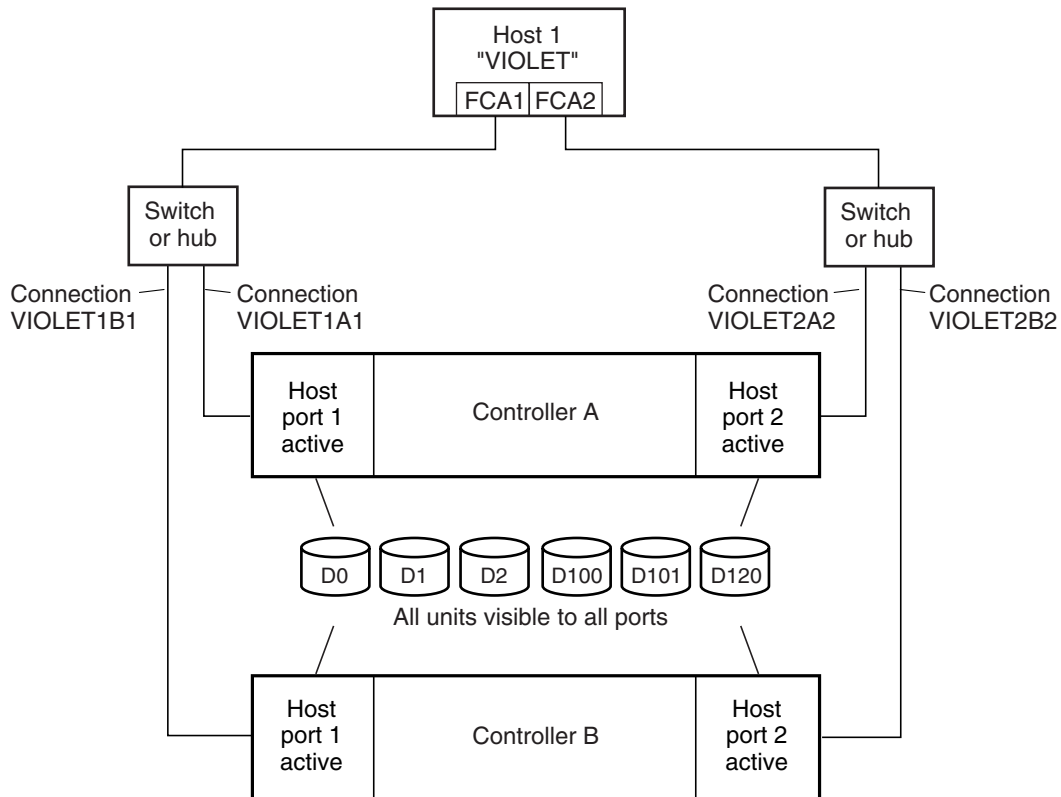

NOTE: FCA = Fibre Channel Adapter

CXO7080B

Figure 10: Connections in multiple-bus failover mode

Assigning Unit Numbers

The controller keeps track of the unit with the unit number. The unit number can be from 0–199 prefixed by a D, which stands for disk drive. A unit can be presented as different LUNs to different connections. The interaction of a unit and a connection is determined by several factors:

- Failover mode of the controller pair
- The `ENABLE_ACCESS_PATH` and `PREFERRED_PATH` switches in the `ADD UNIT` (or `SET unit`) commands
- The `UNIT_OFFSET` switch in the `ADD CONNECTIONS` (or `SET connections`) commands
- The controller port to which the connection is attached
- The `SCSI_VERSION` switch of the `SET THIS_CONTROLLER/OTHER_CONTROLLER` command

The considerations for assigning unit numbers are discussed in the following sections.

Matching Units to Host Connections in Multiple-Bus Failover Mode

In multiple-bus failover mode, the `ADD UNIT` command creates a unit for host connections to access. All unit numbers (0 through 199) are potentially visible on all four controller ports, but are accessible only to those host connections for which access path is enabled and which have offsets in the unit's range.

The LUN number a host connection assigns to a unit is a function of the `UNIT_OFFSET` switch of the `ADD` (or `SET`) `CONNECTIONS` command. The default offset is 0. The relationship of offset, LUN number, and unit number is shown in the following equation:

$$\text{LUN number} = \text{unit number} - \text{offset}$$

Where...

- LUN number is relative to the host (number the host sees the unit as)
- Unit number is relative to the controller (number the controller sees the unit as)

For example, unit D7 would be visible to a host connection with an offset of 0 as LUN 7 (unit number of 7 minus offset of 0). Unit D17 would be visible to a host connection with an offset of 10 as LUN 7 (unit number of 17 minus offset of 10).

The unit would not be visible at all to a host connection with a unit offset of 18 or greater, because that offset is not within the units range (unit number of 17 minus offset of 18 is a negative number).

In addition, the access path to the host connection must be enabled for the connection to access the unit. This is done through the `ENABLE_ACCESS_PATH` switch of the `ADD UNIT` (or `SET unit`) command.

The `PREFERRED_PATH` switch of the `ADD UNIT` (or `SET unit`) command determines which controller of a dual-redundant pair initially accesses the unit. Initially, `PREFERRED_PATH` determines which controller presents the unit as Ready. The other controller presents the unit as Not Ready. Hosts can issue a SCSI Start Unit command to move the unit from one controller to the other.

Assigning Unit Numbers Depending on SCSI_VERSION

The `SCSI_VERSION` switch of the `SET THIS_CONTROLLER/OTHER_CONTROLLER` command determines how the CCL is presented. There are two choices: SCSI-2 and SCSI-3. The choice for `SCSI_VERSION` affects how certain unit numbers and certain host connection offsets interact.

Note: OpenVMS requires the controllers be set to SCSI-3 mode.

Assigning Host Connection Offsets and Unit Numbers in SCSI-3 Mode

If `SCSI_VERSION` is set to SCSI-3, the CCL is presented as LUN 0 to all connections. The CCL supersedes any other unit assignment. Therefore, in SCSI-3 mode, a unit that would normally be presented to a connection as LUN 0 is not visible to that connection at all.

The following methods are recommended for assigning host connection offsets and unit numbers in SCSI-3 mode:

- Offsets should be divisible by 10 (for consistency and simplicity).
- Unit numbers should not be assigned at connection offsets (to avoid being masked by the CCL at LUN 0).

For example, if a host connection has an offset of 20 and SCSI-3 mode is selected, the connection will see LUNs as follows:

LUN 0 - CCL

LUN 1 - unit 21

LUN 2 - unit 22, etc.

In this example, if a unit 20 is defined, it will be superseded by the CCL and invisible to the connection.

Assigning Host Connection Offsets and Unit Numbers in SCSI-2 Mode

Some operating systems expect or require a disk unit to be at LUN 0. In this case, it is necessary to specify SCSI-2 mode.

If `SCSI_VERSION` is set to SCSI-2 mode, the CCL floats, moving to the first available LUN location, depending on the configuration.

StorageWorks recommends to use the following conventions when assigning host connection offsets and unit numbers in SCSI-2 mode:

- Offsets should be divisible by 10 (for consistency and simplicity).
- Unit numbers should be assigned at connection offsets (so that every host connection has a unit presented at LUN 0).

Table 3 summarizes the recommendations for unit assignments based on the `SCSI_VERSION` switch.

Table 3: Unit Assignments and `SCSI_VERSION`

<code>SCSI_VERSION</code>	Offset	Unit Assignment	What the connection sees LUN 0 as
SCSI-2	Divisible by 10	At offsets	Unit whose number matches offset
SCSI-3	Divisible by 10	Not at offsets	CCL

Assigning Unit Identifiers

When configuring storage units, a unique identifier must be specified for each unit and this identifier must be unique in the cluster.

This section gives two examples of setting an identifier for a previously created unit: one using CLI and one using SWCC. The CLI uses the older terms “identifier” and “unit”, while SWCC uses the terms “LUN ID alias” and “virtual disk”.

Identifier = LUN ID alias

Unit = virtual disk

Using CLI to Specify Identifier for a Unit

The command syntax for setting the identifier for a previously created unit (virtual disk) follows:

```
SET UNIT_NUMBER IDENTIFIER=NN
```

Note: For simplicity, StorageWorks recommends that the identifier match the unit number. For example, to set an identifier of 97 for unit D97, use the following command:

```
SET D97 IDENTIFIER=97
```

Using SWCC to Specify LUN ID Alias for a Virtual Disk

Setting a LUN ID alias for a virtual disk is the same as setting a unit identifier. To set LUN ID alias for a previously created virtual disk perform the following procedure:

1. Open the storage window, where you see the properties for that virtual disk.
2. Click on the Settings Tab to see changeable properties.
3. Click on the “Enable LUN ID Alias” button.
4. Enter the LUN ID alias (identifier) in the appropriate field. It is strongly suggested that, for simplicity, the LUN ID alias match the virtual disk number.

What is Selective Storage Presentation?

Selective Storage presentation is a feature of the HSG80 controller that enables the user to control the allocation of storage space and shared access to storage across multiple hosts. This is also known as *Restricting Host Access*.

In a subsystem that is attached to more than one host or if the hosts have more than one adapter, it is possible to reserve certain units for the exclusive use of certain host connections.

The default condition is `ENABLE_ACCESS_PATH=ALL`. This specifies that access paths to ALL hosts are enabled. HP recommends that you restrict host access and that the access path be carefully specified to avoid providing undesired host connections access to the unit.

Now with V88, you may change the default subsystem behavior so that units are always created without enabling connections. This provides more control in granting appropriate access to specific connections.

The command syntax to disable is:

```
HSG> SET this/other Default_Access=Disable
```

The command syntax to enable is:

```
HSG> SET this/other Default_Access=Enable {default after
upgrade}
```

When the command is invoked from one controller, the `Default_Access` from the other controller will be similarly modified. The setting is symmetrical and persistent across restarts, FRUTIL, etc.

Restricting Host Access by Disabling Access Paths

If more than one host is on a link (that is, attached to the same port), host access can be limited by enabling the access of certain host connections and disabling the access of others. This is done through the `ENABLE_ACCESS_PATH` and `DISABLE_ACCESS_PATH` switches of the `ADD UNIT` (or `SET unit`) commands. The access path is a unit switch, meaning it must be specified for each unit. Default access enables the unit to be accessible to all hosts.

For example:

In [Figure 11](#), restricting the access of unit D101 to host 3, the host named BROWN can be done by enabling only the connection to host 3. Enter the following commands:

```
SET D101 DISABLE_ACCESS_PATH=ALL
SET D101 ENABLE_ACCESS_PATH=BROWN1B2
```

If the storage subsystem has more than one host connection, carefully specify the access path to avoid providing undesired host connections access to the unit. The default condition for a unit is that access paths to all host connections are enabled. To restrict host access to a set of host connections, specify `DISABLE_ACCESS_PATH=ALL` for the unit, then specify the set of host connections that are to have access to the unit.

Enabling the access path to a particular host connection does not override previously enabled access paths. All access paths previously enabled are still valid; the new host connection is simply added to the list of connections that can access the unit.

Note: The procedure of restricting access by enabling all access paths then disabling selected paths is not recommended because of the potential data/security breach that occurs when a new host connection is added.


Restricting Host Access in Multiple-Bus Failover Mode

In multiple-bus mode, the units assigned to any port are visible to all ports. There are two ways to limit host access in multiple-bus failover mode:

- Enabling the access path of selected host connections
- Setting offsets

Enabling the Access Path of Selected Host Connections

Host access can be limited by enabling the access of certain host connections and disabling the access of others. This is done through the `ENABLE_ACCESS_PATH` and `DISABLE_ACCESS_PATH` switches of the `ADD UNIT` (or `SET unit`) commands. Access path is a unit switch, meaning it must be specified for each unit. Default access means that the unit is accessible to all hosts. It is important to remember that at least two paths between the unit and the host must be enabled in order for multiple-bus failover to work.

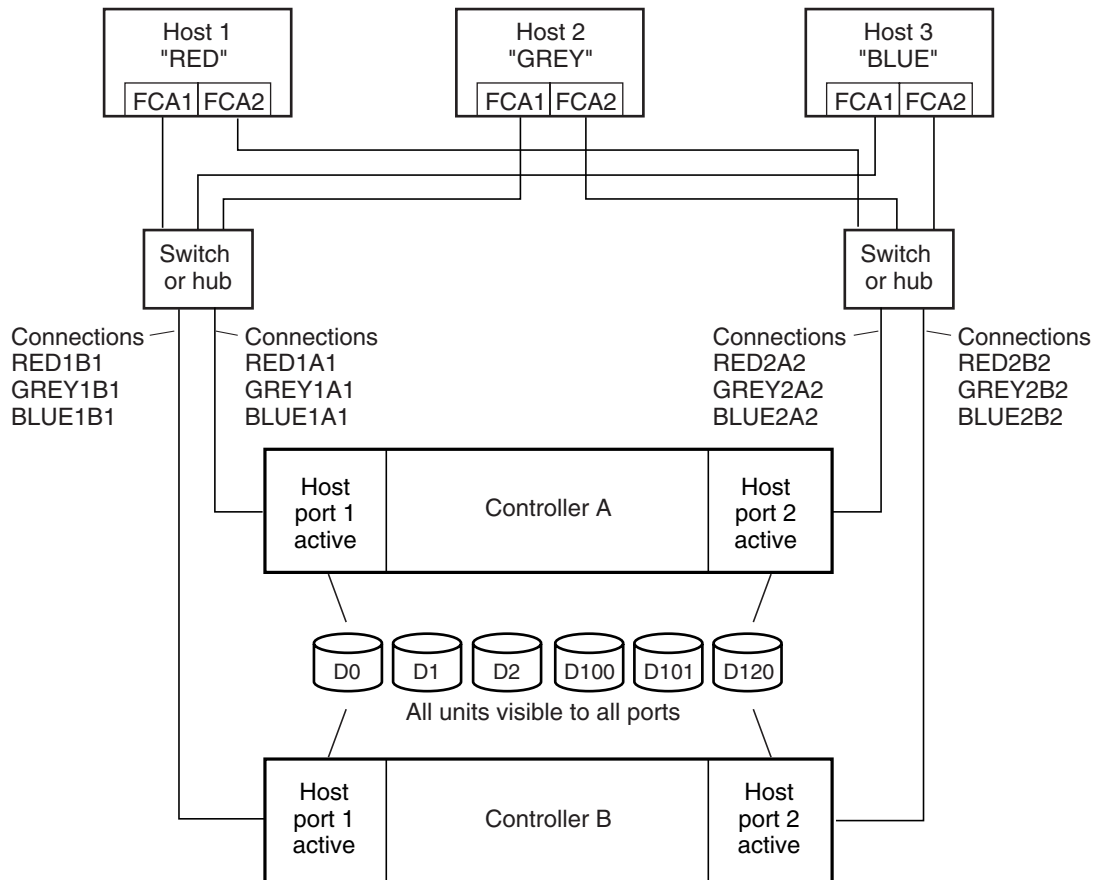

NOTE: FCA = Fibre Channel Adapter

CXO7078B

Figure 11: Limiting host access in multiple-bus failover mode

For example:

[Figure 11](#) shows a representative multiple-bus failover configuration. Restricting the access of unit D101 to host BLUE can be done by enabling only the connections to host BLUE. At least two connections must be enabled for

multiple-bus failover to work. For most operating systems, it is desirable to have all connections to the host enabled. To enable all connections for host BLUE, enter the following commands:

```
SET D101 DISABLE_ACCESS_PATH=ALL
```

```
SET D101 ENABLE_ACCESS_PATH=BLUE1A1, BLUE1B1, BLUE2A2, BLUE2B2
```

To enable only two connections for host BLUE (if it is a restriction of the operating system), select two connections that use different adapters, different switches or hubs, and different controllers:

```
SET D101 DISABLE_ACCESS_PATH=ALL
```

```
SET D101 ENABLE_ACCESS_PATH=(BLUE1A1, BLUE2B2)
```

or

```
SET D101 DISABLE_ACCESS_PATH=ALL
```

```
SET D101 ENABLE_ACCESS_PATH=(BLUE1B1, BLUE2A2)
```

If the storage subsystem has more than one host connection, the access path must be specified carefully to avoid giving undesirable host connections access to the unit. The default condition for a unit is that access paths to all host connections are enabled. To restrict host access to a set of host connections, specify `DISABLE_ACCESS_PATH=ALL` when the unit is added, then use the `SET unit` command to specify the set of host connections that are to have access to the unit.

Enabling the access path to a particular host connection does not override previously enabled access paths. All access paths previously enabled are still valid; the new host connection is simply added to the list of connections that can access the unit.

Note: The procedure of restricting access by enabling all access paths then disabling selected paths is not recommended because of the potential data/security breach that occurs when a new host connection is added.

Restricting Host Access by Offsets

Offsets establish the start of the range of units that a host connection can access. However, depending on the operating system, hosts that have lower offsets may be able to access the units in the specified range.

Note: All host connections to the same host computer must be set to the same offset.

For example:

In [Figure 11](#), assume all host connections initially have the default offset of 0. Giving all connections access to host BLUE, an offset of 120 will present unit D120 to host BLUE as LUN 0. Enter the following commands:

```
SET BLUE1A1 UNIT_OFFSET=120
SET BLUE1B1 UNIT_OFFSET=120
SET BLUE2A2 UNIT_OFFSET=120
SET BLUE2B2 UNIT_OFFSET=120
```

Host BLUE cannot see units lower than its offset, so it cannot access any other units. However, the other two hosts can still access D120 as LUN 20 if their operating system permits. To restrict access of D120 to only host BLUE, enable only host BLUE's access, as follows:

```
SET D120 DISABLE_ACCESS_PATH=ALL
SET D120 ENABLE_ACCESS_PATH=(BLUE1A1, BLUE1B1, BLUE12A2, BLUE2B2)
```

Note: StorageWorks recommends that you always provide access to only specific connections. This way, if new connections are added, they will not have automatic access to all units.

Note: “[Restricting Host Access by Disabling Access Paths](#)” on page 40.

Worldwide Names (Node IDs and Port IDs)

A worldwide name—also called a node ID—is a unique, 64-bit number assigned to a subsystem prior to shipping. The node ID belongs to the subsystem itself and never changes.

Each subsystem's node ID ends in zero, for example 5000-1FE1-FF0C-EE00. The controller port IDs are derived from the node ID.

In multiple-bus failover mode, each of the host ports has its own port ID:

- Controller B, port 1—worldwide name + 1, for example 5000-1FE1-FF0C-EE01
- Controller B, port 2—worldwide name + 2, for example 5000-1FE1-FF0C-EE02

- Controller A, port 1—worldwide name + 3, for example 5000-1FE1-FF0C-EE03
- Controller A, port 2—worldwide name + 4, for example 5000-1FE1-FF0C-EE04

Use the CLI command, `SHOW THIS_CONTROLLER/OTHER_CONTROLLER` to display the subsystem's worldwide name.

Restoring Worldwide Names (Node IDs)

If a situation occurs that requires you to restore the worldwide name, you can restore it using the worldwide name and checksum printed on the sticker on the frame into which the controller is inserted.

[Figure 12](#) shows the placement of the worldwide name label for the Model 2200 enclosure, and [Figure 13](#) for the BA370 enclosure.

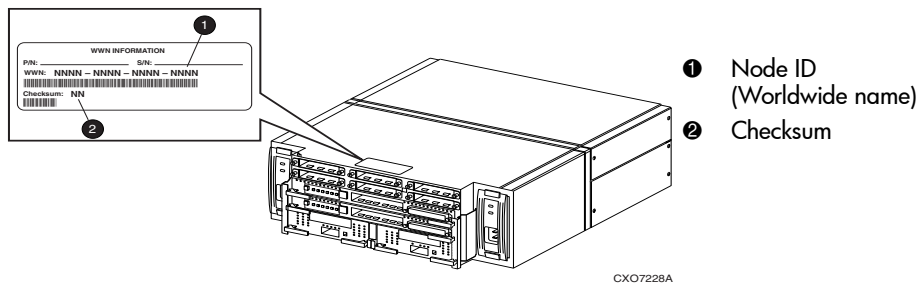


Figure 12: Placement of the worldwide name label on the Model 2200 enclosure

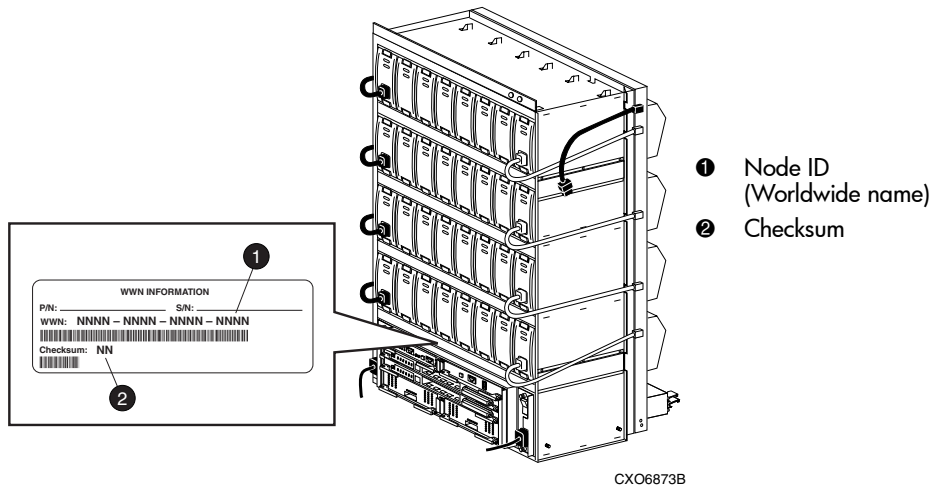


Figure 13: Placement of the worldwide name label on the BA370 enclosure



Caution: Each subsystem has its own unique worldwide name (node ID). If you attempt to set the subsystem worldwide name to a name other than the one that came with the subsystem, the data on the subsystem will not be accessible. Never set two subsystems to the same worldwide name, or data corruption will occur.

Unit Worldwide Names (LUN IDs)

In addition, each unit has its own worldwide name, or LUN ID. This is a unique, 128-bit value that the controller assigns at the time of unit initialization. It cannot be altered by the user but does change when the unit is reinitialized. Use the `SHOW` command to list the LUN ID.

Planning Storage Configurations

2

This chapter provides information to help you plan the storage configuration of your subsystem. Storage containers are individual disk drives (JBOD), storageset types (mirrorsets, stripesets, and so on), and/or partitioned drives. Use the guidelines found in this section to plan the various types of storage containers needed.

This chapter also focuses on the required design and implementation aspects, such as addressing conventions, configuration rules, creating storage profiles, and creating storage maps.

The following storage configuration information can be found in this chapter:

- [Where to Start](#), page 48
- [Determining Storage Requirements](#), page 49
- [Configuration Rules for the Controller](#), page 49
- [Addressing Conventions for Device PTL](#), page 50
- [Choosing a Container Type](#), page 60
- [Creating a Storageset Profile](#), page 63
- [Planning Considerations for Storageset](#), page 64
- [Changing Characteristics Through Switches](#), page 75
- [Specifying Storageset and Partition Switches](#), page 76
- [Specifying Initialization Switches](#), page 77
- [Specifying Unit Switches](#), page 81
- [Creating Storage Maps](#), page 81

Refer to Chapter 3 for instructions on how to prepare your host computer to accommodate the HSG80 controller storage subsystem.

Where to Start

The following procedure outlines the steps to follow when planning your storage configuration.

See Appendix A to locate the blank templates for keeping track of the containers being configured.

1. Determine your storage requirements. Use the questions in “[Determining Storage Requirements](#)” on page 49, to help you.
2. Review configuration rules. See “[Configuration Rules for the Controller](#)” on page 49.
3. Familiarize yourself with the current physical layout of the devices and their addressing scheme. See “[Addressing Conventions for Device PTL](#)” on page 50.
4. Choose the type of storage containers you need to use in your subsystem. See “[Choosing a Container Type](#)” on page 60, for a comparison and description of each type of storageset.
5. Create a storageset profile (described in “[Creating a Storageset Profile](#)” on page 63). Fill out the storageset profile while you read the sections that pertain to your chosen storage type:
 - [Planning Considerations for Storageset](#), page 64
 - [Mirrorset Planning Considerations](#), page 68
 - [RAIDset Planning Considerations](#), page 69
 - [Partition Planning Considerations](#), page 73
 - [Striped Mirrorset Planning Considerations](#), page 71
6. Decide which switches you need for your subsystem. General information on switches is detailed in “[Specifying Storageset and Partition Switches](#)” on page 76.
 - Determine the unit switches you want for your units (“[Specifying Unit Switches](#)” on page 81).
 - Determine the initialization switches you want for your planned storage containers (“[Specifying Initialization Switches](#)” on page 77).
7. Create a storage map (“[Creating Storage Maps](#)” on page 81).
8. Configure the storage you have now planned using one of the following methods:

- Use SWCC. See the SWCC documentation for details.
- Use the Command Line Interpreter (CLI) commands. This method allows you flexibility in defining and naming your storage containers. See the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

Determining Storage Requirements

It is important to determine your storage requirements. Here are a few of the questions you should ask yourself regarding the subsystem usage:

- What applications or user groups will access the subsystem? How much capacity do they need?
- What are the I/O requirements? If an application is data transfer-intensive, what is the required transfer rate? If it is I/O request-intensive, what is the required response time? What is the read/write ratio for a typical request?
- Are most I/O requests directed to a small percentage of the disk drives? Do you want to keep it that way or balance the I/O load?
- Do you store mission-critical data? Is availability the highest priority or would standard backup procedures suffice?

Configuration Rules for the Controller

The following list defines maximum configuration rules for the controller:

- 128 visible LUNs/200 assignable unit numbers
 - In SCSI-3 mode, if the CCL is enabled, the result is 126 visible LUNs and two CCLs.
- 1.024 TB storage set size
- 96 host connections
- 84 physical devices
- 20 RAID 3/5 storage sets
- 30 RAID 3/5 and RAID 1 storage sets (see note)
- 45 RAID 3/5, RAID 1, and RAID 0 storage sets (see note)

Note: For the previous two storage set configurations, this is a combined maximum, limited to no more than 20 RAID 3/5 storage sets in the individual combination.

- 8 partitions of a storage set or individual disk
 - 6 physical devices per RAID 1 storage set (mirror set)
 - 14 physical devices per RAID 3/5 storage set (RAID set)
 - 24 physical devices per RAID 0 storage set (stripe set)
 - 48 physical devices per RAID 0+1 storage set (striped mirror set)
 - 146 GB disks—the largest supported by the HSG60 and HSG80 storage array.
-

Tip: If you are redeploying disks that have been operating under a prior version of ACS into a newly established container, as a best practice, *always* initialize the devices and the new container before proceeding with subsystem activities to avoid operational and performance issues.

Note: HSG60 and HSG80 array controllers do not support greater than 146 GB. This restriction is enforced by the firmware.

Addressing Conventions for Device PTL

The HSG80 controller has six SCSI device ports, each of which connects to a SCSI bus. In dual-controller subsystems, these device buses are shared between the two controllers. (The *StorageWorks* Command Console calls the device ports “channels.”) The standard BA370 enclosure provides a maximum of four SCSI target identifications (ID) for each device port. If more target IDs are needed, expansion enclosures can be added to the subsystem. For an example of how units are mapped to physical disk drives, see [Figure 14](#).

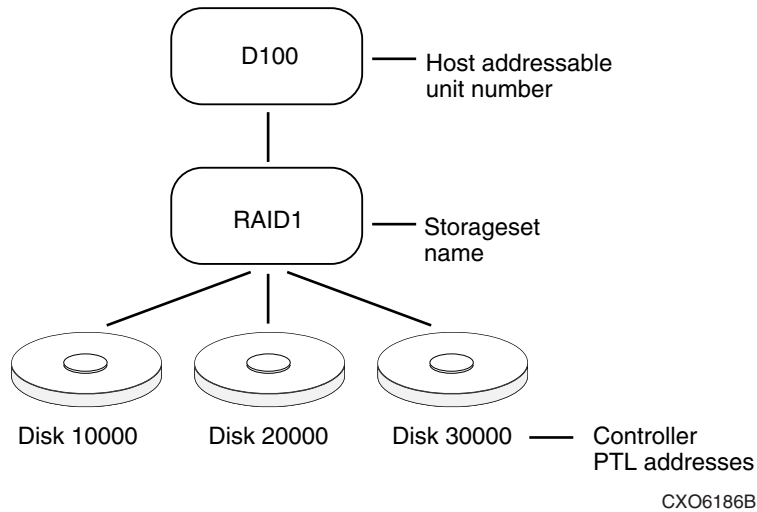


Figure 14: Mapping a unit to physical disk drives

The HSG80 controller identifies devices based on a Port-Target-LUN (PTL) numbering scheme, shown in [Figure 15](#). The physical location of a device in its enclosure determines its PTL.

- **P**—Designates the controller's SCSI device port number (1 through 6).
- **T**—Designates the target ID number of the device. Valid target ID numbers for a single-controller configuration and dual-redundant controller configuration are 0–3 and 8–15, respectively. (This applies to the BA370 cabinet only.)
- **L**—Designates the logical unit (LUN) of the device. For disk devices the LUN is always 0.

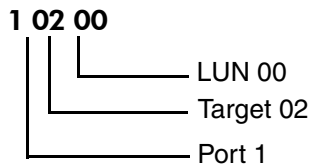


Figure 15: PTL naming convention

The controller can either operate with a BA370 enclosure or with a Model 2200 controller enclosure combined with Model 4214R, Model 4254, Model 4310R, Model 4350R, Model 4314R, or Model 4354R disk enclosures.

The controller operates with BA370 enclosures that are assigned ID numbers 0, 2, and 3. These ID numbers are set through the PVA module. Enclosure ID number 1, which assigns devices to targets 4 through 7, is not supported. Figure 16 shows how data is laid out on disks in an extended configuration.

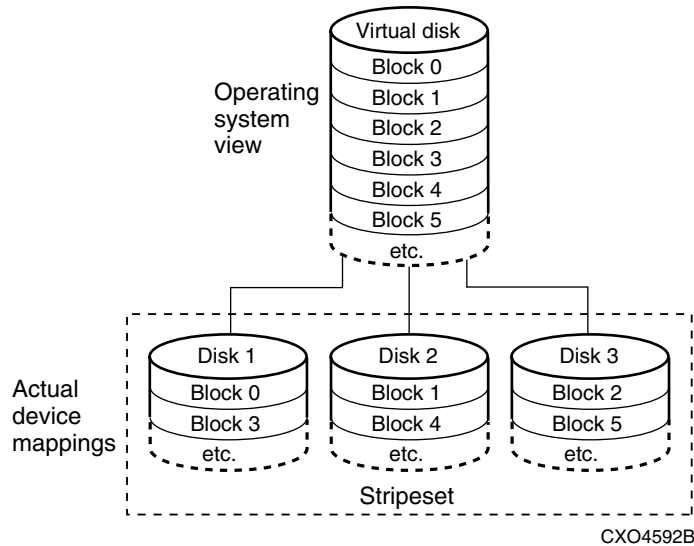


Figure 16: How data is laid out on disks in BA370 enclosure configuration

Examples - Model 2200 Storage Maps, PTL Addressing

The Model 2200 controller enclosure can be combined with the following:

- **Model 4214R disk enclosure** — Ultra2 SCSI with 14 drive bays, single-bus I/O module.
- **Model 4254 disk enclosure** — Ultra2 SCSI with 14 drive bays, dual-bus I/O module.

Note: The Model 4214R uses the same storage maps as the Model 4314R, and the Model 4254 uses the same storage maps as the Model 4354R disk enclosures.

- **Model 4310R disk enclosure** — Ultra3 SCSI with 10 drive bays, single-bus I/O module. [Table 4](#) shows the addresses for each device in a six-shelf, single-bus configuration. A maximum of six Model 4310R disk enclosures can be used with each Model 2200 controller enclosure.

Note: The storage map for the Model 4310R reflects the disk enclosure's physical location in the rack. Disk enclosures 6, 5, and 4 are stacked above the controller enclosure, and disk enclosures 1, 2, and 3 are stacked below the controller enclosure.

- **Model 4350R disk enclosure** — Ultra3 SCSI with 10 drive bays, single-bus I/O module. [Table 5](#) shows the addresses for each device in a three-shelf, single-bus configuration. A maximum of three Model 4350R disk enclosures can be used with each Model 2200 controller enclosure.
- **Model 4314R disk enclosure** — Ultra3 SCSI with 14 drive bays, single-bus I/O module. [Table 6](#) shows the addresses for each device in a six-shelf, single-bus configuration. A maximum of six Model 4314R disk enclosures can be used with each Model 2200 controller enclosure.

Note: The storage map for the Model 4314R reflects the disk enclosure's physical location in the rack. Disk enclosures 6, 5, and 4 are stacked above the controller enclosure, and disk enclosures 1, 2, and 3 are stacked below the controller enclosure.

- **Model 4354R disk enclosure** — Ultra3 SCSI with 14 drive bays, dual-bus I/O module. [Table 7](#) shows the addresses for each device in a three-shelf, dual-bus configuration. A maximum of three Model 4354R disk enclosures can be used with each Model 2200 controller enclosure.

Note: Appendix A contains storage set profiles you can copy and use to create your own system profiles. It also contains an enclosure template you can use to help you keep track of the location of devices and storage sets in your shelves.

Table 4: PTL addressing, single-bus configuration, six Model 4320R enclosures

Model 4310R Disk Enclosure Shelf 6 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800	Disk61000	Disk61100	Disk61200
Model 4310R Disk Enclosure Shelf 5 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk51000	Disk51100	Disk51200
Model 4310R Disk Enclosure Shelf 4 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk41000	Disk41100	Disk41200

Table 4: PTL addressing, single-bus configuration, six Model 4320R enclosures (Continued)

Model 4310R Disk Enclosure Shelf 1 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk11000	Disk11100	Disk11200
Model 4310R Disk Enclosure Shelf 2 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk21000	Disk21100	Disk21200
Model 4310R Disk Enclosure Shelf 3 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk31000	Disk31100	Disk31200

Table 5: PTL addressing, dual-bus configuration, three Model 4350R enclosures

Model 4350R Disk Enclosure Shelf 1 (Single-Bus)										
	SCSCSI Bus ASI Bus A					SCSI Bus B				
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	00	01	02	03	04
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400
Model 4350R Disk Enclosure Shelf 2 (Single-Bus)										
	SCSCSI Bus ASI Bus A					SCSI Bus B				
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	00	01	02	03	04
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400
Model 4350R Disk Enclosure Shelf 3 (Single-Bus)										
	SCSCSI Bus ASI Bus A					SCSI Bus B				
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	00	01	02	03	04
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400

Table 6: PTL addressing, single-bus configuration, six Model 4314R enclosures

Model 4314R Disk Enclosure Shelf 6 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800	Disk60900	Disk61000	Disk61100	Disk61200	Disk61300	Disk61400	Disk61500
Model 4314R Disk Enclosure Shelf 5 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk50900	Disk51000	Disk51100	Disk51200	Disk51300	Disk51400	Disk51500
Model 4314R Disk Enclosure Shelf 4 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk40900	Disk41000	Disk41100	Disk41200	Disk41300	Disk41400	Disk41500
Model 4314R Disk Enclosure Shelf 1 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk10900	Disk11000	Disk11100	Disk11200	Disk11300	Disk11400	Disk11500

Table 6: PTL addressing, single-bus configuration, six Model 4314R enclosures (Continued)

Model 4314R Disk Enclosure Shelf 2 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk20900	Disk21000	Disk21100	Disk21200	Disk21300	Disk21400	Disk21500

Model 4314R Disk Enclosure Shelf 3 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk30900	Disk31000	Disk31100	Disk31200	Disk31300	Disk31400	Disk31500

Table 7: PTL addressing, dual-bus configuration, three Model 4354A enclosures

Model 4354R Disk Enclosure Shelf 1 (Dual-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800

Model 4354R Disk Enclosure Shelf 2 (Dual-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08

Table 7: PTL addressing, dual-bus configuration, three Model 4354A enclosures (Continued)


DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800
Model 4354R Disk Enclosure Shelf 3 (Dual-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800

Choosing a Container Type

Different applications may have different storage requirements. You probably want to configure more than one kind of container within your subsystem.

In choosing a container, you choose between independent disks (JBODs) or one of several storageset types, as shown in [Figure 17](#). The independent disks and the selected storageset may also be partitioned.

The storagesets implement RAID (Redundant Array of Independent Disks) technology. Consequently, they all share one important feature: each storageset, whether it contains two disk drives or ten, looks like one large, virtual disk drive to the host.

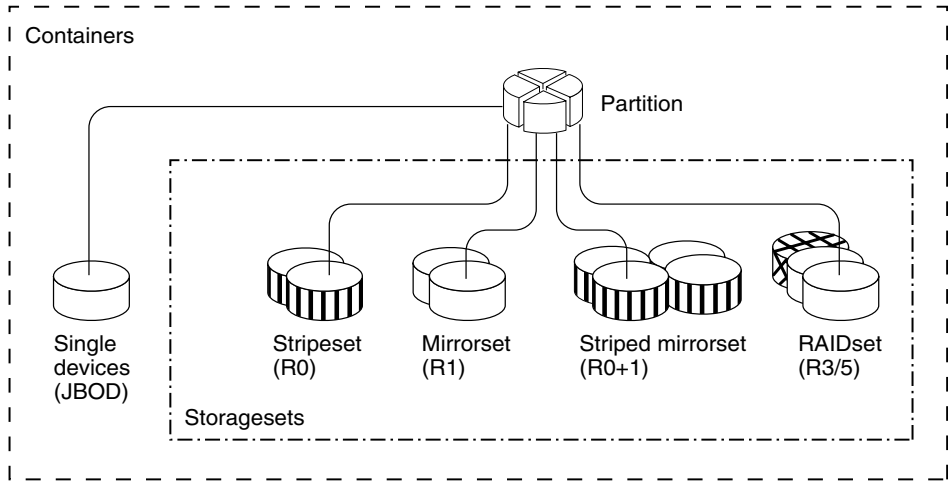

CXO6677A

Figure 17: Storage container types

Table 8 compares the different kinds of containers to help you determine which ones satisfy your requirements.

Table 8: Comparison of Container Types

Container Name	Relative Availability	Request Rate (Read/Write) I/O Per Second	Transfer Rate (Read/Write) MB per second	Applications
Independent disk drives (JBOD)	Equal to number of JBOD disk drives	Comparable to single disk drive	Comparable to single disk drive	—
Stripeset (RAID 0)	Proportionate to number of disk drives; worse than single disk drive	Excellent if used with large chunk size	Excellent if used with small chunk size	High performance for non-critical data
Mirrorset (RAID 1)	Excellent	Good/Fair	Good/Fair	System drives; critical files
RAIDset (RAID 3/5)	Excellent	Excellent/good	Read: excellent (if used with small chunk sizes) Write: good (if used with small chunk sizes)	High request rates, read-intensive, data lookup
Striped Mirrorset (RAID 0+1)	Excellent	Excellent if used with large chunk size	Excellent if used with small chunk size	Any critical response-time application

For a comprehensive discussion of RAID, refer to *The RAIDBOOK—A Source Book for Disk Array Technology*.

Creating a Storageet Profile

Creating a profile for your storageets, partitions, and devices can simplify the configuration process. Filling out a storageet profile helps you choose the storageets that best suit your needs and to make informed decisions about the switches you can enable for each storageet or storage device that you configure in your subsystem.

For an example of a storageet profile, see [Table 9](#). This table contains blank profiles that you can copy and use to record the details for your storageets. Use the information in this chapter to help you make decisions when creating storageet profiles.

Table 9: Example of Storageet Profile

Type of Storageet:

<input type="checkbox"/> Mirrorset	<input checked="" type="checkbox"/> RAIDset	<input type="checkbox"/> Stripeset	<input type="checkbox"/> Striped	<input type="checkbox"/> JBOD
Mirrorset				
Storageet Name <i>RL</i> . Disk Drives <i>D10300, D20300, D10400, D20400</i>				
Unit Number <i>D101</i>				

Partitions:

%	%	%	%	%	%	%	%
---	---	---	---	---	---	---	---

RAIDset Switches:

<input checked="" type="checkbox"/> Normal (default)	<input checked="" type="checkbox"/> No (default)	<input checked="" type="checkbox"/> Best performance (default)
<input type="checkbox"/> Fast	<input type="checkbox"/> Yes, missing:	<input type="checkbox"/> Best fit
		<input type="checkbox"/> None

Mirrorset Switches:

<input type="checkbox"/> Best performance (default)	<input type="checkbox"/> Normal (default)	<input type="checkbox"/> Least busy (default)
<input type="checkbox"/> Best fit	<input type="checkbox"/> Fast	<input type="checkbox"/> Round robin
<input type="checkbox"/> None		<input type="checkbox"/> Disk drive:

Initialize Switches:

<input checked="" type="checkbox"/> Automatic (default)	<input type="checkbox"/> No (default)	<input checked="" type="checkbox"/> Destroy (default)
<input type="checkbox"/> 64 blocks	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Retain
<input type="checkbox"/> 128 blocks		
<input type="checkbox"/> 256 blocks		

Unit Switches:

Read caching	<input checked="" type="checkbox"/> ALL
Read-ahead caching	<input type="checkbox"/>
Write-back caching	<input checked="" type="checkbox"/>
Write-through caching	<input type="checkbox"/>

Planning Considerations for Storageset

This section contains the guidelines for choosing the storageset type needed for your subsystem:

- [Stripeset Planning Considerations](#), page 64
- [Mirrorset Planning Considerations](#), page 68
- [RAIDset Planning Considerations](#), page 69
- [Striped Mirrorset Planning Considerations](#), page 71
- [Storageset Expansion Considerations](#), page 73
- [Partition Planning Considerations](#), page 73

Stripeset Planning Considerations

Stripesets (RAID 0) enhance I/O performance by spreading the data across multiple disk drives. Each I/O request is broken into small segments called “chunks.” These chunks are then simultaneously “striped” across the disk drives in the storageset, thereby enabling several disk drives to participate in one I/O request.

For example, in a three-member stripeset that contains disk drives Disk 10000, Disk 20000, and Disk 10100, the first chunk of an I/O request is written to Disk 10000, the second to Disk 20000, the third to Disk 10100, the fourth to Disk 10000, until all of the data has been written to the drives ([Figure 18](#)).

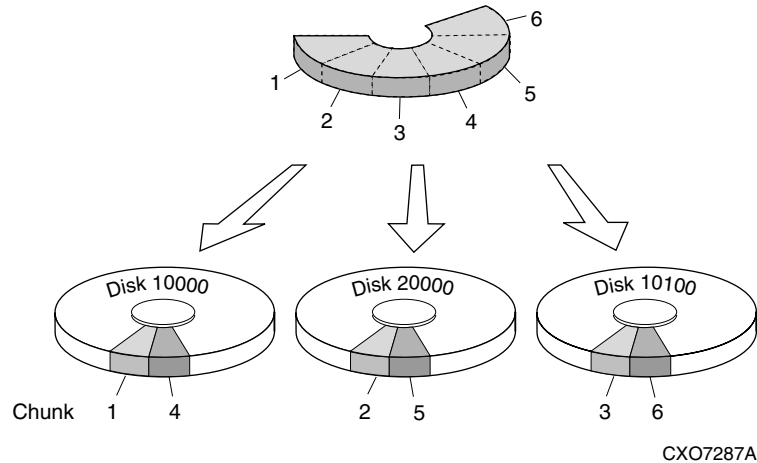


Figure 18: Three-member RAID 0 stripeset (example 1)

The relationship between the chunk size and the average request size determines if striping maximizes the request rate or the data-transfer rate. You can set the chunk size or use the default setting (see “[Chunk Size](#)” on page 77, for information about setting the chunk size). [Figure 19](#) shows another example of a three-member RAID 0 stripeset.

A major benefit of striping is that it balances the I/O load across all of the disk drives in the storage set. This can increase the subsystem performance by eliminating the hot spots (high localities of reference) that occur when frequently accessed data becomes concentrated on a single disk drive.

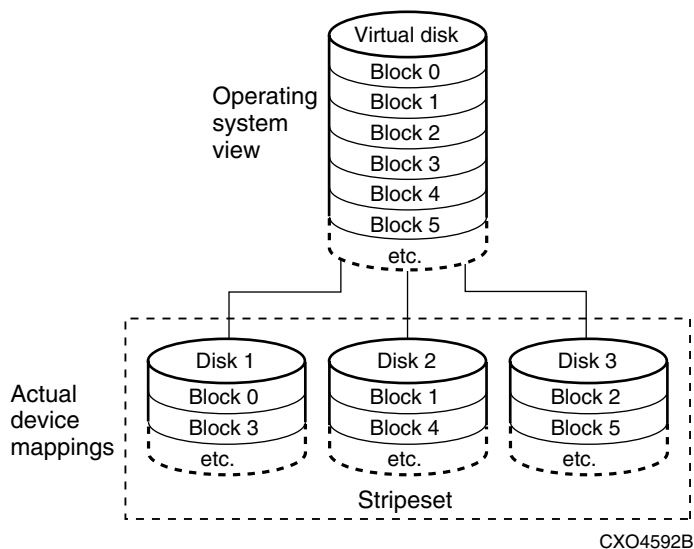


Figure 19: Three-member RAID 0 stripeset (example 2)

Keep the following points in mind as you plan your stripesets:

- Reporting methods and size limitations prevent certain operating systems from working with large stripesets.
- A storageset should only contain disk drives of the same capacity. The controller limits the effective capacity of each member to the capacity of the smallest member in the storageset (base member size) when the storageset is initialized. Thus, if you combine 9 GB disk drives with 4 GB disk drives in the same storageset, you waste 5 GB of capacity on each 9 GB member.

If you need high performance and high availability, consider using a RAIDset, striped-mirrorset, or a host-based shadow of a stripeset.

- Striping does not protect against data loss. In fact, because the failure of one member is equivalent to the failure of the entire stripeset, the likelihood of losing data is higher for a stripeset than for a single disk drive.

For example, if the mean time between failures (MTBF) for a single disk is 1 hour, then the MTBF for a stripeset that comprises N such disks is 1/N hours. As another example, if the MTBF of a single disk is 150,000 hours (about 17 years), a stripeset comprising four of these disks would only have an MTBF of slightly more than 4 years.


For this reason, you should avoid using a stripeset to store critical data. Stripesets are more suitable for storing data that can be reproduced easily or whose loss does not prevent the system from supporting its critical mission.

- Evenly distribute the members across the device ports to balance the load and provide multiple paths.
- Stripesets may contain between two and 24 members.
- If you plan to use mirror members to replace failing drives, then create the original stripeset as a stripeset of 1-member mirrorsets.
- Stripesets are well-suited for the following applications:
 - Storing program image libraries or run-time libraries for rapid loading.
 - Storing large tables or other structures of read-only data for rapid application access.
 - Collecting data from external sources at very high data transfer rates.
- Stripesets are not well-suited for the following applications:
 - A storage solution for data that cannot be easily reproduced or for data that must be available for system operation.
 - Applications that make requests for small amounts of sequentially located data.
 - Applications that make synchronous random requests for small amounts of data.

Spread the member drives as evenly as possible across the six I/O device ports.


Mirrorset Planning Considerations

Mirrorsets (RAID 1) use redundancy to ensure availability, as illustrated in [Figure 20](#). For each primary disk drive, there is at least one mirror disk drive. Thus, if a primary disk drive fails, its mirror drive immediately provides an exact copy of the data. [Figure 21](#) shows a second example of a Mirrorset.

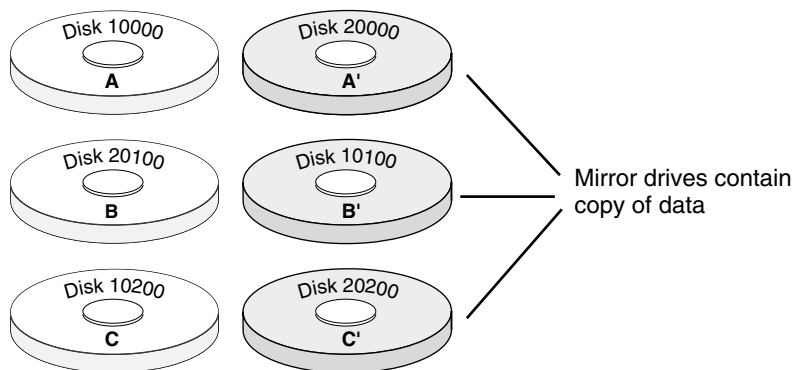

CXO7288A

Figure 20: Mirrorsets maintain two copies of the same data (example 1)

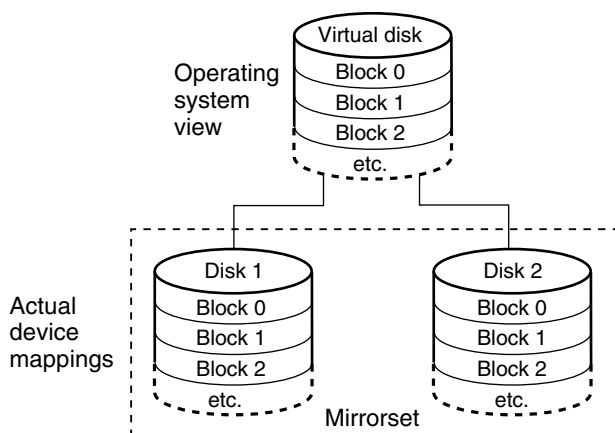

CXO4594B

Figure 21: Mirrorset (example 2)

Keep these points in mind when planning mirrorsets

- Data availability with a mirrorset is excellent but comes with a higher cost—you need twice as many disk drives to satisfy a given capacity requirement. If availability is your top priority, consider using dual-redundant controllers and redundant power supplies.
- You can configure up to a maximum of 20 RAID 3/5 mirrorsets per controller or pair of dual-redundant controllers. Each mirrorset may contain up to 6 members. Refer to [“Configuration Rules for the Controller”](#) on page 49, for detailed information on maximum numbers. 30 RAID 3/5 and RAID 1 mirrorsets are permitted, however, there is limit of no more than 20 RAID 3/5 mirrorsets in such a configuration.
- Both write-back cache modules must be the same size.
- A mirrorset should only contain disk drives of the same capacity.
- Spread mirrorset members across different device ports (drive bays).
- Mirrorsets are well-suited for the following:
 - Any data for which reliability requirements are extremely high
 - Data to which high-performance access is required
 - Applications for which cost is a secondary issue
- Mirrorsets are not well-suited for the following applications:
 - Write-intensive applications (a performance hit of 10 percent will occur)
 - Applications for which cost is a primary issue

RAIDset Planning Considerations

RAIDsets (RAID 3/5) are enhanced stripesets—they use striping to increase I/O performance and distributed-parity data to ensure data availability. [Figure 22](#) shows an example of a RAIDset that uses five members.

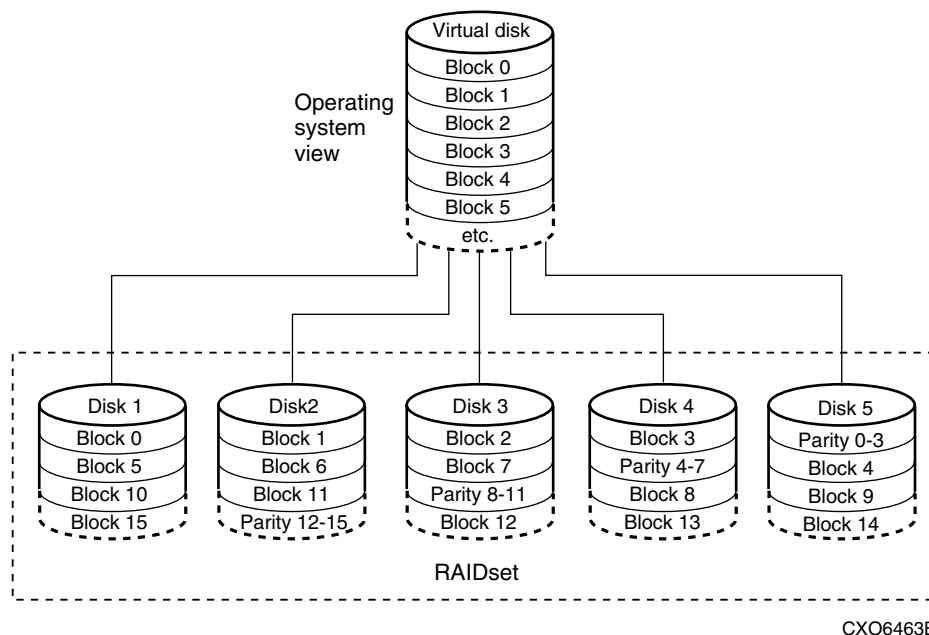


Figure 22: Five-member RAIDset using parity

RAIDsets are similar to stripesets in that the I/O requests are broken into smaller “chunks” and striped across the disk drives. RAIDsets also create chunks of parity data and stripe them across all the members of the RAIDset. Parity data is derived mathematically from the I/O data and enables the controller to reconstruct the I/O data if a single disk drive fails. Thus, it becomes possible to lose a disk drive without losing access to the data it contained. Data could be lost if a second disk drive fails before the controller replaces the first failed disk drive and reconstructs the data.

The relationship between the chunk size and the average request size determines if striping maximizes the request rate or the data-transfer rates. You can set the chunk size or use the default setting. See “[Chunk Size](#)” on page 77, for information about setting the chunk size.

Keep these points in mind when planning RAIDsets

- Reporting methods and size limitations prevent certain operating systems from working with large RAIDsets.
- Both cache modules must be the same size.

- A RAIDset must include at least 3 disk drives, but no more than 14.
- A storageset should only contain disk drives of the same capacity. The controller limits the capacity of each member to the capacity of the smallest member in the storageset. Thus, if you combine 9 GB disk drives with 4 GB disk drives in the same storageset, you waste 5 GB of capacity on each 9 GB member.
- RAIDsets are particularly well-suited for the following:
 - Small to medium I/O requests
 - Applications requiring high availability
 - High read request rates
 - Inquiry-type transaction processing
- RAIDsets are not particularly well-suited for the following:
 - Write-intensive applications
 - Database applications in which fields are continually updated
 - Transaction processing

Striped Mirrorset Planning Considerations

Striped mirrorsets (RAID 0+1) are a configuration of stripesets whose members are also mirrorsets ([Figure 23](#)). Consequently, this kind of storageset combines the performance of striping with the reliability of mirroring. The result is a storageset with very high I/O performance and high data availability. [Figure 24](#) shows a second example of a striped mirrorset using six members.

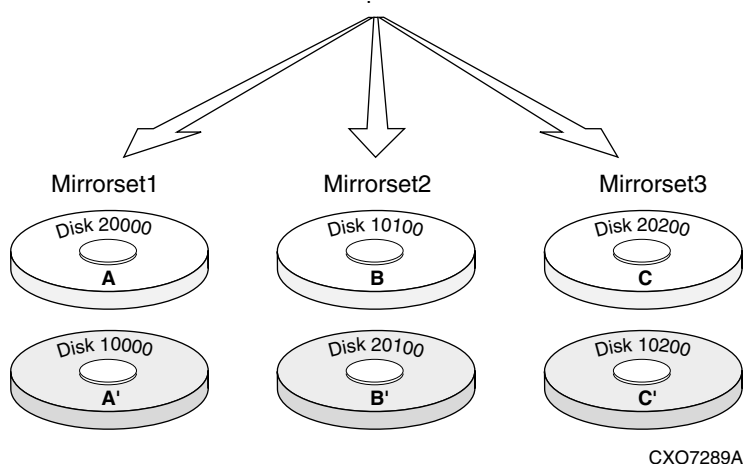


Figure 23: Striped mirrorset (example 1)

The failure of a single disk drive has no effect on the ability of the storageset to deliver data to the host. Under normal circumstances, a single disk drive failure has very little effect on performance. Because striped mirrorsets do not require any more disk drives than mirrorsets, this storageset is an excellent choice for data that warrants mirroring.

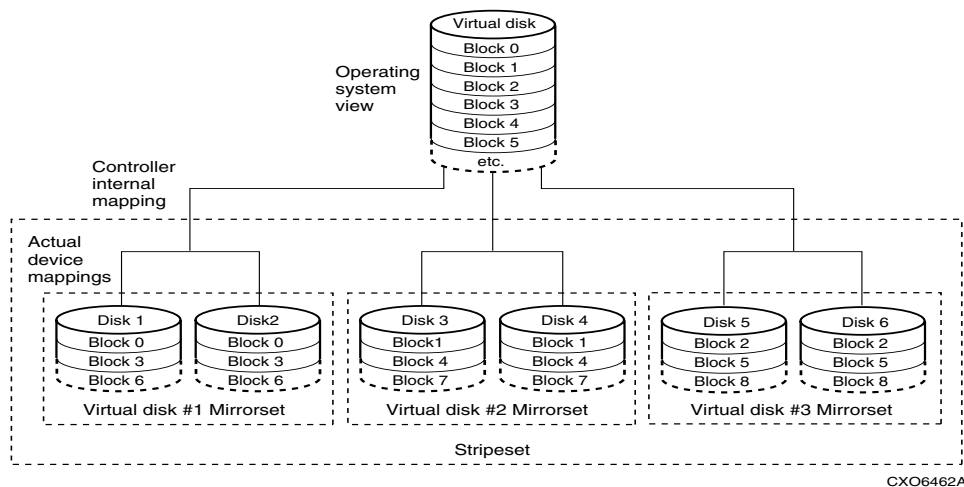


Figure 24: Striped mirrorset (example 2)

Plan the mirrorset members, and plan the stripeset that will contain them. Review the recommendations in “[Planning Considerations for Storageset](#)” on page 64, and “[Mirrorset Planning Considerations](#)” on page 68.

Storageset Expansion Considerations

Storageset Expansion allows for the joining of two of the same kind of storage containers by concatenating RAIDsets, stripesets, or individual disks, thereby forming a larger virtual disk, which is presented as a single unit. The *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* describes the CLI command, ADD CONCATSETS, which is used to perform concatenation.



Caution: Use the ADD CONCATSETS command only with host operating systems that support dynamic volume expansion. Use of this command could result in inaccessible data, if the operating system cannot handle one of its disks increasing in size.

Partition Planning Considerations

Use partitions to divide a container (storageset or individual disk drive) into smaller pieces, each of which can be presented to the host as its own storage unit. [Figure 25](#) shows the conceptual effects of partitioning a single-disk container.

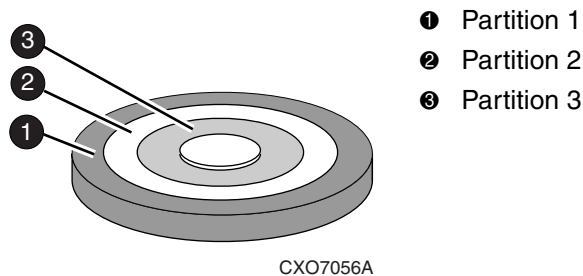


Figure 25: One example of a partitioned single-disk unit

You can create up to eight partitions per storageset (disk drive, RAIDset, mirrorset, stripeset, or striped mirrorset). Each partition has its own unit number so that the host can send I/O requests to the partition just as it would to any

unpartitioned storage set or device. Partitions are separately addressable storage units; therefore, you can partition a single storage set to service more than one user group or application.

Defining a Partition

Partitions are expressed as a percentage of the storage set or single disk unit that contains them:

- Mirror sets and single disk units—the controller allocates the largest whole number of blocks that are equal to or less than the percentage you specify.
- RAID sets and stripe sets—the controller allocates the largest whole number of stripes that are less than or equal to the percentage you specify.
 - Stripe sets—the stripe size = chunk size × number of members.
 - RAID sets—the stripe size = chunk size × (number of members minus 1)

An unpartitioned storage unit has more capacity than a partition that uses the whole unit because each partition requires a small amount of disk space for metadata.

Guidelines for Partitioning Storage Sets and Disk Drives

Keep these points in mind when planning partitions for storage sets and disks:

- Each storage set or disk drive may have up to eight partitions.
- In transparent failover mode, all partitions of a particular container must be on the same host port. Partitions cannot be split across host ports.
- In multiple-bus failover mode, all the partitions of a particular container must be on the same controller. Partitions cannot be split across controllers.
- Partitions cannot be combined into storage sets. For example, you cannot divide a disk drive into three partitions, then combine those partitions into a RAID set.
- Just as with storage sets, you do not have to assign unit numbers to partitions until you are ready to use them.
- The CLONE utility cannot be used with partitioned mirror sets or partitioned stripe sets. (See [“Creating Clones for Backup”](#) on page 167 for details about cloning.)

Changing Characteristics Through Switches

CLI command switches allow the user another level of command options. There are three types of switches that modify the storageset and unit characteristics:

- Storageset switches
- Initialization switches
- Unit switches

The following sections describe how to enable/modify switches. They also contain a description of the major CLI command switches.

Enabling Switches

If you use SWCC to configure the device or storageset, you can set switches from SWCC during the configuration process, and SWCC automatically applies them to the storageset or device. See the SWCC online help for information about using SWCC.

If you use CLI commands to configure the storageset or device manually, the configuration procedure found in Chapter 5 of this guide will show you when and how to enable each switch. The *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* contains the details of the CLI commands and their switches.

Changing Switches

You can change the RAIDset, mirrorset, device, and unit switches at any time. You cannot change the initialize switches without destroying data on the storageset or device. These switches are integral to the formatting and can only be changed by re-initializing the storageset.



Caution: Initializing a storageset is similar to formatting a disk drive; all data is destroyed during this procedure.

Specifying StorageSet and Partition Switches

The characteristics of a particular storageSet can be set by specifying switches when the storageSet is added to the controllers' configuration. Once a storageSet has been added, the switches can be changed by using a SET command. Switches can be set for partitions and the following types of storageSets:

- RAIDset
- Mirrorset

Stripesets have no specific switches associated with their ADD and SET commands.

RAIDset Switches

Use the following types of switches to control how a RAIDset ensures data availability:

- Replacement policy
- Reconstruction policy
- Remove/replace policy

For details on the use of these switches, refer to SET RAIDSET and SET *RAIDset-name* commands in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

Mirrorset Switches

Use the following switches to control how a mirrorset behaves to ensure data availability:

- Replacement policy
- Copy speed
- Read source
- Membership

For details on the use of these switches, refer to ADD MIRRORSET and SET *mirrorset-name* commands in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

Partition Switches

The following switches are available when creating a partition:

- Size
- Geometry

For details on the use of these switches, refer to `CREATE_PARTITION` command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

Specifying Initialization Switches

Initialization switches set characteristics for established storagesets before they are made into units. The following kinds of switches effect the format of a disk drive or storageset:

- Chunk Size (for stripesets and RAIDsets only)
- Save Configuration
- Destroy/Nodeestroy
- Geometry

Each of these switches is described in the following sections.

Note: After initializing the storageset or disk drive, you cannot change these switches without reinitializing the storageset or disk drive.

Chunk Size

With ACS software, a parameter for chunk size (`chunksize=default` or `n`) on some storagesets can be set. However, unit performance may be negatively impacted if a non-default value is selected as the `chunksize`.

If a non-default chunk size has been calculated, verify that the chunk size value is divisible by 8, with no remainder. If the value is not aligned with this rule, adjust the chunk size value upward until it is divisible by 8, with no remainder.

Specify the chunk size of the data to be stored to control the `stripesize` used in RAIDsets and stripesets:

- `CHUNKSIZE=DEFAULT` lets the controller set the chunk size based on the number of disk drives (`d`) in a stripeset or RAIDset. If number of drives is less or equal to 9, then chunk size = 256. If the number of drives is greater than 9, then chunk size = 128.

- `CHUNKSIZE=n` lets you specify a chunk size in blocks. The relationship between chunk size and request size determines whether striping increases the request rate or the data-transfer rate.

Increasing the Request Rate

A large chunk size (relative to the average request size) increases the request rate by enabling multiple disk drives to respond to multiple requests. If one disk drive contains all of the data for one request, then the other disk drives in the storageset are available to handle other requests. Thus, separate I/O requests can be handled in parallel, which increases the request rate. This concept is shown in [Figure 26](#).

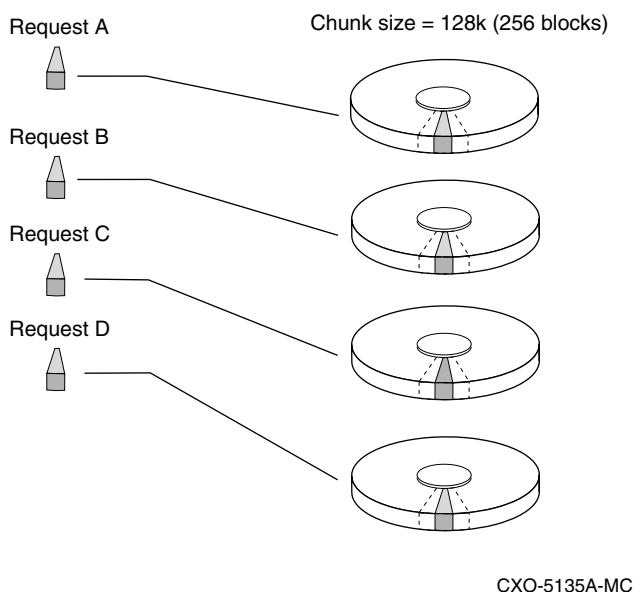


Figure 26: Large chunk size increases request rate

Large chunk sizes also tend to increase the performance of random reads and writes. HP recommends that you use a chunk size of 10 to 20 times the average request size, rounded to the closest prime number. In general, 113 works well for OpenVMS systems with a transfer size of 8 sectors.

To calculate the chunk size that should be used for your subsystem, you must first analyze the types of requests that are being made to the subsystem:

- Many parallel I/Os that use a small area of disk should use a chunk size of 10 times the average transfer request rate.

- Random I/Os that are scattered over all the areas of the disks should use a chunk size of 20 times the average transfer request rate. If you do not know, then you should use a chunk size of 15 times the average transfer request rate.
- If you have mostly sequential reads or writes (like those needed to work with large graphic files), make the chunk size for RAID 0 and RAID 0+1 a small number (for example: 67 sectors). For RAID 5, make the chunk size a relatively large number (for example: 253 sectors).

Table 10 shows a few examples of chunk size selection.

Table 10: Example Chunk Sizes

Transfer Size (KB)	Small Area of I/O Transfers	Unknown	Random Areas of I/O Transfers
2	41	59	79
4	79	113	163
8	157	239	317

Increasing Sequential Data Transfer Performance

RAID 0 and RAID 0+1 sets intended for high data transfer rates should use a relatively low chunk size (for example: 67 sectors). RAID 5 sets intended for high data rate performance should use a relatively large number (for example: 253 sectors).

Save Configuration

The `SAVE_CONFIGURATION` switch is for a **single-controller configuration only**. This switch reserves an area on each of the disks for the container being initialized. The controller can write subsystem configuration data on this area. If the controller is replaced, the new controller can read the subsystem configuration from the reserved areas of disks.

If you specify `SAVE_CONFIGURATION` for a multi-device storageset, such as a stripeset, the complete subsystem configuration is periodically written on each disk in the storageset.

The `SHOW DEVICES FULL` command shows which disks are used to backup configuration information.

Note: DO NOT use `SAVE_CONFIGURATION` in dual redundant controller installations. It is not supported and may result in unexpected controller behavior.

Note: HP recommends that you do not use `SAVE_CONFIGURATION` on every unit and device on the controller.

Destroy/Nodestroy

Specify whether to destroy or retain the user data and metadata when a disk is initialized after it has been used in a mirrorset or as a single-disk unit.

Note: The `DESTROY` and `NODESTROY` switches are only valid for mirrorsets and striped mirrorsets.

- `DESTROY` (default) overwrites the user data and forced-error metadata when a disk drive is initialized.
- `NODESTROY` preserves the user data and forced-error metadata when a disk drive is initialized. Use `NODESTROY` to create a single-disk unit from any disk drive that has been used as a member of a mirrorset. See the `REDUCED` command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for information on removing disk drives from a mirrorset.

`NODESTROY` is ignored for members of a RAIDset.

Geometry

The geometry parameters of a storageset can be specified. The geometry switches are:

- `CAPACITY`—the number of logical blocks. The range is from 1 to the maximum container size.
- `CYLINDERS`—the number of cylinders used. The range is from 1 to 16777215.
- `HEADS`—the number of disk heads used. The range is from 1 to 255.

- `SECTORS_PER_TRACK`—the number of sectors per track used. The range is from 1 to 255.

Specifying Unit Switches

Several switches control the characteristics of units. The unit switches are described under the `SET unit-number` command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

One unit switch, `ENABLE/DISABLE_ACCESS_PATH`, determines which host connections can access the unit, and it is described in the larger topic of matching units to specific hosts. This topic is described in Chapter 1, “[Assigning Unit Numbers](#)” on page 36.

Creating Storage Maps

Configuring a subsystem will be easier if you know how the storagesets, partitions, and JBODs correspond to the disk drives in your subsystem. You can more easily see this relationship by creating a hardcopy representation, also known as a storage map.

To make a storage map, fill out the templates provided in Appendix A as you add storagesets, partitions, and JBOD disks to the configuration and assign them unit numbers. Label each disk drive in the map with the higher levels it is associated with, up to the unit level.

Using LOCATE Command to Find Devices

If you want to complete a storage map at a later time but do not remember where the disk drives and partitions are located, use the CLI command `LOCATE`. The `LOCATE` command flashes the (fault) LED on the drives associated with the specific storageset or unit. To turn off the flashing LEDs, enter the CLI command `LOCATE CANCEL`.

The following procedure is an example of the commands to locate all the disk drives that make up unit D104:

1. Enter the following command:

```
LOCATE D104
```

The LEDs on the disk drives that make up unit D104 will flash.

2. Note the position of all the drives contained within D104.
3. Enter the following command to turn off the flashing LEDs:

```
LOCATE CANCEL
```

The following procedure is an example command to locate all the drives that make up RAIDset R1:

1. Enter the following command:
2. Note the position of all the drives contained within R1.
3. Enter the following command to turn off the flashing LEDs:

```
LOCATE CANCEL
```

Example Storage Map—Model 4310R Disk Enclosure

Table 11 shows an example of four Model 4310R disk enclosures (single-bus I/O).

Table 11: Model 4310 disk enclosure, example of storage map

Model 4310R Disk Enclosure Shelf 4 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
	D100 R1	D101 S1 M2	D103 M4	D105	D107	D108 S3	D1 S4 M6	D2 R3	D3 S5	spare
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk41000	Disk41100	Disk41200
Model 4310R Disk Enclosure Shelf 1 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
	D100 R1	D101 S1 M1	D102 M3	D104 S2	D106 R2	D108 S3	D1 S4 M5	D2 R3	D3 S5	D4 M7
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk11000	Disk11100	Disk11200

Table 11: Model 4310 disk enclosure, example of storage map (Continued)

Model 4310R Disk Enclosure Shelf 2 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
	D100 R1	D101 S1 M1	D102 M3	D104 S2	D106 R2	D108 S3	D1 S4 M5	D2 R3	D3 S5	D4 M7
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk21000	Disk21100	Disk21200
Model 4310R Disk Enclosure Shelf 3 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
	D100 R1	D101 S1 M2	D103 M4	D104 S2	D106 R2	D108 S3	D1 S4 M6	D2 R3	D3 S5	spare
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk31000	Disk31100	Disk31200

The following notes describe the information contained in [Table 11](#):

- Unit D100 is a 4-member RAID 3/5 storageset named R1. R1 consists of Disk10000, Disk20000, Disk30000, and Disk40000.
- Unit D101 is a 2-member striped mirrorset named S1. S1 consists of M1 and M2:
 - M1 is a 2-member mirrorset consisting of Disk10100 and Disk20100.
 - M2 is a 2-member mirrorset consisting of Disk30100 and Disk40100.
- Unit D102 is a 2-member mirrorset named M3. M3 consists of Disk10200 and Disk20200.

- Unit D103 is a 2-member mirrorset named M4. M4 consists of Disk30200 and Disk40200.
- Unit D104 is 3-member stripeset named S2. S2 consists of Disk10300, Disk20300, and Disk30300.
- Unit D105 is a single (JBOD) disk named Disk40300.
- Unit D106 is a 3-member RAID 3/5 storage set named R2. R2 consists of Disk10400, Disk20400, and Disk30400.
- Unit D107 is a single (JBOD) disk named Disk40400.
- Unit D108 is a 4-member stripeset named S3. S3 consists of Disk10500, Disk20500, Disk30500, and Disk40500.
- Unit D1 is a 2-member striped mirrorset named S4. S4 consists of M4 and M5:
 - M5 is a 2-member mirrorset consisting of Disk10800 and Disk20800.
 - M6 is a 2-member mirrorset consisting of Disk30800 and Disk40800.
- Unit D2 is a 4-member RAID 3/5 storage set named R3. R3 consists of Disk11000, Disk21000, Disk31000, and Disk41000.
- Unit D3 is a 4-member stripeset named S5. S5 consists of Disk11100, Disk21100, Disk31100, and Disk41100.
- Unit D4 is a 2-member mirrorset named M7. M7 consists of Disk11200 and Disk21200.
- Disk31200 and Disk41200 are spareset members.

Preparing the Host System

3

This chapter describes how to prepare your OpenVMS host computer to accommodate the HSG80 controller storage subsystem.

The following information is included in this chapter:

- [Making a Physical Connection](#), page 92
- [New Features, ACS 8.8 for OpenVMS](#), page 95

Refer to Chapter 4 for instructions on how to install and configure the HSG Agent. The Agent for HSG is operating system-specific and polls the storage.

Installing RAID Array Storage System



WARNING: A shock hazard exists at the backplane when the controller enclosure bays or cache module bays are empty.

Be sure the enclosures are empty, then mount the enclosures into the rack. DO NOT use the disk enclosure handles to lift the enclosure. The handles cannot support the weight of the enclosure. Only use these handles to position the enclosure in the mounting brackets.

Use two people to lift, align, and install any enclosure into a rack. Failure to use two people might cause personal injury and/or equipment damage.



Caution: Controller and disk enclosures have no power switches. Make sure the controller enclosures and disk enclosures are physically configured before turning the PDU on and connecting the power cords. Failure to do so can cause equipment damage.

1. Be sure the enclosures are empty before mounting them into the rack. If necessary, remove the following elements from the controller enclosure:

- Environmental Monitoring Unit (EMU)
- Power Supplies
- External Cache Batteries (ECBs)
- Fans

If necessary, remove the following elements from the disk enclosure:

- Power Supply/Blower Assemblies
- Disk Drives
- Environmental Monitoring Unit (EMU)
- I/O Modules


Refer to the *StorageWorks Model 2100 and 2200 Ultra SCSI Controller Enclosures User Guide* and the *StorageWorks Model 4300 Family Ultra3 LVD Disk Enclosures User Guide* for further information.

2. Install brackets onto the controller enclosure and disk enclosures. Using two people, mount the enclosures into the rack. Refer to the mounting kit documentation for further information.

3. Install the elements. Install the disk drives. Make sure you install blank panels in any unused bays.

Fibre Channel cabling information is shown to illustrate supported configurations. In a dual-bus disk enclosure configuration, disk enclosures 1, 2, and 3 are stacked below the controller enclosure—two SCSI Buses per enclosure (see [Figure 27](#)). In a single-bus disk enclosure configuration, disk enclosures 6, 5, and 4 are stacked above the controller enclosure and disk enclosures 1, 2, and 3 are stacked below the controller enclosure—one SCSI Bus per enclosure (see [Figure 28](#)).

4. Connect the six VHDCI UltraSCSI bus cables between the controller and disk enclosures, as shown in [Figure 27](#) for a dual-bus system and [Figure 28](#) for a single-bus system. Note that the supported cable lengths are 1, 2, 3, 5, and 10 meters.
5. Connect the AC power cords from the appropriate rack AC outlets to the controller and disk enclosures.

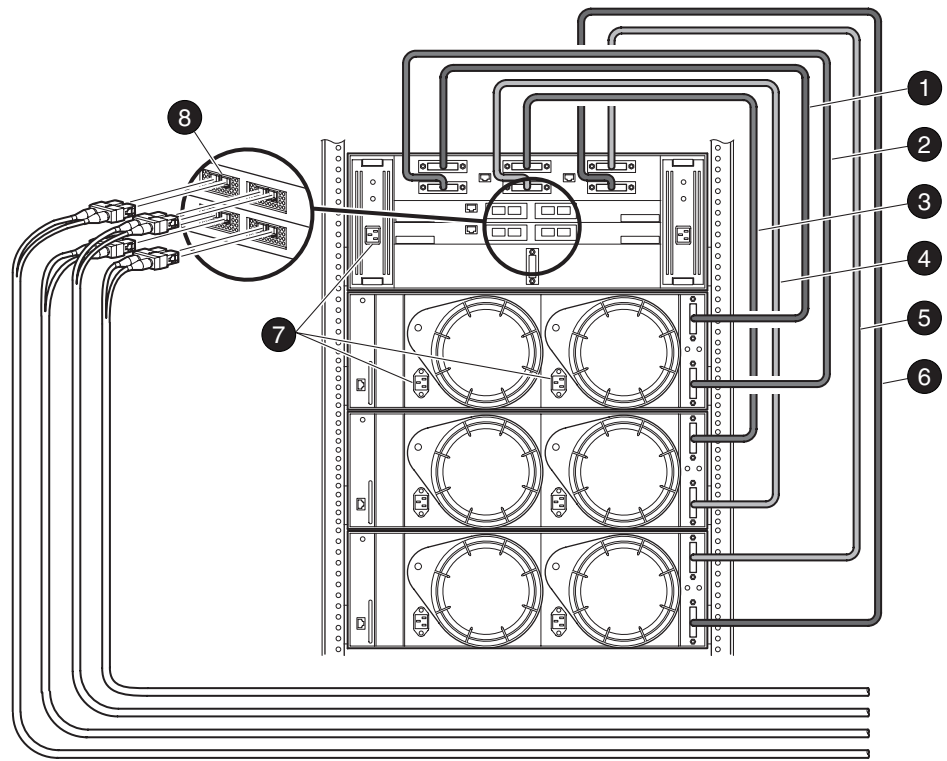

CX07383A

- | | |
|--------------------|-----------------------|
| ① SCSI Bus 1 Cable | ② SCSI Bus 2 Cable |
| ③ SCSI Bus 3 Cable | ④ SCSI Bus 4 Cable |
| ⑤ SCSI Bus 5 Cable | ⑥ SCSI Bus 6 Cable |
| ⑦ AC Power Inputs | ⑧ Fibre Channel Ports |

Figure 27: Dual-Bus Enterprise Storage RAID Array Storage System

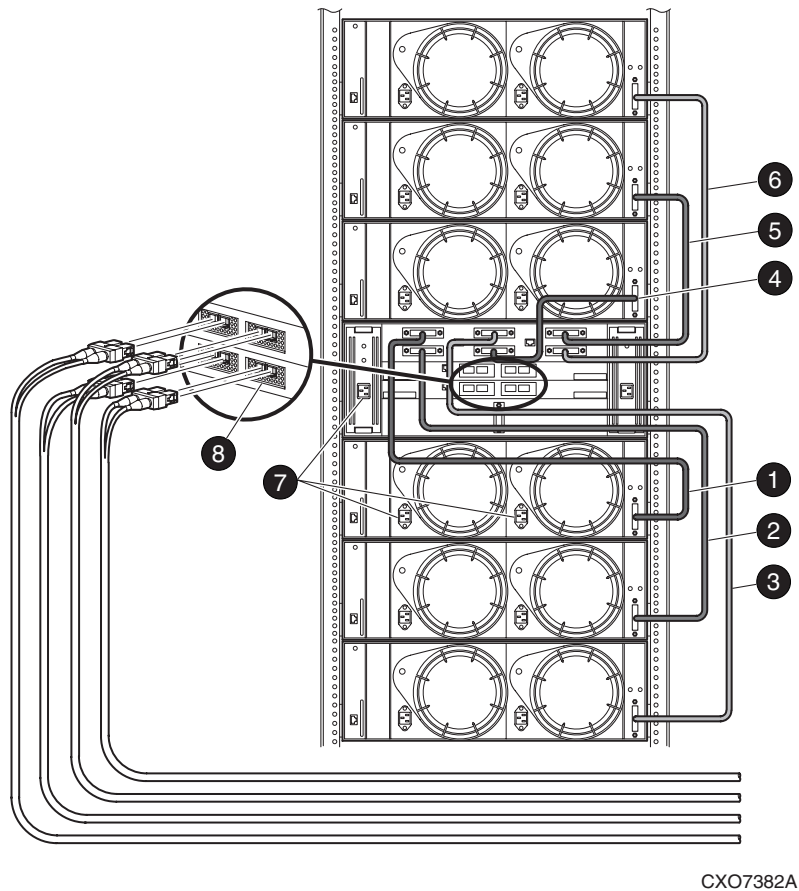


Figure 28: Single-Bus Enterprise Storage RAID Array Storage System

Making a Physical Connection

To attach a host computer to the storage subsystem, install one or more host bus adapters into the computer. A Fibre Channel (FC) cable goes from the host bus adapter to an FC switch.

Preparing to Install Host Bus Adapter

Before installing the host bus adapter:

1. Perform a complete backup of the entire system.
2. Shut down the computer system or perform a hot addition of the adapter based upon directions for that server.

Installing Host Bus Adapter

To make a physical connection, first install a host bus adapter.



Caution: Protect the host bus adapter board from electrostatic discharge by wearing an ESD wrist strap. DO NOT remove the board from the antistatic cover until you are ready to install it.

You need the following items to begin:

- Host bus adapter board
- The computer hardware manual
- Appropriate tools to service your computer

The host bus adapter board plugs into a standard PCI slot in the host computer. Refer to the system manual for instructions on installing PCI devices.

Note: Take note of the worldwide name (WWN) of each adapter. Do not power on anything yet. For the FC switches to autoconfigure, power on equipment in a certain sequence. Also, the controllers in the subsystem are not yet configured for compatibility with OpenVMS.

Verifying/Installing Required Versions

Refer to the Release Notes for OpenVMS to determine compatibility with the HSG60 controller.

Solution Software Upgrade Procedures

Use the following procedures for upgrades to your Solution Software. It is considered best practice to follow this order of procedures:

1. Perform backups of data prior to upgrade.
2. Verify operating system versions, upgrade operating systems to supported versions and patch levels.
3. Quiesce all I/O and unmount all file systems before proceeding.
4. Upgrade solution software.
5. Upgrade ACS software.

Note: Solely for the purpose of performing upgrades to the ACS firmware, this Solution Software Kit supports previous ACS V8.6 and V8.7. Do not mix ACS versions in the same SAN.

Refer to the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Maintenance and Service Guide* and the *Solution Software Release Notes* for the latest information on upgrades.

1. Verify that you have one of the following:
 - TCP/IP Services for OpenVMS (version 5.0 or later) with FTP and Telnet utilities enabled
 - TCPware (refer TCPware web site for the latest version)
 - MultiNet TCP/IP for OpenVMS (version 4.0 or later)
2. Your OpenVMS host's resources must meet the minimum requirements specified in Table 2, *Minimum System Requirements*, of your Release Notes.
3. Remove previous versions of the Agent from your computer.

If you are removing the Agent version 1.1b, delete the file, `change_register.com`, from the `SYS$SYSDEVICE:[SWCC$AGENT]` directory.
4. Read the release notes that are in the file, `HSG80VMS.TXT`.

5. If you have OpenVMS version 7.2-1 on an Alpha computer with MultiNet and/or TCPware TCP/IP stacks, you must install the security patch from the Process Software web site at <http://www.process.com>.
6. If you have an HSJ40 controller, check the controller firmware revision level. If your controller is at version 3.2J you must upgrade to version 3.4J before installing the Agent. This is due to an issue with the 3.2J firmware that causes controller hangs intermittently when used with the Agent.

To upgrade your Solution Software in conjunction with an ACS rolling upgrade on an OpenVMS system, follow the instructions below:

The first effort is to remove the HS-Series Agent from OpenVMS.

WARNING: This OpenVMS uninstallation will remove all configuration files.

To fully remove agent software, including client and storage data:

1. `$ @sys$manager:swcc_config`
2. Choose 3) Agent Disable/Stop
3. Choose 4) Uninstall Agent

Note: This OpenVMS uninstallation All client and storage files will be preserved.

To remove agent software only and save client and storage data:

1. `$ @sys$manager:swcc_config`
2. Choose 3) Agent Disable/Stop
3. Choose E) Exit configuration procedure.
4. `$ product remove swcc`

The second effort is upgrade the HS-Series Agent on OpenVMS:

1. Install the new SWCC Agent using the **POLYCENTER** Software Installation utility.
 - a. Copy the OpenVMS installation file from the Solution Software CD-ROM.
 - b. Install the new Agent using the instructions provided. For example:
`$ product install <product-name>`

2. Upgrade ACS to Version 8.8 using the instructions provided in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Maintenance and Service Guide*. Refer to the rolling upgrade procedure section and read it carefully before attempting the upgrade.

New Features, ACS 8.8 for OpenVMS

The following are new features implemented in ACS 8.8-1 for use by the OpenVMS operating system:

- [Host Connection Table Management Improvements](#), page 95
- [Selective Management Presentation](#), page 100
- [Linking WWIDs for Snap and Clone Units](#), page 103
- [SMART Error Eject](#), page 105
- [Error Threshold for Drives](#), page 109

Host Connection Table Management Improvements

Current implementation of host connectivity grants access to the first ninety-six (96) host connections that attempt to login to the controller. After that, all edits to the host connection table are manual and require extensive CLI commands to delete and/or replace connections.

Host Connection Table Locking

Host table lock and unlock commands have been added to control the connection table in NVRAM. When the table is locked, the host login request (PLOGI) will be rejected (unless the connection is already in the table) and the request will be stored internally on a rejected hosts table. In the default mode, if a PLOGI is received when the connection table is unlocked, the connection will be granted if there is room in the connection table. The lock state can be changed with the following CLI commands:

```
CLI> SET <THIS | OTHER> CONNECTIONS_LOCKED
CLI> SET <THIS | OTHER> CONNECTIONS_UNLOCKED
```

The CONNECTIONS_LOCKED and CONNECTIONS_UNLOCKED switches must be typed completely to stop someone from inadvertently changing the state of the lock.

The lock is maintained in the failover information (fi) section of each controller's NV. When the state of the lock is changed on one controller, the other controller is updated as well. The existing CLI command to ADD CONN is not affected by the state of the lock.

Viewing Host Connection Table Lock State

The state of the lock can be displayed using:

```
CLI> SHOW <THIS | OTHER>
```

The following string is displayed just before the port topology information:

```
Host Connection Table is <LOCKED | NOT locked >
```


Example of Host Connection Table Unlock: (new output shown in bold)

```
AP_Bot> show this
Controller:
    HSG80      (C) DEC CX00000001 Software V87
Hardware 0000
    NODE_ID          = 5000-1FE1-FF00-0090
    ALLOCATION_CLASS = 1
    SCSI_VERSION     = SCSI-3
    Configured for dual-redundancy with ZG02804912
        In dual-redundant configuration
    Device Port SCSI address 6
    Time: 10-SEP-2001 15:45:54
    Command Console LUN is lun 0 (IDENTIFIER = 99)
    Host Connection Table is NOT locked
Host PORT_1:
    Reported PORT_ID = 5000-1FE1-FF00-0091
    PORT_1_TOPOLOGY = FABRIC (standby)
Host PORT_2:
    Reported PORT_ID = 5000-1FE1-FF00-0092
    PORT_2_TOPOLOGY = FABRIC (fabric up)
    Address          = 011200
    NOREMOTE_COPY
Cache:
    512 megabyte write cache, version 0022
    Cache is GOOD
    No unflushed data in cache
    CACHE_FLUSH_TIMER = DEFAULT (10 seconds)
Mirrored Cache:
    Not enabled
Battery:
    NOUPS
    FULLY CHARGED
    Expires:          07-AUG-2003
```

Example of Host Connection Table Locked: (new output shown in bold)

```
AP_Bot> show this
Controller:
      HSG80      (C) DEC CX00000001 Software XC21P-0,
Hardware 0000
      NODE_ID            = 5000-1FE1-FF00-0090
      ALLOCATION_CLASS = 1
      SCSI_VERSION      = SCSI-3
      Configured for dual-redundancy with ZG02804912
      In dual-redundant configuration
      Device Port SCSI address 6
      Time: 10-SEP-2001 15:48:24
      Command Console LUN is lun 0 (IDENTIFIER = 99)
      Host Connection Table is LOCKED
Host PORT_1:
      Reported PORT_ID = 5000-1FE1-FF00-0091
      PORT_1_TOPOLOGY = FABRIC (standby)
Host PORT_2:
      Reported PORT_ID = 5000-1FE1-FF00-0092
      PORT_2_TOPOLOGY = FABRIC (fabric up)
      Address          = 011200
      NOREMOTE_COPY
Cache:
      512 megabyte write cache, version 0022
      Cache is GOOD
      No unflushed data in cache
      CACHE_FLUSH_TIMER = DEFAULT (10 seconds)
Mirrored Cache:
      Not enabled
Battery:
      NOUPS
      FULLY CHARGED
      Expires:          07-AUG-2003
```

The state of the connection can be displayed using:

```
CLI> SHOW CONN <FULL>
```

<<< LOCKED >>> appears in the title area when the connection table is locked. If unlocked, or not supported (HOST_FC only), the title area looks the same as it did for ACS version 8.7. The full switch displays the rejected hosts, with an index.

Adding Rejected Host Connections to Locked Host Connection Table

With ACS version 8.8-1, it is now possible to keep track of rejected hosts in a list, and to keep this list synchronized across controllers. An index is now added to the record to aid the user in manually adding rejected connections. The command to manually add rejection connections is:

```
ADD CONNECTION REJECTED_HOST <index>
```

This adds the connection to the connection table in an OFFLINE state. The host must issue a FC `plogi` to make the connection active. There are mechanisms to do this in UNIX, VMS, but not NT (except reboot).

One way to force the connection into an online state is to do the following:

```
CLI> SET <THIS | OTHER> PORT_<1|2>_TOPOLOGY = OFFLINE, followed  
by
```

```
CLI> SET <THIS | OTHER> PORT_<1|2>_TOPOLOGY = FABRIC
```

This will force all hosts connected to that controller/port to login again. At the same time, hosts connected to the controller pair through the same switch (regardless of controller/port) will need to login again

Note: This implementation is the safest, since pinging the fabric name server would result in all hosts logging in again (up to 96).

When the connection is added, it gets deleted from the reject list. Index numbers for remaining rejected hosts are re-ordered.

Implementation Notes

- For an upgrade to version 8.8-1 - The connection table is unlocked by default.
- For Backward Compatibility - Lock the table, and everything work the same as version 8.7.

- To Create a new SAN - Basically the system administrator unlocks the connection table, connect the desired hosts, and then lock the connection table. As the hosts are connected they login to the controller pair. After the connection table is locked, the host logins are rejected until the system administrator manually adds the host to the connection table.
- To Add a new Host to a SAN - A new host is added to the fabric that needs connectivity to the HSG80. Attempts to login are rejected because the connection table is locked. The system administrator is called, and manually adds an entry for the new host by creating a new connection from the rejected host.
- To Delete a Host - While the connection table is locked, delete the connection for the selected host. When the host realizes that it cannot talk to the HSG80 anymore, it may try to login again, but those attempts will be rejected since the connection table is locked.
- Too Many Hosts? - If more than 96 connections are present, all host logins will be rejected, regardless of the state of the lock.

Selective Management Presentation

Selective Management Presentation is a control method that extends the use of the Selective Storage Presentation concept currently available on logical units (LUNs). You can use this mechanism to send control commands to the HSG80 controller (see [“What is Selective Storage Presentation?”](#) on page 39).

The new access mechanism provides control over which, SAN Management Agent systems can perform management operations.

In order to define the set of Management Agent host systems that can access the HSG80 management functions, new CLI commands are defined. These commands allow the user to selectively enable or disable host access to the control mechanism. These new commands provide for the addition and removal of Management Agent Host systems, and the ability to display the currently enabled systems.

Removing Management Agent Host systems

The following command disables access to the management functions. The user can specify all systems or a list of systems.

```
HSG80> SET DISABLE_MANAGERS=ALL
HSG80> SET DISABLE_MANAGERS=(host list...)
```

Adding Management Agent Host systems

The following command enables access to the management functions. The user can specify all systems, or a list of systems.

```
HSG80> SET ENABLE_MANAGERS=ALL
- or -
HSG80> SET ENABLE_MANAGERS=(host list...)
```

Display Enabled Management Agents

The following command displays a list of the systems currently enabled to perform management functions.

```
HSG80> SHOW MANAGERS
Connection
Name      Operating System  Controller Port  Address
Status
NEWCON14   AIX               THIS            1      011000  OL
this      0
          HOST_ID=2000-0000-C922-46E2
          ADAPTER_ID=1000-0000-C922-46E2
NEWCON15   WINNT            THIS            1      011200  OL
this      0
          HOST_ID=2000-0000-C927-6735
          ADAPTER_ID=1000-0000-C927-6735
NEWCON16   AIX              OTHER           1      011100  OL
other     0
          HOST_ID=2000-0000-C925-0096
          ADAPTER_ID=1000-0000-C925-0096
NEWCON17   WINNT            OTHER           1      011300  OL
other     0
          HOST_ID=2000-0000-C923-2CD2
          ADAPTER_ID=1000-0000-C923-2CD2
```

In the event that all connections are enabled the display appears as follows.

```
HSG80> SHOW MANAGERS

Connection                                     <<<All Connections Enabled>>>
  Name      Operating System   Controller Port   Address
Status
NEWCON14    AIX                THIS             1       011000  OL
this        0
            HOST_ID=2000-0000-C922-46E2
            ADAPTER_ID=1000-0000-C922-46E2
NEWCON15    WINNT              THIS             1       011200  OL
this        0
            HOST_ID=2000-0000-C927-6735
            ADAPTER_ID=1000-0000-C927-6735
NEWCON16    AIX                OTHER            1       011100  OL
other       0
            HOST_ID=2000-0000-C925-0096
            ADAPTER_ID=1000-0000-C925-0096
NEWCON17    WINNT              OTHER            1       011300  OL
other       0
            HOST_ID=2000-0000-C923-2CD2
            ADAPTER_ID=1000-0000-C923-2CD2
<<<All Connections Enabled>>>
```

Enabling SAN Security

To enable a secure SAN, use the connection table locking feature. In the following example, the connection table is enabled, so no so no other host can login, all management access is disabled and then a single host is enabled to have management access.

```
CLI> SET THIS CONNECTIONS_LOCKED
CLI> SET DISABLE_MANAGERS=ALL
CLI> SET THIS ENABLE_MANAGERS=NEWCON17
```

From this point, the newly enabled host with management privileges or the CLI can be utilized to enable other hosts as management agents.

Note: The Selective Management Presentation feature only applies to commands received by way of a SCSI SEND_DIAG command. If the HSG80 receives a SEND_DIAG command over a disabled management connection, an ILLEGAL_REQUEST CHECK_COND will be returned with an ASC=0x91 and ASCQ=0x08. Any command delivered to the HSG80 Serial Port bypasses this constraint and will be processed.

Linking WWIDs for Snap and Clone Units

LUN WWIDs (World Wide Identifiers) for snap and clone units are different each time they are created. This causes more system data records to keep track of the WWIDs as well as script changes at the customer sites. To eliminate this issue, a linked WWID scheme has been created, which keeps the WWIDs of these units constant each time they are created.

The WWID of a LUN is 128bits long, and is composed as follows: Controller Node ID is the 64-bit Fibre Channel node id of the controller pair.

Controller Serial is the low-order 48 bits of the controller that “initialized” the storage set. The Controller_Serial is composed from several fields, but the high order 12 bits are a Reserved Field.

VSN_Seed is a counter that is incremented every time we initialize a storage set.

If the linked WWID is already in use, a unique WWID is allocated, and a message to this effect is displayed. This is not a syntax error and does not cause the command to fail.

CLI format

```
CLI> add snapshot_units <SnapUnit> <UnitName> <SourceName>
      use_parent_wwid
```

Snapshot Unit - unit number to be assigned to the snap unit.

Unit Name - name of storage set or disk that will become the snap unit.

Source Name - unit number of source storage set or disk.

Example:

```
CLI> add snap d2 disk10100 d1 use_parent_wwid
```

Example of error message text:

```
CLI> add snap d2 disk10100 d1 use_parent_wwid
A new WWID has been allocated for this unit because the linked
WWID for d2 is already in use.
CLI> run clonew
```

Implementation Notes

Add Snap with Linked WWID - The user has a script that runs every night to create a snapshot, run a backup to tape from the snapshot, then delete the snapshot. Each time this is done, a new WWID is allocated. When the operating system runs out of room for all of these “orphaned” WWIDs, the host system must be rebooted. Therefore the user decides to update the script such that the “add snap” command reads as follows:

```
CLI> add snap d2 disk10100 d1 use_parent_wwid.
```

This results in same WWID being used for the snapshot each night.

Run Clonew - Operates the same as “CLI> run clone” with the exception that clonew will use the linked WWID associated with the source unit instead of allocating a new one.

```
CLI> run clonew
```

Run Clone - Works the same as v86. In other words a unique WWID is always allocated to the clone unit.

Clonew of a Snap - The user wants to clone a snap unit without using any more WWIDs. The clone created from the snap unit will be created using the linked WWID associated with the snap unit.

Exception: A new WWID will be allocated if the snapshot was created using the `use_parent_wwid` switch. Each WWID only has one linked WWID variation. If the linked WWID is already in use, then a new unique WWID is allocated.

Snap of a Clone - The user want to snapshot a clone without using any more WWIDs, and issues “CLI> add snap d3 disk10300 d2 use_parent_wwid”. D3, the snapshot unit, will be created with the linked WWID associated with d2.

Exception: A new WWID will be allocated if the clone was created using the “run clonew” command. Each WWID only has one linked WWID variation. If the linked WWID is already in use, then a new unique WWID is allocated.

Manual Clone Creation - The user has his own set of scripts that create clones, and wants to update them to use linked WWIDs. At some point in the script there will be an “add unit” command. The switch “parent_wwid=<unit>” must be provided.

For example,

```
CLI> add unit d2 disk10100 parent_wwid=d1
```

would create a unit d2 from device disk10100 whose WWID would be the linked WWID associated with unit d1.

Exception: A new WWID will be allocated if the linked WWID associated with d1 is already in use (for example, a clone or snapshot is already using the linked WWID).

SMART Error Eject

When a SMART notification is received from a device, it is currently treated as a soft error - the notification is passed to the host and operations continue. A new CLI switch at the controller level changes this behavior. When this switch is enabled, drives in a normalized and redundant set that report a smart error are removed from that set. Smart errors that are reported by drives in a non-redundant or non-normal set continue to handle this condition as a recovered error.

If the smart error eject state is disabled, all smart errors are reported as recovered errors. The recovered error report contains the ASC = 0x5D, the ASC for all smart errors, and the appropriate ASCQ. The default value for this feature is DISABLE.

CLI command syntax:

```
HSG> set this_controller smart_error_eject = [enable|disable]
```

CLI output - feature disabled:

```
AP_TOP> show this

Controller:

    HSG80 ZG02804912 Software V87S-0, Hardware E12
    NODE_ID              = 5000-1FE1-FF00-0090
    ALLOCATION_CLASS      = 1
    SCSI_VERSION         = SCSI-3
    Configured for MULTIBUS_FAILOVER with ZG02804288
        In dual-redundant configuration
    Device Port SCSI address 7
    Time: 22-NOV-2001 01:14:32
    Command Console LUN is lun 0 (IDENTIFIER = 99)
    Host Connection Table is NOT locked
    Smart Error Eject Disabled

Host PORT_1:

    Reported PORT_ID = 5000-1FE1-FF00-0093
    PORT_1_TOPOLOGY = FABRIC (fabric up)
    Address          = 011100

Host PORT_2:

    Reported PORT_ID = 5000-1FE1-FF00-0094
    PORT_2_TOPOLOGY = FABRIC (fabric up)
    Address          = 011300
    NOREMOTE_COPY

Cache:

    256 megabyte write cache, version 0022
    Cache is GOOD
    No unflushed data in cache
    CACHE_FLUSH_TIMER = DEFAULT (10 seconds)

Mirrored Cache:

    256 megabyte write cache, version 0022
    Cache is GOOD
    No unflushed data in cache
```

Battery:

NOUPS

FULLY CHARGED

Expires: WARNING: UNKNOWN EXPIRATION DATE!

WARNING: AN UNKNOWN NUMBER OF DEEP DISCHARGES HAVE OCCURRED!

CLI Output - feature enabled:

```
AP_TOP> show this

Controller:

    HSG80 ZG02804912 Software V87S-0, Hardware E12
    NODE_ID              = 5000-1FE1-FF00-0090
    ALLOCATION_CLASS = 1
    SCSI_VERSION         = SCSI-3
    Configured for MULTIBUS_FAILOVER with ZG02804288
        In dual-redundant configuration
    Device Port SCSI address 7
    Time: 22-NOV-2001 01:17:47
    Command Console LUN is lun 0 (IDENTIFIER = 99)
    Host Connection Table is NOT locked
    Smart Error Eject Enabled

Host PORT_1:

    Reported PORT_ID = 5000-1FE1-FF00-0093
    PORT_1_TOPOLOGY = FABRIC (fabric up)
    Address          = 011100

Host PORT_2:

    Reported PORT_ID = 5000-1FE1-FF00-0094
    PORT_2_TOPOLOGY = FABRIC (fabric up)
    Address          = 011300
    NOREMOTE_COPY

Cache:

    256 megabyte write cache, version 0022
    Cache is GOOD
    No unflushed data in cache
    CACHE_FLUSH_TIMER = DEFAULT (10 seconds)

Mirrored Cache:

    256 megabyte write cache, version 0022
    Cache is GOOD
    No unflushed data in cache

Battery:
```

NOUPS

FULLY CHARGED

Expires: WARNING: UNKNOWN EXPIRATION DATE!

WARNING: AN UNKNOWN NUMBER OF DEEP DISCHARGES HAVE OCCURRED!

Error Threshold for Drives

A new limit for driver errors can be set. Once the limit is reached, the drive is removed from any redundant sets to which it belongs and put into the failed set.

Errors counted are medium and recovered errors - there is no need to add hardware errors to this count as the drive fails immediately if a hardware error is encountered.

A set of CLI commands is provided that sets the threshold value and resets the error counters for the drives. This is needed due to the persistent nature of these counters. Since the layered application parsing of the CLI output should not be disturbed, a separate SHOW command is included to see the threshold value.

CLI Syntax

```
CLEAR_ERRORS DRIVE_ERRORS
```

Enter the `DRIVE_ERRORS` command exactly and completely. This command clears the error count, from non-volatile memory, for all devices on the system, setting each to a value of 0. The current value of a devices error count is seen through `VTDPY`.

```
SET DRIVE_ERROR_THRESHOLD=<value>
```

Enter the `DRIVE_ERROR_THRESHOLD` command exactly and completely. This command sets the threshold error to a value that determines when a drive will be removed and placed in the `FAILEDSET`. The options for the command are any number ranging from 0 to 999 with a value 0 shutting off the functionality. The user can also input `DEFAULT` to receive the default error threshold of 700. The entered value is placed into Non-Volatile memory and as such is persistent through failovers and reboots.

```
SHOW DRIVE_ERROR_THRESHOLD
```

This command shows the current value of the drive error threshold for the controller. The output is as follows

```
Drive Error Threshold: <value>
```


Installing and Configuring the HSG Agent

4

StorageWorks Command Console (SWCC) enables real-time configuration of the storage environment and permits you to monitor and configure the storage connected to the HSG80 controller.

The following information is included in this chapter:

- [Why Use StorageWorks Command Console \(SWCC\)?](#), page 112
- [Installation and Configuration Overview](#), page 113
- [About the Network Connection for the Agent](#), page 114
- [Before Installing the Agent](#), page 116
- [SWCC Features and Components](#), page 112
- [Installing and Configuring the Agent](#), page 117
- [Removing the Agent](#), page 123

Refer to Chapter 5 for a description of how to configure a subsystem that uses Fibre Channel fabric topology.

Why Use StorageWorks Command Console (SWCC)?

StorageWorks Command Console (SWCC) enables you to monitor and configure the storage connected to the HSG80 controller. SWCC consists of Client and Agent.

- The Client provides pager notification and lets you manage your virtual disks. The Client runs on Windows Server 2003 (32-bit), Windows 2000 with Service Pack 3 and 4, and Windows NT 4.0 with Service Pack 6A or above.
- The Agent obtains the status of the storage connected to the controller. It also passes the status of the devices connected to the controller to other computers and provides email notification and error logging.

To receive information about the devices connected to your HSG80 controller over a TCP/IP network, you must install the Agent on a computer that is connected to a controller.

The Agent can also be used as a standalone application without Client. In this mode, which is referred to as Agent only, Agent monitors the status of the subsystem and provides local and remote notification in the event of a failure. A subsystem includes the HSG80 controller and its devices. Remote and local notification can be made by email and/or SNMP messages to an SNMP monitoring program.

Table 12: SWCC Features and Components

Features	Agent Required?	Client Required?
Creation of RAID sets: Striped device group (RAID 0) Mirrored device group (RAID 1) Striped mirrored device group (RAID 0+1) Striped parity device group (RAID 3/5) Individual device (JBOD)	Yes	Yes
Monitor multiple subsystems at once	Yes	No
Event logging	Yes	No
Email notification	Yes	No
Pager notification	Yes	Yes

Note: For serial and SCSI connections, the Agent is not required for creating virtual disks.

Installation and Configuration Overview

Table 13 provides an overview of the installation.

Table 13: Installation and Configuration Overview


Step	Procedure
1.	Verify that your hardware has been set up correctly. See the previous chapters in this guide.
2.	Verify that you have a network connection for the Client and Agent systems. See “About the Network Connection for the Agent” on page 114.
3.	Verify that there is a LUN for communications. This can be either the CCL or a LUN that was created with the CLI. See “What is the Command Console LUN?” on page 33 in Chapter 1.
4.	Install the Agent (TCP/IP network connections) on a system connected to the HSG80 controller. See Chapter 3 for agent installation.
5.	Add the name of the Client system to the Agent’s list of Client system entries (TCP/IP network connections). This can be done during installation or when reconfiguring the Agent.
6.	Add the name of the Agent system to the Navigation Tree of each Client system that is on the Agent’s list of Client system entries (TCP/IP network connections). See Appendix B.
7.	Set up pager notification (TCP/IP network connections). Refer to <i>“Setting Up Pager Notification”</i> in the <i>HP StorageWorks Command Console Version 2.5, User Guide</i> .

About the Network Connection for the Agent

The network connection, shown in [Figure 29](#), displays the subsystem connected to a hub or a switch. SWCC can consist of any number of Clients and Agents in a network. However, it is suggested that you install only one Agent on a computer.

By using a network connection, you can configure and monitor the subsystem from anywhere on the LAN. If you have a WAN or a connection to the Internet, monitor the subsystem with TCP/IP.

Note: SWCC does not support the dynamic host configuration protocol (DHCP) or the Windows Internet Name Service (WINS).

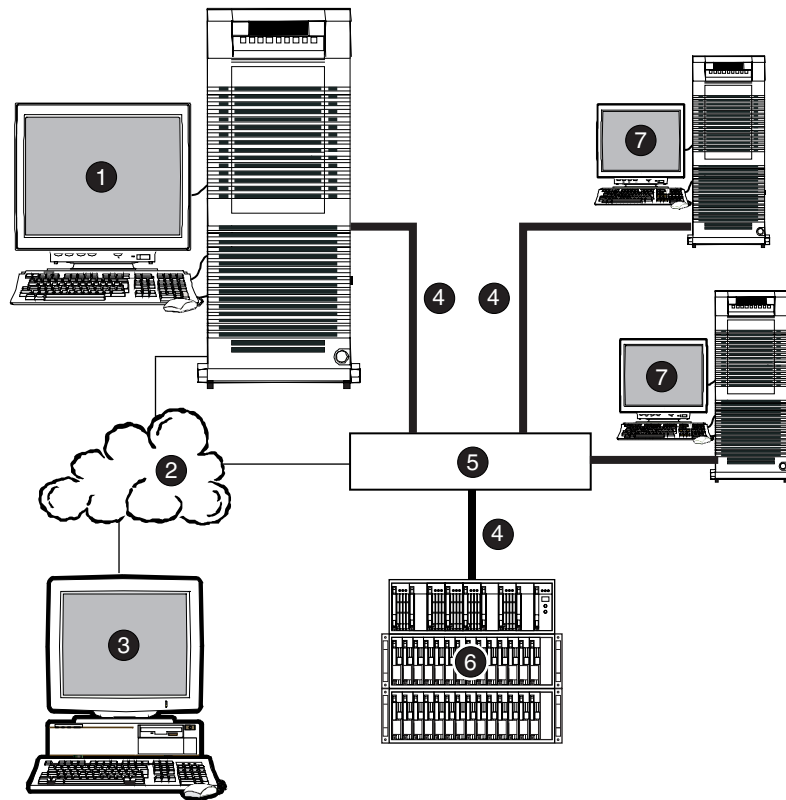

CXO7240A

- | | |
|---|---|
| ❶ Agent system (has the Agent software) | ❺ Hub or switch |
| ❷ TCP/IP network | ❻ HSG80 controller and its device subsystem |
| ❸ Client system (has the Client software) | ❼ Servers |
| ❹ Fibre Channel cable | |

Figure 29: An example of a network connection

Before Installing the Agent

The Agent requires the minimum system requirements, as defined in the release notes for your operating system. The program is designed to operate with the Client version 2.5 on Windows 2000, Windows NT, or Windows Server 2003 (32-bit). Verify that your system meets the minimum requirements by completing the following steps.

1. Verify that you have one of the following:
 - TCP/IP Services for OpenVMS (version 5.0 or later) with FTP and Telnet utilities enabled
 - TCPware (refer TCPware web site for the latest version)
 - MultiNet TCP/IP for OpenVMS (version 4.0 or later)
2. Your OpenVMS host's resources must meet the minimum requirements specified in Table 2, *Minimum System Requirements*, of your Release Notes.
3. Remove previous versions of the Agent from your computer.

If you are removing the Agent version 1.1b, delete the file, `change_register.com`, from the `SYSS$SYSDEVICE:[SWCC$AGENT]` directory.
4. Read the release notes that are in the file, `HSG80VMS.TXT`.
5. If you have OpenVMS version 7.2-1 on an Alpha computer with MultiNet and/or TCPware TCP/IP stacks, you must install the security patch from the Process Software web site at <http://www.process.com>.

Options for Running the Agent

Agent runs as an OpenVMS process called "SWCC_AGENT." You can use the Agent configuration program to control the execution of this process. You can:

- Immediately start or stop your Agent.
- Start your Agent automatically each time the host is started (This is the only mode available for TCPware and MultiNet).
- Start your Agent as an auxiliary service of TCP/IP Services for OpenVMS (default). It starts Agent on demand.

Downloading the Host Kit Software From the Web

The host kit software is available for download. You can save the software to your computer or create a CD-ROM. Platform kit software is stored on the download web site based on operating system. Follow the steps below to obtain the software from the web site.

1. Go to
<http://h18006.www1.hp.com/products/storageworks/ma8kema12k/kits.html>.
2. Select the kit for download.
3. Select the folder in which you want to save the file when presented with the Save As dialog box.

Note: The folder you select must be large enough to store the OS kit selected. File sizes range from 862KB to 51 MB depending on the operating system selected.

The platform kit software is available as an .iso or .zip file. After you download it to your computer, your options are:

- Create a CD-ROM using the .iso file.
- Copy the .zip file to the server that runs the platform kit software. Uncompress the file and run the install program on the server.

Installing and Configuring the Agent

The following SWCC Agent install procedure assumes that you have loaded the web kit to a CD-ROM (see “[SWCC Features and Components](#)” on page 112). For the following examples, you can replace DQA0 and DKB100:[SWCC] with “device names” more suitable for your system.

1. Insert the CD-ROM into the system that is connected to the controller.
For the examples in this section, assume the CD-ROM device is DQA0.
2. To mount the CD-ROM, enter the following at the command prompt (Replace DQA0 with the name of your CD-ROM device.):

```
$ MOUNT/OVER=ID/MEDIA=CD DQA0 :
```

3. To create a local directory on your system, enter the following at the command prompt. Later in this procedure, you will copy the installation file from the CD-ROM to this new directory. Replace DKB100 with the device-name on the system that is connected to the controller.

```
$ CREATE/DIRECTORY DKB100:[SWCC]
```

A directory named DKB100:[SWCC] has been created.

4. To set the default directory, enter the following at the command prompt (Replace DKB100 with the name of your device):

```
$ SET DEFAULT DKB100:[SWCC]
```

5. Copy the self-extracting file from the CD-ROM to the default directory. Enter the following command (Replace DQA0 with the name of your CD-ROM drive):

```
$ COPY DQA0:[AGENT]swcc25.exe *.*
```

6. To expand the self-extracting file, enter the following:

```
$ RUN swcc25.exe
```

7. To install the kit, enter the following at the command prompt:

```
$ PRODUCT INSTALL SWCC/SOURCE=[ ]
```

The system responds with a message that SWCC is the product selected to install. You are asked if you want to continue.

8. Press **Enter** to continue. An installation verification message appears. The last line of the message is the following:

```
To configure SWCC Agent for HS* controllers:
@sys$manager:swcc_config
```

9. If you have an OpenVMS cluster running the MultiNet TCP/IP stack, the command procedure SWCC_CONFIG.COM will only upgrade the services of each system disk's first node. Enter the following to upgrade the services database of the other nodes that share the system disk:

```
$ @MULTINET:INSTALL_DATABASES
```

or

Restart the system.

10. Dismount the CD-ROM. Enter the following at the command prompt and then press **Enter** (The following example assumes that your CD-ROM drive is DQA0.):

```
$ DISMOUNT DQA0:
```

11. Run the configuration program. Enter the following at the command prompt:

```
$ @SYS$MANAGER:SWCC_CONFIG
```

If the installation does not detect any configuration files from a previous installation, you are shown a configuration script when you run the configuration program. During the configuration, you will need to do at least the following:

- Enter the name of the client system on which you installed the Client software. You can enter more than one client system. For a client system to receive updates from the Agent, it must be on the Agent's list of client system entries. In addition, adding a client system entry allows you to access the agent system from the Navigation Tree.

Note: Enter your most important client system first and the client system that is infrequently connected to the network last. The software will put the client system entry that you entered first to the top of its list of client systems to be contacted.

- Enter client system notification options and the client system access options.
- Enter the name for a subsystem and the device name used to access the subsystem. You can enter more than one subsystem. If you want to monitor and manage a subsystem, you need to enter this information. The subsystem, which is comprised of the controller and its array of physical devices, must have access to the Agent system.
- Enter a password. It must be a text string that has 4 to 16 characters. It is entered from the client system to gain configuration access.
- Start the Agent. The Agent runs as a process in the background. When you start the Agent, you are instructing the software to start monitoring the subsystems.

You can change your configuration using the SWCC Command Console Agent Configuration menu by entering the following command:

```
$ @sys$manager:swcc_config
```

The following is an example of the Agent Configuration menu:

SWCC Agent for HS* Controllers Configuration Menu

Agent is enabled as TCP/IP Services for OpenVMS service.

Agent is now: **active**

Agent Admin Options:

- 1)Change Agent password
- 2)Agent Enable/Start
- 3)Agent Disable/Stop
- 4)Uninstall Agent

Client Options:

- 5)Add a Client
- 6)Remove a Client
- 7)View Clients

Storage Subsystem Options:

- 8)Add a subsystem
- 9)Remove a subsystem
- 10)View subsystems
- E)Exit configuration procedure



Caution: After you make a change to the configuration, such as adding a client system, you must stop and then start the Agent for your changes take effect. When you stop and then start the Agent, the Storage Windows for the subsystems connected to the agent system lose their connection. To regain that connection, close and then reopen the Storage Windows connected to the agent system after you restart the Agent.

Table 14: Information Needed to Configure Agent

Term/Procedure	Description
Adding a Client system entry	For a client system to receive updates from the Agent, you must add it to the Agent's list of client system entries. The Agent will only send information to client system entries that are on this list. In addition, adding a client system entry allows you to access the Agent system from the Navigation Tree on that Client system.
Adding a subsystem entry	You need to tell the Agent the subsystem that it needs to monitor.
Client system	Network names for the computers on which the Client software runs.
Client system access options	<p>The access privilege level controls the Client system's level of access to the subsystems.</p> <p>0=No Access-Can use the Client software to add a system to a Navigation Tree, set up a pager, and view properties of the controller and the system. You cannot use Client to open a Storage Window.</p> <p>1=Show Level Access-Can use the Client software to open a Storage Window, but you cannot make modifications in that window.</p> <p>2=Storage Subsystem Configuration Capability-Can use the Client software to make changes in a Storage Window to modify a subsystem configuration.</p>
Client system notification options Note: For all of the client system notification options, local notification is available through an entry in the system error log file and Email (provided that Email notification in PAGEMAIL.COM has not been disabled).	<p>0 = No Error Notification-No error notification is provided over network.</p> <p>1 = Notification via a TCP/IP Socket (Transmission Control Protocol/Internet Protocol)-Updates the Storage Window of subsystem changes provided AES is running. Required for Windows NT event logging and pager notification. If you do not select TCP/IP, you will need to refresh the Storage Window to obtain the latest status of a subsystem.</p> <p>2 = Notification via the SNMP protocol (Simple Network Management Protocol)-Requires you to use an SNMP-monitoring program to view SNMP traps.</p> <p>3 = Notification via both TCP/IP and SNMP-Combination of options 1 and 2.</p>

Table 14: Information Needed to Configure Agent (Continued)


Term/Procedure	Description
Deleting a client system entry	When you remove a client system from the Agent's list, you are instructing the Agent to stop sending updates to that client system. In addition, you will be unable to access this agent system from the Navigation Tree.
Email notification	Modify file pagemail.com in directory sys\$sysdevice:[swcc\$agent] . When an error is logged, the Agent executes the PAGENT.COM command. You can modify this file for Agent to log errors in a log file and/or change the account to which Agent sends messages. You can also modify for which level of errors you will be notified. Client does not need to be running to perform these actions.
Monitoring interval in seconds	How often the subsystem is monitored.
Password	It must be a text string that has 4 to 16 characters. It can be entered from the client system to gain configuration access. Accessing the SWCC Agent Configuration menu can change it.

You can change your configuration using the SWCC Agent Configuration menu. To access this menu, enter the following command:

```
$ @sys$manager:swcc_config
```

The following is an example of the Agent Configuration menu:

SWCC Agent for HS* Controllers Configuration Menu
<p>Agent is enabled as TCP/IP Services for OpenVMS service.</p> <p>Agent is now: active</p> <p>Agent Admin Options:</p> <ol style="list-style-type: none"> 1)Change Agent password 2)Agent Enable/Start 3)Agent Disable/Stop 4)Uninstall Agent <p>Client Options:</p>

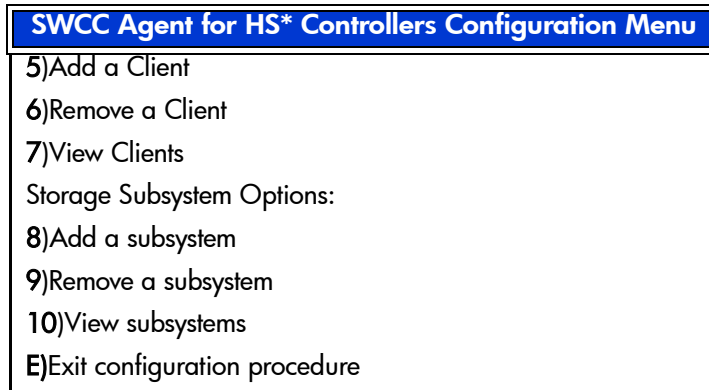

Removing the Agent

Instructions on how to remove the HSG Agent from OpenVMS are the following:

WARNING: This OpenVMS uninstallation will remove all configuration files!

To fully remove agent software, including client and storage data:

1. `$ @sys$manager:swcc_config`
2. Choose 3) Agent Disable/Stop
3. Choose 4) Uninstall Agent

Note: This OpenVMS uninstallation All client and storage files will be preserved.

To remove agent software only and save client and storage data:

1. `$ @sys$manager:swcc_config`
2. Choose 3) Agent Disable/Stop
3. Choose E) Exit configuration procedure.
4. `$ product remove swcc`



Caution: Do not uninstall the Agent if you want to preserve configuration information. If you only want to install an upgrade, stop the Agent, and then install the new version. Older versions will be automatically removed before the update, but all configuration information will be preserved.

The following is the detailed procedure for fully removing agent software:

1. Enter the following at the command prompt:

```
$ @sys$manager:swcc_config
```

The Configuration menu appears.

2. To disable the Agent, select option **3**.
3. To remove the Agent, select option **4**.
4. Select option **Y**. The host tells you that the Agent has been stopped and SWCC is being disabled. You are then asked if you want to continue.
5. Select option **Y**.

Note: This option stops all instances of the Agent on all cluster nodes and deletes all Agent files, except the .PCSI file used to install the Agent.

FC Configuration Procedures

5

This chapter describes procedures to configure a subsystem that uses Fibre Channel (FC) fabric topology. In fabric topology, the controller connects to its hosts through switches.

The following information is included in this chapter:

- [Establishing a Local Connection](#), page 126
- [Setting Up a Single Controller](#), page 127
- [Setting Up a Controller Pair](#), page 134
- [Configuring Devices](#), page 141
- [Configuring Storage Containers](#), page 141
- [Assigning Unit Numbers and Unit Qualifiers](#), page 147
- [Configuration Options](#), page 150
- [Verifying Storage Configuration from Host](#), page 154

Use the command line interpreter (CLI) or *StorageWorks* Command Console (SWCC) to configure the subsystem. This chapter uses CLI to connect to the controller. To use SWCC for configuration, see the SWCC online help for assistance.


Note: These configuration procedures assume that controllers and cache modules are installed in a fully functional and populated enclosure and that the PCMCIA cards are installed.

To install a controller or cache module and the PCMCIA card, see the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Maintenance and Service Guide*.

Establishing a Local Connection

A local connection is required to configure the controller until a command console LUN (CCL) is established using the CLI. Communication with the controller can be through the CLI or SWCC.

The maintenance port, shown in [Figure 30](#), provides a way to connect a maintenance terminal. The maintenance port can be an EIA-423 compatible terminal or a computer running a terminal emulator program. The maintenance port accepts a standard RS-232 jack. The maintenance port cable shown in [Figure 30](#) has a 9-pin connector molded onto the end for a PC connection. If you need a terminal connection or a 25-pin connection, you can order optional cabling.

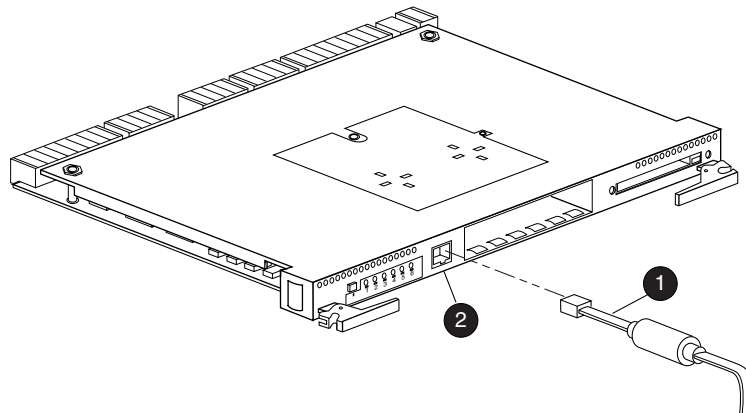

❶ Maintenance Port
Cable

❷ Maintenance Port

Figure 30: Maintenance port connection



Caution: The maintenance port generates, uses, and can radiate radio-frequency energy through its cables. This energy may interfere with radio and television reception. Disconnect all maintenance port cables when not communicating with the controller through the local connection.

Setting Up a Single Controller


Powering On and Establishing Communication

1. Connect the computer or terminal to the controller, as shown in [Figure 30](#). The connection to the computer is through the COM1 or COM2 port.
2. Turn on the computer or terminal.
3. Apply power to the storage subsystem.
4. Verify that the computer or terminal is configured as follows:
 - 9600 baud
 - 8 data bits
 - 1 stop bit
 - no parity
 - no flow control
5. Press **Enter**. A copyright notice and the CLI prompt appear, indicating that you established a local connection with the controller.

Cabling a Single Controller

The cabling for a single controller is shown in [Figure 31](#).

Note: It is a good idea to plug only the controller cables into the switch. The host cables are plugged into the switch as part of the configuration procedure ("[Configuring a Single Controller Using CLI](#)" on page 128).

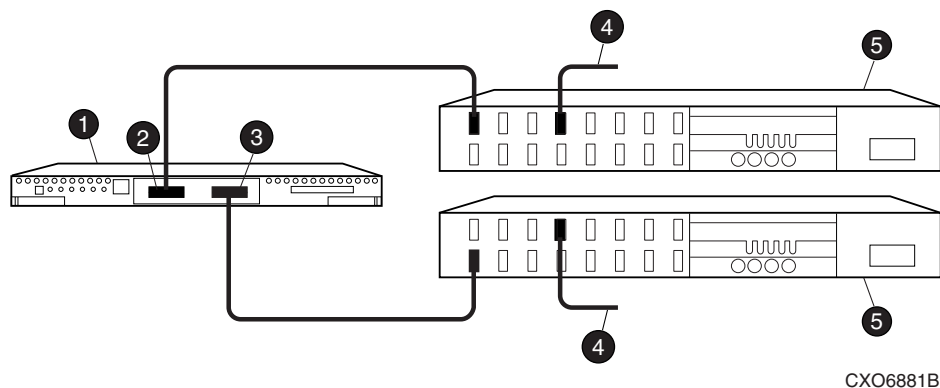

- | | |
|---------------|---|
| ❶ Controller | ❷ Cable from the switch to the host Fibre Channel adapter |
| ❸ Host port 1 | |
| ❹ Host port 2 | ❺ FC switch |

Figure 31: Single controller cabling

Configuring a Single Controller Using CLI

To configure a single controller using CLI involves the following processes:

- Verifying the Node ID and Checking for Any Previous Connections.
- Configuring Controller Settings.
- Restart the Controller.
- Setting Time and Verifying all Commands.
- Plugging in the FC Cable and Verify Connections.
- Repeating Procedure for Each Host Adapter.
- Verifying Installation.

Verifying the Node ID and Checking for Any Previous Connections

1. Enter a `SHOW THIS` command to verify the node ID:

```
SHOW THIS
```

See “[Worldwide Names \(Node IDs and Port IDs\)](#)” on page 44 for the location of the sticker.

The node ID is located in the third line of the SHOW THIS result:

```
HSG80> SHOW THIS
```

```
Controller:
```

```
  HSG80 ZG80900583 Software V8.8, Hardware E11
  NODE_ID          = 5000-1FE1-0001-3F00
  ALLOCATION_CLASS = 0
```

If the node ID is present, go to step 5.

If the node ID is all zeroes, enter node ID and checksum, which are located on a sticker on the controller enclosure. Use the following syntax to enter the node ID:

```
SET THIS NODE_ID=NNNN-NNNN-NNNN-NNNN nn
```

Where: *NNNN-NNNN-NNNN-NNNN* is the node ID, and *nn* is the checksum.

2. When using a controller that is not new from the factory, enter the following command to take it out of any failover mode that may have been configured previously:

```
SET NOFAILOVER
```

If the controller did have a failover mode previously set, the CLI may report an error. Clear the error with this command:

```
CLEAR_ERRORS CLI
```

3. Enter the following command to remove any previously configured connections:

```
SHOW CONNECTIONS
```

A list of named connections, if any, is displayed.

4. Delete these connections by entering the following command:

```
DELETE !NEWCON01
```

Repeat the Delete command for each of the listed connections. When completed, no connections will be displayed.

Configuring Controller Settings

5. Set the SCSI version using the following command syntax:

```
SET THIS SCSI_VERSION=SCSI-3
```

6. Assign an identifier for the communication LUN (also called the command console LUN, or CCL). The CCL must have a unique identifier that is a decimal number in the range 1 to 32767, and which is different from the identifiers of all units. Use the following syntax:

```
SET THIS IDENTIFIER=N
```

Identifier must be unique among all the controllers attached to the fabric within the specified allocation class.

7. Set the topology for the controller. If both ports are used, set topology for both ports:

```
SET THIS PORT_1_TOPOLOGY=FABRIC
```

```
SET THIS PORT_2_TOPOLOGY=FABRIC
```

If the controller is not factory-new, it may have another topology set, in which case these commands will result in an error message. If this happens, take both ports offline first, then reset the topology:

```
SET THIS PORT_1_TOPOLOGY=OFFLINE
```

```
SET THIS PORT_2_TOPOLOGY=OFFLINE
```

```
SET THIS PORT_1_TOPOLOGY=FABRIC
```

```
SET THIS PORT_2_TOPOLOGY=FABRIC
```

8. Set Allocation class to a decimal number between 0 and 999. The number must be unique across the fabric. Set allocation class using the following syntax:

```
SET THIS ALLOCATION_CLASS=N
```

Restarting the Controller

9. Restart the controller, using the following command:

```
RESTART THIS
```

It takes about a minute for the CLI prompt to come back after a RESTART command.

Setting Time and Verifying all Commands

1. Set the time on the controller by entering the following syntax:

```
SET THIS TIME=DD-MMM-YYYY:HH:MM:SS
```

2. Use the FRUTIL utility to set up the battery discharge timer. Enter the following command to start FRUTIL:

```
RUN FRUTIL
```

When FRUTIL asks if you intend to replace the battery, answer “Y”:

```
Do you intend to replace this controller's cache battery? Y/N  
[N] y
```

FRUTIL will print out a procedure, but will not give you a prompt. Ignore the procedure and press the **Enter** key.

3. Set up any additional optional controller settings, such as changing the CLI prompt. See the `SET THIS CONTROLLER/OTHER CONTROLLER` command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for the format of optional settings.
4. Verify that all commands have taken effect. Use the following command:

```
SHOW THIS
```

Verify node ID, allocation class, SCSI version, failover mode, identifier, and port topology.

The following sample is a result of a **SHOW THIS** command, with the areas of interest in bold.

Controller:

HSG80 ZG94214134 Software V8.8, Hardware 0000
NODE_ID = 5000-1FE1-0007-9750
ALLOCATION_CLASS = 01
SCSI_VERSION = SCSI-3
Configured for dual-redundancy with ZG9421461
In dual-redundant configuration

Device Port SCSI address 7

Time: 10-Mar-2002:12:30:34
Command Console LUN is disabled
Smart Error Eject Disabled(IDENTIFIER = 88)

Host PORT_1:

Reported PORT_ID = 5000-1FE1-0007-9751
PORT_1_TOPOLOGY = FABRIC (fabric up)
Address = 7D4000

Host PORT_2:

Reported PORT_ID = 5000-1FE1-0007-9752
PORT_2_TOPOLOGY = FABRIC (standby)
Address = 210513

NOREMOTE_COPY

Cache:

512 megabyte write cache, version 0022
Cache is GOOD
No unflushed data in cache
CACHE_FLUSH_TIMER = DEFAULT (10 seconds)

Mirrored Cache:

Not enabled

Battery:

NOUPS
FULLY CHARGED
Expires: 25-JUN-2003
.....

5. Turn on the switches, if not done previously.

If you want to communicate with the Fibre Channel switches through Telnet, set an IP address for each switch. See the manuals that came with the switches for details.

Plugging in the FC Cable and Verify Connections

6. Plug the Fibre Channel cable from the first host bus adapter into the switch. Enter the `SHOW CONNECTIONS` command to view the connection table:

```
SHOW CONNECTIONS
```

7. Rename the connections to something meaningful to the system and easy to remember. For example, to assign the name `ANGEL1A1` to connection `!NEWCON01`, enter:

```
RENAME !NEWCON01 ANGEL1A1
```

For a recommended naming convention, see “[Naming Connections](#)” on page 34.

8. Specify the operating system for the connection:

```
SET ANGEL1A1 OPERATING_SYSTEM=VMS
```

9. Verify the changes:

```
SHOW CONNECTIONS
```

Mark or tag all Fibre Channel cables at both ends for ease of maintenance.

Repeating Procedure for Each Host Adapter

10. Repeat step 7, 8, and 9 for each of that adapter’s host connections, or delete the unused connections from the table.
11. For each host adapter, repeat steps 6 through 10.

Verifying Installation

To verify installation for your OpenVMS host, enter the following command:

```
SHOW DEVICES
```

OpenVMS

Your host computer should report that it sees a device whose designation matches the identifier (CCL) that you assigned the controllers. For example, if you assigned an identifier of 88, your host computer will see device `1GGA88`. This verifies that your host computer is communicating with the controller.

Setting Up a Controller Pair

Powering Up and Establishing Communication


1. Connect the computer or terminal to the controller as shown in [Figure 30](#). The connection to the computer is through the COM1 or COM2 ports.
2. Turn on the computer or terminal.
3. Apply power to the storage subsystem.
4. Configure the computer or terminal as follows:
 - 9600 baud
 - 8 data bits
 - 1 stop bit
 - no parity
 - no flow control
5. Press **Enter**. A copyright notice and the CLI prompt appear, indicating that you established a local connection with the controller.

Cabling a Controller Pair

The cabling for a controller pair is shown in [Figure 32](#).

Note: It is a good idea to plug only the controller cables into the switch. The host cables are plugged into the switch as part of the configuration procedure ("[Configuring a Controller Pair Using CLI](#)" on page 135).

Figure 32 shows a controller pair with failover cabling showing one HBA per server with HSG80 controller in transparent failover mode.

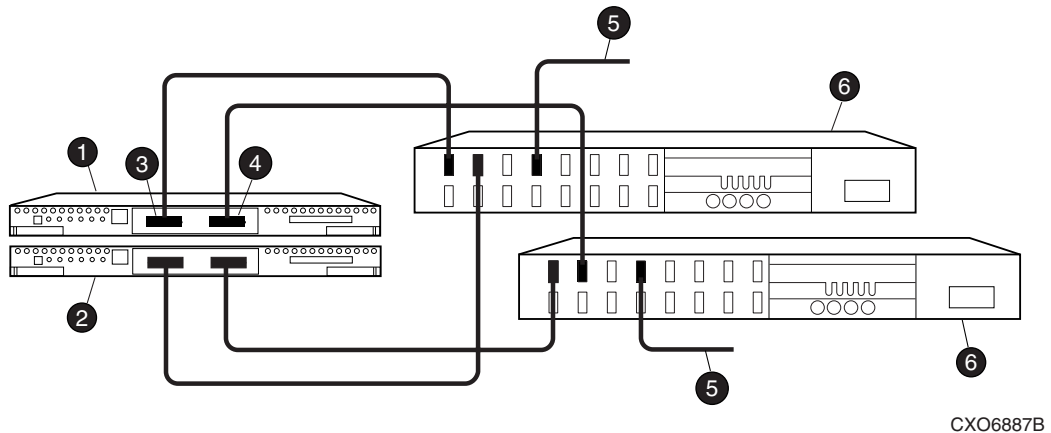

- | | |
|----------------|--|
| ❶ Controller A | ❹ Host port 2 |
| ❷ Controller B | ❺ Cable from the switch to the host FC adapter |
| ❸ Host port 1 | ❻ FC switch |

Figure 32: Controller pair failover cabling

Configuring a Controller Pair Using CLI

To configure a controller pair using CLI:

- Configuring Controller Settings.
- Restarting the Controller.
- Setting Time and Verifying All Commands.
- Plugging in the FC Cable and Verify Connections.
- Repeating Procedure for Each Host Adapter.
- Verifying Installation.

1. Enter a `SHOW THIS` command to verify the node ID:

```
SHOW THIS
```

See “[Worldwide Names \(Node IDs and Port IDs\)](#)” on page 44, for the location of the sticker.

The node ID is located in the third line of the SHOW THIS result:

```
HSG80> show this
```

Controller:

```
HSG80 ZG80900583 Software V8.8, Hardware E11
NODE_ID          = 5000-1FE1-0001-3F00
ALLOCATION_CLASS  = 0
```

If the node ID is present, go to step 5.

If the node ID is all zeroes, enter the node ID and checksum, which are located on a sticker on the controller enclosure. Use the following syntax to enter the node ID:

```
SET THIS NODE_ID=NNNN-NNNN-NNNN-NNNN nn
```

Where: *NNNN-NNNN-NNNN-NNNN* is the node ID and *nn* is the checksum.

2. If the controller is not new from the factory, enter the following command to take it out of any failover mode that may have been previously configured:

```
SET NOFAILOVER
```

If the controller did have a failover mode previously set, the CLI may report an error. Clear the error with this command:

```
CLEAR_ERRORS CLI
```

3. Enter the following command to remove any previously configured connections:

```
SHOW CONNECTIONS
```

A list of named connections, if any, is displayed.

4. Delete these connections by entering the following command:

```
DELETE !NEWCON01
```

Repeat the Delete command for each of the listed connections. When completed, no connections will be displayed.

Configuring Controller Settings

5. Set the SCSI version to SCSI-3 using the following command:

```
SET THIS SCSI_VERSION=SCSI-3
```

Note: Setting the SCSI version to SCSI-3 does not make the controller fully compliant with the SCSI-3 standards.

6. Assign an identifier for the communication LUN (also called the command console LUN, or CCL). The CCL must have a unique identifier that is a decimal number in the range 1 to 32767, and which is different from the identifiers of all units. Use the following syntax:

```
SET THIS IDENTIFIER=N
```

Identifier must be unique among all the controllers attached to the fabric within the specified allocation class.

7. Set the topology for the controller. If both ports are used, set topology for both ports:

```
SET THIS PORT_1_TOPOLOGY=FABRIC
```

```
SET THIS PORT_2_TOPOLOGY=FABRIC
```

If the controller is not factory-new, it may have another topology set, in which case these commands will result in an error message. If this happens, first take both ports offline, then reset the topology:

```
SET THIS PORT_1_TOPOLOGY=OFFLINE
```

```
SET THIS PORT_2_TOPOLOGY=OFFLINE
```

```
SET THIS PORT_1_TOPOLOGY=FABRIC
```

```
SET THIS PORT_2_TOPOLOGY=FABRIC
```

8. Set Allocation class to a decimal number between 0 and 999. The number must be unique across the fabric. Set allocation class using the following syntax:

```
SET THIS ALLOCATION_CLASS=N
```

Restarting the Controller

9. Restart the controller, using the following command:

```
RESTART THIS
```

It takes about a minute for the CLI prompt to come back after a RESTART command.

Setting Time and Verifying All Commands

10. Set the time on the controller by entering the following syntax:

```
SET THIS TIME=DD-MMM-YYYY:HH:MM:SS
```

11. Use the FRUTIL utility to set up the battery discharge timer. Enter the following command to start FRUTIL:

```
RUN FRUTIL
```

When FRUTIL asks if you intend to replace the battery, answer “Y”:

```
Do you intend to replace this controller's cache battery? Y/N  
[N] Y
```

FRUTIL will print out a procedure, but will not give you a prompt. Ignore the procedure and press **Enter**.

12. Set up any additional optional controller settings, such as changing the CLI prompt. See the `SET THIS CONTROLLER/OTHER CONTROLLER` command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for the format of optional settings. Perform this step on both controllers.
13. Verify that all commands have taken effect by entering the following command:

```
SHOW THIS
```

14. Verify node ID, allocation class, SCSI version, failover mode, identifier, and port topology. The following display is a sample result of a **SHOW THIS** command, with the areas of interest in bold.

Controller:

HSG80 ZG94214134 Software V8.8, Hardware 0000
NODE_ID = 5000-1FE1-0007-9750
ALLOCATION_CLASS = 01
SCSI_VERSION = SCSI-3
Configured for dual-redundancy with ZG9421461
In dual-redundant configuration

Device Port SCSI address 7

Time: 10-Mar-2002:12:30:34
Command Console LUN is disabled
Smart Error Eject Disabled(IDENTIFIER = 88)

Host PORT_1:

Reported PORT_ID = 5000-1FE1-0007-9751
PORT_1_TOPOLOGY = FABRIC (fabric up)
Address = 7D4000

Host PORT_2:

Reported PORT_ID = 5000-1FE1-0007-9752
PORT_2_TOPOLOGY = FABRIC (standby)
Address = 210513

NOREMOTE_COPY

Cache:

512 megabyte write cache, version 0022
Cache is GOOD
No unflushed data in cache
CACHE_FLUSH_TIMER = DEFAULT (10 seconds)

Mirrored Cache:

Not enabled

Battery:

NOUPS
FULLY CHARGED
Expires: 25-JUN-2003

15. Turn on the switches if not done previously.

If you want to communicate with the FC switches through Telnet, set an IP address for each switch. See the manuals that came with the switches for details.

Plugging in the FC Cable and Verify Connections

16. Plug the FC cable from the first host adapter into the switch. Enter a `SHOW CONNECTIONS` command to view the connection table:

```
SHOW CONNECTIONS
```

The first connection will have one or more entries in the connection table. Each connection will have a default name of the form `!NEWCONxx`, where `xx` is a number representing the order in which the connection was added to the connection table.

For a description of why plugging in one adapter can result in multiple connections, see “[Numbers of Connections](#)” on page 35.

17. Rename the connections to something meaningful to the system and easy to remember. For example, to assign the name `ANGEL1A1` to connection `!NEWCON01`, enter:

```
RENAME !NEWCON01 ANGEL1A1
```

HP recommends using a naming convention, see “[Naming Connections](#)” on page 34.

18. Specify the operating system for the connection:

```
SET ANGEL1A1 OPERATING_SYSTEM=VMSAIX_CAMBEX
```

19. Verify the changes:

```
SHOW CONNECTIONS
```

Mark or tag all Fibre Channel cables at both ends for ease of maintenance.

Repeating Procedure for Each Host Adapter Connection

20. Repeat steps 17, 18, and 19 for each of that adapter’s host connections or delete the unwanted connections from the table.
21. For each host adapter, repeat steps 16 through 20.

Verifying Installation

To verify installation for your OpenVMS host, enter the following command:

```
SHOW DEVICES
```

Your host computer should report that it sees a device whose designation matches the identifier (CCL) that you assigned the controllers. For example, if you assigned an identifier of **88**, your host computer will see device **\$1\$GGA88**. This verifies that your host computer is communicating with the controller pair.

Configuring Devices

The disks on the device bus of the HSG80 can be configured manually or with the CONFIG utility. The CONFIG utility is easier. Invoke CONFIG with the following command:

```
RUN CONFIG
```



WARNING: It is highly recommended to use the CONFIG utility only at reduced I/O loads.

CONFIG takes about two minutes to discover and to map the configuration of a completely populated storage system.

Configuring Storage Containers

For a technology refresher on this subject, refer to “[Choosing a Container Type](#)” on page 60.

In choosing a container, you choose between independent disks (JBODs) or one of several storage set types, as shown in [Figure 33](#). The independent disks and the selected storage set may also be partitioned.

The following configurations are detailed in the following sections:

- [Configuring a Stripeset](#), page 142
- [Configuring a Mirrorset](#), page 143
- [Configuring a RAIDset](#), page 144
- [Configuring a Striped Mirrorset](#), page 144

- [Configuring a Single-Disk Unit \(JBOD\)](#), page 145
- [Configuring a Partition](#), page 146

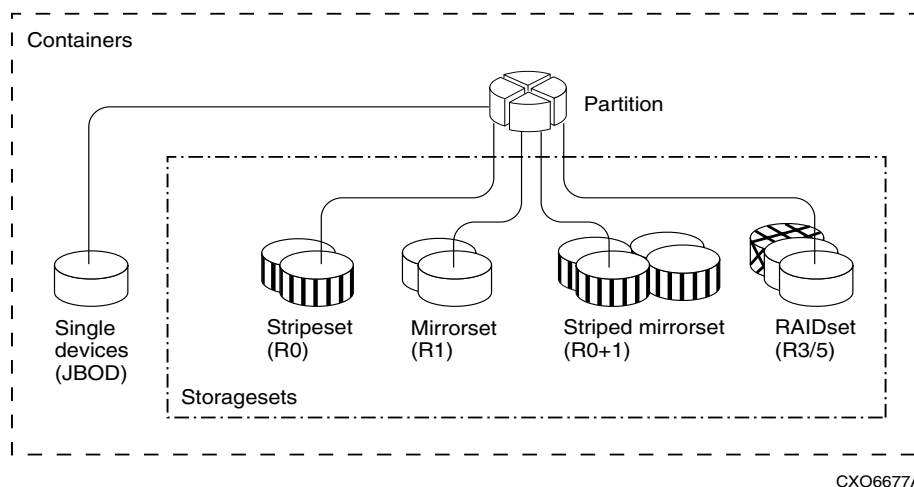


Figure 33: Storage container types

Configuring a Stripeset

1. Create the stripeset by adding its name to the controller's list of storageesets and by specifying the disk drives it contains. Use the following syntax:

```
ADD STRIPESET STRIPESET-NAME DISKNNNNN DISKNNNNN.....
```

2. Initialize the stripeset, specifying any desired switches:

```
INITIALIZE STRIPESET-NAME SWITCHES
```

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

3. Verify the stripeset configuration:

```
SHOW STRIPESET-NAME
```

4. Assign the stripeset a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

For example:

The commands to create Stripe1, a stripeset consisting of three disks (DISK10000, DISK20000, and DISK10100) and having a chunksize of 128:

```
ADD STRIPESSET STRIPE1 DISK10000 DISK20000 DISK30000
INITIALIZE STRIPE1 CHUNKSIZE=128
SHOW STRIPE1
```

Configuring a Mirrorset

1. Create the mirrorset by adding its name to the controller's list of storage sets and by specifying the disk drives it contains. Optionally, you can append mirrorset switch values:

```
ADD MIRRORSET MIRRORSET-NAME DISKNNNNN DISKNNNNN SWITCHES
```

Note: See the ADD MIRRORSET command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for a description of the mirrorset switches.

2. Initialize the mirrorset, specifying any desired switches:

```
INITIALIZE MIRRORSET-NAME SWITCHES
```

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

3. Verify the mirrorset configuration:

```
SHOW MIRRORSET-NAME
```

4. Assign the mirrorset a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

For example:

The commands to create Mirr1, a mirrorset with two members (DISK10000 and DISK20000), and to initialize it using default switch settings:

```
ADD MIRRORSET MIRR1 DISK10000 DISK20000
INITIALIZE MIRR1
SHOW MIRR1
```

Configuring a RAIDset

1. Create the RAIDset by adding its name to the controller's list of storagesets and by specifying the disk drives it contains. Optionally, you can specify RAIDset switch values:

```
ADD RAIDSET RAIDSET-NAME DISKNNNNN DISKNNNNN DISKNNNNN SWITCHES
```

Note: See the ADD RAIDSET command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for a description of the RAIDset switches.

2. Initialize the RAIDset, specifying any desired switches:

```
INITIALIZE RAIDSET-NAME SWITCH
```

Note: HP recommends that you allow initial reconstruct to complete before allowing I/O to the RAIDset. Not doing so may generate forced errors at the host level. To determine whether initial reconstruct has completed, enter SHOW RAIDSET FULL.

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

3. Verify the RAIDset configuration:

```
SHOW RAIDSET-NAME
```
4. Assign the RAIDset a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

For example:

The commands to create RAID1, a RAIDset with three members (DISK10000, DISK20000, and DISK10100) and to initialize it with default values:

```
ADD RAIDSET RAID1 DISK10000 DISK20000 DISK30000
INITIALIZE RAID1
SHOW RAID1
```

Configuring a Striped Mirrorset

1. Create, but do not initialize, at least two mirrorsets.

See “[Configuring a Mirrorset](#)” on page 143.

2. Create a stripeset and specify the mirrorsets it contains:

```
ADD STRIPESSET STRIPESSET-NAME MIRRORSET-1
MIRRORSET-2...MIRRORSET-N
```

3. Initialize the striped mirrorset, specifying any desired switches:

```
INITIALIZE STRIPESSET-NAME SWITCH
```

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

4. Verify the striped mirrorset configuration:

```
SHOW STRIPESSET-NAME
```

5. Assign the stripeset mirrorset a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

For example:

The commands to create Stripe1, a striped mirrorset that comprises Mirr1, Mirr2, and Mirr3, each of which is a two-member mirrorset:

```
ADD MIRRORSET MIRR1 DISK10000 DISK20000
ADD MIRRORSET MIRR2 DISK20100 DISK10100
ADD MIRRORSET MIRR3 DISK10200 DISK20200
ADD STRIPESSET STRIPE1 MIRR1 MIRR2 MIRR3
INITIALIZE STRIPE1
SHOW STRIPE1
```

Configuring a Single-Disk Unit (JBOD)

1. Initialize the disk drive, specifying any desired switches:

```
INITIALIZE DISK-NAME SWITCHES
```

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

2. Verify the configuration by entering the following command:

```
SHOW DISK-NAME
```

3. Assign the disk a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

Configuring a Partition

1. Initialize the storageset or disk drive, specifying any desired switches:

```
INITIALIZE STORAGESET-NAME SWITCHES
```

or

```
INITIALIZE DISK-NAME SWITCHES
```

See “[Specifying Initialization Switches](#)” on page 77 for a description of the initialization switches.

2. Create each partition in the storageset or disk drive by indicating the partition's size. Also specify any desired switch settings:

```
CREATE_PARTITION STORAGESET-NAME SIZE=N SWITCHES
```

or

```
CREATE_PARTITION DISK-NAME SIZE=N SWITCHES
```

where N is the percentage of the disk drive or storageset that will be assigned to the partition. Enter SIZE=LARGEST, on the last partition only, to let the controller assign the largest free space available to the partition.

Note: See the CREATE_PARTITION command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide* for a description of the partition switches.

3. Verify the partitions:

```
SHOW STORAGESET-NAME
```

or

```
SHOW DISK-NAME
```

The partition number appears in the first column, followed by the size and starting block of each partition.

4. Assign the partition a unit number to make it accessible by the hosts. See “[Assigning Unit Numbers and Unit Qualifiers](#)” on page 147.

For example:

The commands to create RAID1, a three-member RAIDset, then partition it into two storage units are shown below.

```
ADD RAIDSET RAID1 DISK10000 DISK20000 DISK30000
INITIALIZE RAID1
CREATE_PARTITION RAID1 SIZE=25
CREATE_PARTITION RAID1 SIZE=LARGEST
SHOW RAID1
```

Assigning Unit Numbers and Unit Qualifiers

Each storageset, partition, or single (JBOD) disk must be assigned a unit number for the host to access. As the units are added, their properties can be specified through the use of command qualifiers, which are discussed in detail under the ADD UNIT command in the *HP StorageWorks HSG60 and HSG80 Array Controller and Array Controller Software Command Line Interface (CLI) Reference Guide*.

Because of different SCSI versions, refer to the section “[Assigning Unit Numbers Depending on SCSI_VERSION](#)” on page 37. The choice for SCSI_VERSION effects how certain unit numbers and host connection offsets interact.

Each unit can be reserved for the exclusive use of a host or group of hosts. “[Restricting Host Access in Multiple-Bus Failover Mode](#)” on page 41

Assigning a Unit Number to a Storageset

To assign a unit number to a storageset, use the following syntax:

```
ADD UNIT UNIT-NUMBER STORAGESET-NAME
```

For example:

To assign unit D102 to RAIDset R1, use the following command:

```
ADD UNIT D102 R1
```

Assigning a Unit Number to a Single (JBOD) Disk

To assign a unit number to a single (JBOD) disk, use the following syntax:

```
ADD UNIT UNIT-NUMBER DISK-NAME
```

For example:

To assign unit D4 to DISK20300, use the following command:

```
ADD UNIT D4 DISK20300
```

Assigning a Unit Number to a Partition

To assign a unit number to a partition, use the following syntax:

```
ADD UNIT UNIT-NUMBER STORAGESET-NAME PARTITION=PARTITION-NUMBER
```

For example:

To assign unit D100 to partition 3 of mirrorset mirr1, use the following command:

```
ADD UNIT D100 MIRR1 PARTITION=3
```

Assigning Unit Identifiers

One unique step is required when configuring storage units for OpenVMS: specifying an identifier (or LUN ID alias) for each unit. A unique identifier is required for each unit (virtual disk). This identifier must be unique in the cluster.

This section gives two examples of setting an identifier for a previously created unit: one using CLI and one using SWCC. The CLI uses the older terms “identifier” and “unit”, while SWCC uses the terms “LUN ID alias” and “virtual disk”.

Identifier = LUN ID alias

Unit = virtual disk

Using CLI to Specify Identifier for a Unit

The command syntax for setting the identifier for a previously created unit (virtual disk) follows:

```
SET UNIT_NUMBER IDENTIFIER=NN
```

Note: It is strongly suggested that, for simplicity, the identifier match the unit number. For example, to set an identifier of 97 for unit D97, use the following command:

```
SET D97 IDENTIFIER=97
```

Using SWCC to Specify LUN ID Alias for a Virtual Disk

Setting a LUN ID alias for a virtual disk is the same as setting a unit identifier. To set the LUN ID alias for a previously created virtual disk, perform the following procedure:

1. Open the storage window, where you see the properties for that virtual disk.
2. Click on the Settings Tab to see changeable properties.
3. Click on the **Enable LUN ID Alias** button.
4. Enter the LUN ID alias (identifier) in the appropriate field. It is strongly suggested that, for simplicity, the LUN ID alias match the virtual disk number.

Note: If, while using the StorageWorks HBA, you create a unit after your server is online, you must run the `SaveCfg` command to see the unit.

Preferring Units

In multiple-bus failover mode, individual units can be preferred to a specific controller. For example, to prefer unit D102 to “this controller,” use the following command:

```
SET D102 PREFERRED_PATH=THIS
```

RESTART commands must be issued to both controllers for this command to take effect:

```
RESTART OTHER_CONTROLLER  
RESTART THIS_CONTROLLER
```

Note: The controllers need to restart together for the preferred settings to take effect. The `RESTART this_controller` command must be entered immediately after the `RESTART other_controller` command.

Configuration Options

Changing the CLI Prompt

To change the CLI prompt, enter a 1- to 16-character string as the new prompt, according to the following syntax:

```
SET THIS_CONTROLLER PROMPT = "NEW PROMPT"
```

If you are configuring dual-redundant controllers, also change the CLI prompt on the “other controller.” Use the following syntax:

```
SET OTHER_CONTROLLER PROMPT = "NEW PROMPT"
```

Note: It is suggested that the prompt name reflect some information about the controllers. For example, if the subsystem is the third one in a lab, name the top controller prompt, LAB3A and the bottom controller, LAB3B.

Mirroring cache

To specify mirrored cache, use the following syntax:

```
SET THIS MIRRORED_CACHE
```

Adding Disk Drives

If you add new disk drives to the subsystem, the disk drives must be added to the controllers’ list of known devices:

- To add one new disk drive to the list of known devices, use the following syntax:

```
ADD DISK DISKNNNNN P T L
```

- To add several new disk drives to the list of known devices, enter the following command:

```
RUN CONFIG
```

Adding a Disk Drive to the Spareset

The spareset is a collection of spare disk drives that are available to the controller should it need to replace a failed member of a RAIDset or mirrorset.

Note: This procedure assumes that the disks that you are adding to the spareset have already been added to the controller's list of known devices.

To add the disk drive to the controller's spareset list, use the following syntax:

```
ADD SPARESET DISKNNNNN
```

Repeat this step for each disk drive you want to add to the spareset:

For example:

The following example shows the syntax for adding DISK11300 and DISK21300 to the spareset.

```
ADD SPARESET DISK11300
```

```
ADD SPARESET DISK21300
```

Removing a Disk Drive from the Spareset

You can delete disks in the spareset if you need to use them elsewhere in your subsystem.

1. Show the contents of the spareset entering the following command:

```
SHOW SPARESET
```

2. Delete the desired disk drive entering the following command:

```
DELETE SPARESET DISKNNNNN
```

The RUN CONFIG command does not delete disks from the controllers' device table if a disk has been physically removed or replaced. In this case, you must use the command: DELETE DISKNNNNN.

3. Verify the contents of the spareset by entering the following command:

```
SHOW SPARESET
```

Enabling Autospare

With AUTOSPARE enabled on the failedset, any new disk drive that is inserted into the PTL location of a failed disk drive is automatically initialized and placed into the spareset. If initialization fails, the disk drive remains in the failedset until you manually delete it from the failedset.

To enable autospare, use the following command:

```
SET FAILEDSET AUTOSPARE
```

To disable autospare, use the following command:

```
SET FAILEDSET NOAUTOSPARE
```

During initialization, AUTOSPARE checks to see if the new disk drive contains metadata. Metadata is information the controller writes on the disk drive when the disk drive is configured into a storageset. Therefore, the presence of metadata indicates that the disk drive belongs to, or has been used by, a storageset. If the disk drive contains metadata, initialization stops.

Note: A new disk drive will not contain metadata but a repaired or reused disk drive might. To erase metadata from a disk drive, add it to the controller's list of devices, then set it to be nontransportable and initialize it.

Deleting a Storageset

Note: If the storageset you are deleting is partitioned, you must delete each partitioned unit before you can delete the storageset.

1. Show the storageset's configuration:

```
SHOW STORAGESET-NAME
```

2. Delete the unit number that uses the storageset. Use the following command:

```
DELETE UNIT-NUMBER
```

3. Delete the storageset. Use the following command:

```
DELETE STORAGESET-NAME
```

4. Verify the configuration:

```
SHOW STORAGESET-NAME
```

Changing Switches for a Storageset or Device

You can optimize a storageset or device at any time by changing the switches that are associated with it. Remember to update the storageset profile when changing its switches.

Displaying the Current Switches

To display the current switches for a storageset or single-disk unit, enter a `SHOW` command, specifying the `FULL` switch:

```
SHOW STORAGESET-NAME
```

or

```
SHOW DEVICE-NAME
```

Note: `FULL` is not required when showing a particular device. It is used when showing all devices, for example, `SHOW DEVICES FULL`.

Changing RAIDset and Mirrorset Switches

Use the `SET storageset-name` command to change the RAIDset and Mirrorset switches associated with an existing storageset.

For example, the following command changes the replacement policy for RAIDset RAID1 to `BEST_FIT`:

```
SET RAID1 POLICY=BEST_FIT
```

Changing Device Switches

Use the `SET device-name` command to change the device switches.

For example, to request a data transfer rate of 20 MHz for DISK10000:

```
SET DISK10000 TRANSFER_RATE_REQUESTED=20MHZ
```

Changing Initialize Switches

The initialization switches cannot be changed without destroying the data on the storageset or device. These switches are integral to the formatting and can only be changed by reinitializing the storageset. Initializing a storageset is similar to formatting a disk drive; all data is destroyed during this procedure.

Changing Unit Switches

Use the `SET unit-name` command to change the characteristics of a unit.

For example, the following command enables write protection for unit D100:

```
SET D100 WRITE_PROTECT
```

Verifying Storage Configuration from Host

This section briefly describes how to verify that multiple paths exist to virtual disk units under OpenVMS.

After configuring units (virtual disks) through either the CLI or SWCC, reboot the host to enable access to the new storage and enter the following command to rescan the bus:

```
$ MC SYSMAN ID AUTO
```

After the host restarts, verify that the disk is correctly presented to the host. The command to use consists of the following syntax:

```
$ SHOW DEVICE/FULL <NAME OF VIRTUAL DISK>
```

For example, disk \$1\$DGA1 was configured with two paths; one path through host bus adapter PGA0, and one through host bus adapter PGB0.

Use the following command to verify the configuration:

```
$ SHOW DEVICE/FULL $1$DGA1
```

The disk information returned is shown in the following display:

```
Disk $1$DGA1: (NOCORD), device type DEC HSG80, is online, file-oriented
device, shareable, device has multiple I/O paths, served to cluster via
MSCP Server, error logging is enabled.

Error count 0      Operations completed 0
Owner process ""   Owner UIC      [SYSTEM]
Owner process ID   00000000      Dev Prot S:RWPL,O:RWPL,G:R,W
Reference count 0   Default buffer size 512
Allocation class   1
I/O paths to device 2

Path PGA0.5000-1FE1-0000-0173 (NOCORD), primary path, current path.
Error count 0      Operations completed 0

Path PGB0.5000-1FE1-0000-0171 (NOCORD).
Error count 0      Operations completed 0
```

Using CLI for Configuration

6

This chapter presents an example of how to configure a storage subsystem using the Command Line Interpreter (CLI). The CLI configuration example shown assumes:

- A normal, new controller pair, which includes:
 - NODE ID set
 - No previous failover mode
 - No previous topology set
- Full array with no expansion cabinet
- PCMCIA cards installed in both controllers

A storage subsystem example is shown in [Figure 34](#). The example system contains three non-clustered VMS hosts, as shown in [Figure 36](#). From the hosts' point of view, each host will have four paths to its own virtual disks. The resulting virtual system, from the host's point of view, is shown in [Figure 36](#).


Figure 34 shows an example storage system map for the BA370 enclosure. Details on building your own map are described in Chapter 2. Templates to help you build your storage map are supplied in Appendix A.

Port										
	1	2	3	4	5	6				
Power Supply	D2 S2 DISK10300	D2 S2 DISK20300	D2 S2 DISK30300	D2 S2 DISK40300	D2 D101 DISK50300	spareset member DISK60300	Power Supply	3	Targets	
Power Supply	D0 S1 M1 DISK10200	D0 S1 M1 DISK20200	D0 S1 M2 DISK30200	D0 S1 M2 DISK40200	D1 M3 DISK50200	D1 M3 DISK60200	Power Supply	2		
Power Supply	D120 R2 DISK10100	D120 R2 DISK20100	D120 R2 DISK30100	D120 R2 DISK40100	D120 R2 DISK50100	D120 R2 DISK60100	Power Supply	1		
Power Supply	D102 R1 DISK10000	D102 R1 DISK20000	D102 R1 DISK30000	D102 R1 DISK40000	D102 R1 DISK50000	D102 R1 DISK60000	Power Supply	0		

Figure 34: Example storage map for the BA370 Enclosure

Figure 35 shows a representative multiple-bus failover configuration. Restricting the access of unit D101 to host BLUE can be done by enabling only the connections to host BLUE. At least two connections must be enabled for

multiple-bus failover to work. For most operating systems, it is desirable to have all connections to the host enabled. The example system, shown in [Figure 36](#), contains three non-clustered VMS hosts.

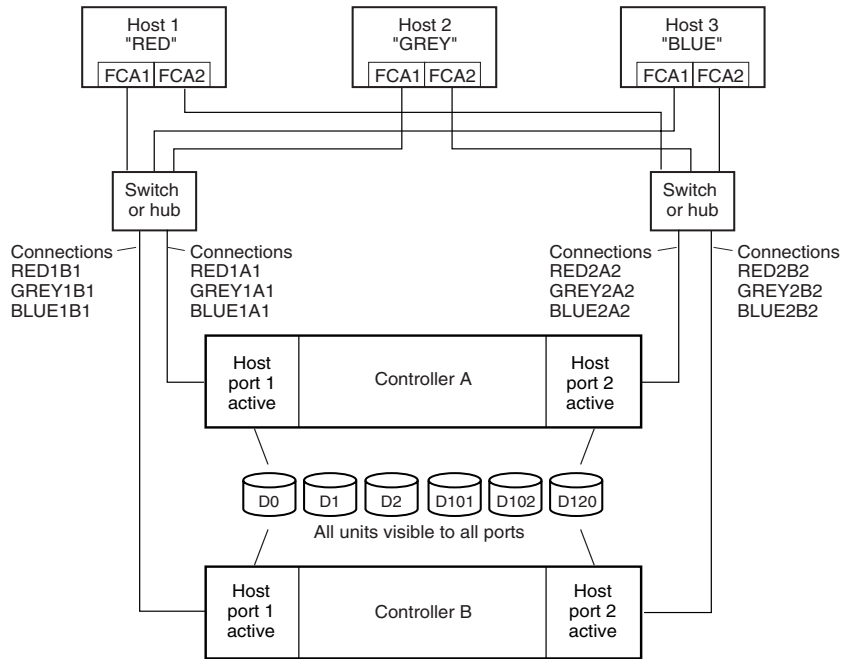

NOTE: FCA = Fibre Channel Adapter

CX07109B

Figure 35: Example, three non-clustered host systems

[Figure 36](#) represents units that are logical or virtual disks comprised of storagesets configured from physical disks.

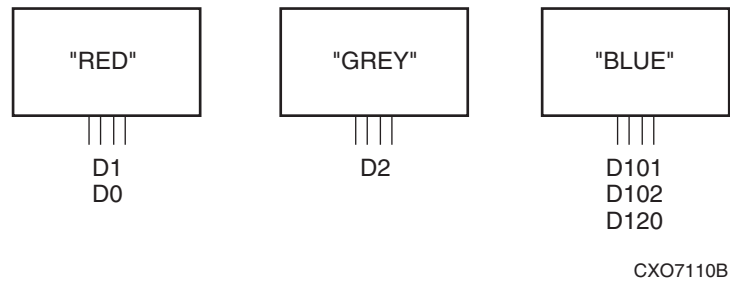


Figure 36: Example, logical or virtual disks comprised of storagesets

CLI Configuration Example

Text conventions used in this example are listed below:

- Text in *italics* indicates an action you take.
- Text in THIS FORMAT, indicates a command you type. Be certain to press **Enter** after each command.
- Text enclosed within a box, indicates information that is displayed by the CLI interpreter.

Note: "This" controller is top controller (A).

Plug serial cable from maintenance terminal into top controller.

```
CLEAR CLI
SET MULTIBUS COPY=THIS
CLEAR CLI
```

```

SET THIS SCSI_VERSION=SCSI-3
SET THIS IDENTIFIER=88
SET THIS PORT_1_TOPOLOGY=FABRIC
SET THIS PORT_2_TOPOLOGY=FABRIC
SET OTHER PORT_1_TOPOLOGY=FABRIC
SET OTHER PORT_2_TOPOLOGY=FABRIC
SET THIS ALLOCATION_CLASS=1
RESTART OTHER
RESTART THIS
SET THIS TIME=10-Mar-2001:12:30:34
RUN FRUTIL

```

```

Do you intend to replace this controller's cache
battery? Y/N [Y]

```

Y

Plug serial cable from maintenance terminal into bottom controller.

Note: Bottom controller (B) becomes “this” controller.

```

RUN FRUTIL

```

```

Do you intend to replace this controller's cache
battery? Y/N [Y]

```

Y

```

SET THIS MIRRORED_CACHE

```

Note: This command causes the controllers to restart.

```

SET THIS PROMPT="BTVS BOTTOM"
SET OTHER PROMPT="BTVS TOP"
SHOW THIS
SHOW OTHER

```

Plug in the Fibre Channel cable from the first adapter in host “RED.”

```

SHOW CONNECTIONS

```

```

RENAME !NEWCON00 RED1B1
SET RED1B1 OPERATING_SYSTEM=VMS
RENAME !NEWCON01 RED1A1
SET RED1A1 OPERATING_SYSTEM=VMS
SHOW CONNECTIONS

```

Note: Connection table sorts alphabetically.

Connection Name	Operating System	Controller	Port	Address	Status	Unit Offset
RED1A1	VMS	OTHER	1	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED1B1	VMS	THIS	1	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			

Mark or tag both ends of Fibre Channel cables.

Plug in the Fibre Channel cable from the second adapter in host “RED.”

```
SHOW CONNECTIONS
```

Connection Name	Operating System	Controller	Port	Address	Status	Unit Offset
!NEWCON02	VMS	THIS	2	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
!NEWCON03	VMS	OTHER	2	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED1A1	VMS	OTHER	1	XXXXXX	OL other	0
...						


```

RENAME !NEWCON02 RED2B2
SET RED2B2 OPERATING_SYSTEM=VMS
RENAME !NEWCON02 RED2A2
SET RED2A2 OPERATING_SYSTEM=VMS
SHOW CONNECTIONS

```

Connection Name	Operating System	Controller	Port	Address	Status	Unit Offset
RED1A1	VMS	OTHER	1	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED1B1	VMS	THIS	1	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED2A2	VMS	OTHER	2	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED2B2	VMS	THIS	2	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			

Mark or tag both ends of Fibre Channel cables

Repeat this process to add connections from the other two hosts. The resulting connection table should appear similar to the following:

Connection Name	Operating System	Controller	Port	Address	Status	Unit Offset
GREY1A1	VMS	OTHER	1	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
GREY1B1	VMS	THIS	1	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
GREY2A2	VMS	OTHER	2	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
GREY2B2	VMS	THIS	2	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			

(Continued)

Connection Name	Operating System	Controller	Port	Address	Status	Unit Offset
BLUE1A1	VMS	OTHER	1	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
BLUE1B1	VMS	THIS	1	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
BLUE2A2	VMS	OTHER	2	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
BLUE2B2	VMS	THIS	2	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED1A1	VMS	OTHER	1	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED1B1	VMS	THIS	1	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED2A2	VMS	OTHER	2	XXXXXX	OL other	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			
RED2B2	VMS	THIS	2	XXXXXX	OL this	0
HOST_ID=XXXX-XXXX-XXXX-XXXX			ADAPTER_ID=XXXX-XXXX-XXXX-XXXX			

```
SET CONNECTION BLUE1A1 UNIT_OFFSET=100
SET CONNECTION BLUE1B1 UNIT_OFFSET=100
SET CONNECTION BLUE2A2 UNIT_OFFSET=100
SET CONNECTION BLUE2B2 UNIT_OFFSET=100
RUN CONFIG
ADD RAIDSET R1 DISK10000 DISK20000 DISK30000 DISK40000 DISK50000
DISK60000
INITIALIZE R1
ADD UNIT D102 R1 DISABLE_ACCESS_PATH=ALL
SET D102 ENABLE_ACCESS_PATH=(RED1A1, RED1B1, RED2A2, RED2B2)
SET D102 IDENTIFIER=102
ADD RAIDSET R2 DISK10100 DISK20100 DISK30100 DISK40100 DISK50100
DISK60100
INITIALIZE R2
ADD UNIT D120 R2 DISABLE_ACCESS_PATH=ALL
SET D120 ENABLE_ACCESS_PATH=(BLUE1A1, BLUE1B1, BLUE2A2,
BLUE2B2)
SET D120 IDENTIFIER=120
ADD MIRRORSET MI DISK10200 DISK20200
ADD MIRRORSET M2 DISK30200 DISK40200
ADD STRIPESSET S1 M1 M2
INITIALIZE S1
ADD UNIT D0 S1 DISABLE_ACCESS_PATH=ALL
SET D0 ENABLE_ACCESS_PATH=(GREY1A1, GREY1B1, GREY2A2, GREY2B2)
SET D0 IDENTIFIER=0
ADD MIRRORSET M3 DISK50200 DISK60200
INITIALIZE M3
ADD UNIT D1 M3 DISABLE_ACCESS_PATH=ALL
SET D1 ENABLE_ACCESS_PATH=(BLUE1A1, BLUE1B1, BLUE2A2, BLUE2B2)
SET D1 IDENTIFIER=1
ADD STRIPESSET S2 DISK10300 DISK20300 DISK30300 DISK40300
INITIALIZE S2
ADD UNIT D2 S2 DISABLE_ACCESS_PATH=ALL
SET D2 ENABLE_ACCESS_PATH=(GREY1A1, GREY1B1, GREY2A2, GREY2B2)
SET D2 IDENTIFIER=2
```

```
INITIALIZE DISK50300
ADD UNIT D101 DISK50300 DISABLE_ACCESS_PATH=ALL

SET D101 ENABLE_ACCESS_PATH=(BLUE1A1, BLUE1B1, BLUE2A2,
BLUE2B2)

SET D101 IDENTIFIER=101

ADD SPARESET DISK60300
SHOW UNITS FULL
```

Backing Up, Cloning, and Moving Data



This chapter includes the following topics:

- [Backing Up Subsystem Configurations](#), page 166
- [Creating Clones for Backup](#), page 167
- [Moving Storagesets](#), page 171

Backing Up Subsystem Configurations

The controller stores information about the subsystem configuration in its nonvolatile memory. This information could be lost if the controller fails or when you replace a module in the subsystem.

Use the following command to produce a display that shows if the save configuration feature is active and which devices are being used to store the configuration.

```
SHOW THIS_CONTROLLER FULL
```

The resulting display includes a line that indicates status and how many devices have copies of the configuration. The last line shows on how many devices the configuration is backed up.

Note: DO NOT use SAVE_CONFIGURATION in dual redundant controller installations. It is not supported and may result in unexpected controller behavior.

The SHOW DEVICES FULL command shows which disk drives are set up to back up the configuration. The syntax for this command is shown below:


```
SHOW DEVICES FULL
```

Creating Clones for Backup

Use the CLONE utility to duplicate the data on any unpartitioned single-disk unit, stripeset, mirrorset, or striped mirrorset in preparation for backup. When the cloning operation is complete, you can back up the clones rather than the storageset or single-disk unit, which can continue to service its I/O load. When you are cloning a mirrorset, CLONE does not need to create a temporary mirrorset. Instead, it adds a temporary member to the mirrorset and copies the data onto this new member.

The CLONE utility creates a temporary, two-member mirrorset for each member in a single-disk unit or stripeset. Each temporary mirrorset contains one disk drive from the unit you are cloning and one disk drive onto which CLONE copies the data. During the copy operation, the unit remains online and active so that the clones contain the most up-to-date data.

After the CLONE utility copies the data from the members to the clones, it restores the unit to its original configuration and creates a clone unit you can back up. The CLONE utility uses the steps shown in [Figure 37](#) to duplicate each member of a unit.

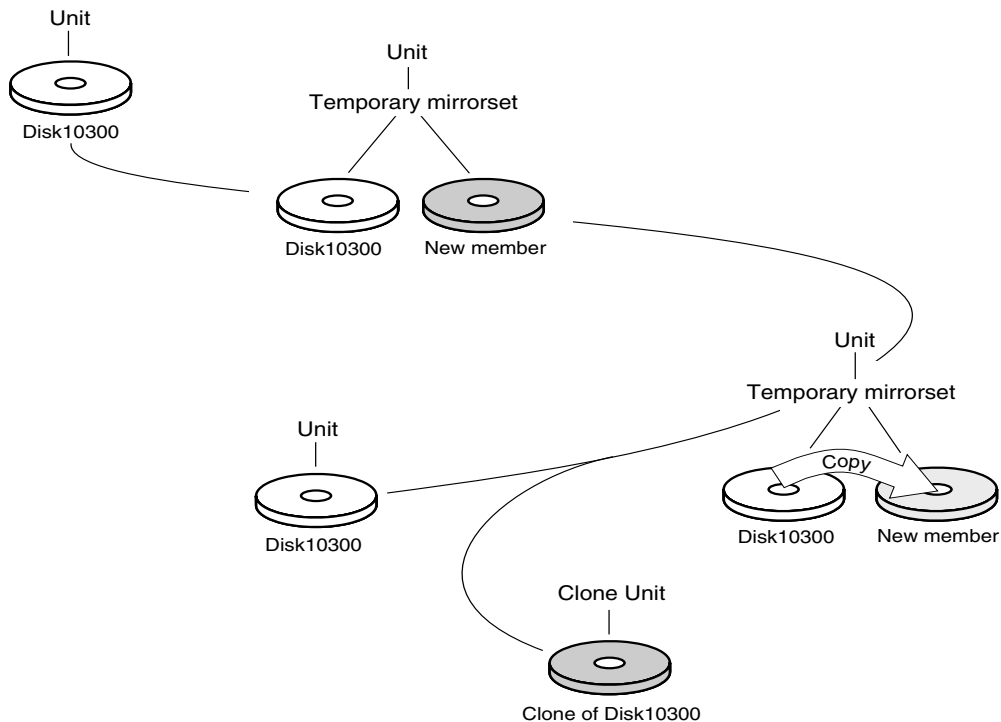

CXO5510A

Figure 37: CLONE utility steps for duplicating unit members

Use the following steps to clone a single-disk unit, stripeset, or mirrorset:

1. Establish a connection to the controller that accesses the unit you want to clone.
2. Start CLONE using the following command:

```
RUN CLONE
```
3. When prompted, enter the unit number of the unit you want to clone.
4. When prompted, enter a unit number for the clone unit that CLONE will create.
5. When prompted, indicate how you would like the clone unit to be brought online: either automatically or only after your approval.
6. When prompted, enter the disk drives you want to use for the clone units.
7. Back up the clone unit.

The following example shows the commands you would use to clone storage unit D6. The clone command terminates after it creates storage unit D33, a clone or copy of D6.

```
RUN CLONE
CLONE LOCAL PROGRAM INVOKED
UNITS AVAILABLE FOR CLONING:
    98
ENTER UNIT TO CLONE? 98
CLONE WILL CREATE A NEW UNIT WHICH IS A COPY OF UNIT 98.
ENTER THE UNIT NUMBER WHICH YOU WANT ASSIGNED TO THE NEW UNIT?
99
THE NEW UNIT MAY BE ADDED USING ONE OF THE FOLLOWING METHODS:
1. CLONE WILL PAUSE AFTER ALL MEMBERS HAVE BEEN COPIED. THE USER
MUST THEN PRESS RETURN TO CAUSE THE NEW UNIT TO BE ADDED.
2. AFTER ALL MEMBERS HAVE BEEN COPIED, THE UNIT WILL BE ADDED
AUTOMATICALLY.
UNDER WHICH ABOVE METHOD SHOULD THE NEW UNIT BE ADDED[ ]? 1
DEVICES AVAILABLE FOR CLONE TARGETS:
DISK20200 (SIZE=832317)
DISK20300 (SIZE=832317)
USE AVAILABLE DEVICE DISK20200(SIZE=832317) FOR MEMBER
DISK10300(SIZE=832317) (Y,N) [Y]? Y
MIRROR DISK10300 C_MA
SET C_MA NOPOLICY
SET C_MA MEMBERS=2
SET C_MA REPLACE=DISK20200
DEVICES AVAILABLE FOR CLONE TARGETS:
DISK20300 (SIZE=832317)
```

```
USE AVAILABLE DEVICE DISK20300 (SIZE=832317) FOR MEMBER
DISK10000 (SIZE=832317) (Y,N) [Y]? Y

MIRROR DISK10000 C_MB

SET C_MB NOPOLICY

SET C_MB MEMBERS=2

SET C_MB REPLACE=DISK20300

COPY IN PROGRESS FOR EACH NEW MEMBER. PLEASE BE PATIENT...

.

.

COPY FROM DISK10300 TO DISK20200 IS 100% COMPLETE
COPY FROM DISK10000 TO DISK20300 IS 100% COMPLETE
PRESS RETURN WHEN YOU WANT THE NEW UNIT TO BE CREATED
REDUCE DISK20200 DISK20300

UNMIRROR DISK10300
UNMIRROR DISK10000

ADD MIRRORSET C_MA          DISK20200
ADD MIRRORSET C_MB          DISK20300
ADD STRIPESet C_ST1 C_MA C_MB
INIT C_ST1          NODESTROY
ADD UNIT D99 C_ST1

D99 HAS BEEN CREATED. IT IS A CLONE OF D98.

CLONE - NORMAL TERMINATION
```

Moving Storage Sets

You can move a storage set from one subsystem to another without destroying its data. You also can follow the steps in this section to move a storage set to a new location within the same subsystem.



Caution: Move only normal storage sets. Do not move storage sets that are reconstructing or reduced, or data corruption will result.

See the release notes for the version of your controller software for information on which drives can be supported.



Caution: Never initialize any container or this procedure will not protect data in the storage set.

Use the following procedure to move a storage set, while maintaining the data the storage set contains:

1. Show the details for the storage set you want to move. Use the following command:

```
SHOW STORAGESET-NAME
```

2. Label each member with its name and PTL location.

If you do not have a storage set map for your subsystem, you can enter the LOCATE command for each member to find its PTL location. Use the following command:

```
LOCATE DISK-NAME
```

To cancel the locate command, enter the following:

```
LOCATE CANCEL
```

3. Delete the unit number shown in the “Used by” column of the SHOW storage set-name command. Use the following syntax:

```
DELETE UNIT-NUMBER
```

4. Delete the storage set shown in the “Name” column of the SHOW storage set-name command. Use the following syntax:

```
DELETE STORAGESET-NAME
```

5. Delete each disk drive, one at a time, that the storageset contained. Use the following syntax:

```
DELETE DISK-NAME
```

```
DELETE DISK-NAME
```

```
DELETE DISK-NAME
```

6. Remove the disk drives and move them to their new PTL locations.

7. Again add each disk drive to the controller's list of valid devices. Use the following syntax:

```
ADD DISK DISK-NAME PTL-LOCATION
```

```
ADD DISK DISK-NAME PTL-LOCATION
```

```
ADD DISK DISK-NAME PTL-LOCATION
```

8. Recreate the storageset by adding its name to the controller's list of valid storagesets and by specifying the disk drives it contains. (Although you have to recreate the storageset from its original disks, you do not have to add the storagesets in their original order.) Use the following syntax to recreate the storageset:

```
ADD STORAGESET-NAME DISK-NAME DISK-NAME
```

9. Represent the storageset to the host by giving it a unit number the host can recognize. You can use the original unit number or create a new one. Use the following syntax:

```
ADD UNIT UNIT-NUMBER STORAGESET-NAME
```

The following example moves unit D100 to another cabinet. D100 is the RAIDset RAID99 that consists of members DISK10000, DISK20000, and DISK10100.

Old cabinet

```
DELETE D100
```

```
DELETE RAID99
```

```
DELETE DISK10000
```

```
DELETE DISK10100
```

```
DELETE DISK20000
```

```
DELETE DISK20100
```

New cabinet

```
ADD DISK DISK10000
ADD DISK DISK10100
ADD DISK DISK20000
ADD DISK DISK20100
ADD RAIDSET RAID99 DISK10000 DISK10100 DISK20000 DISK20100
ADD UNIT D100 RAID99
```


Subsystem Profile Templates



This appendix contains storageset profiles to copy and use to create your profiles. It also contains an enclosure template to use to help keep track of the location of devices and storagesets in your shelves. Four (4) templates will be needed for the subsystem.

Note: The storage map templates for the Model 4310R and Model 4214R or 4314R reflect the physical location of the disk enclosures in the rack. Disk enclosures 6, 5, and 4 are stacked above the controller enclosure and disk enclosures 1, 2, and 3 are stacked below the controller enclosure.

- [Storageset Profile](#), page 176
- [Storage Map Template 1 for the BA370 Enclosure](#), page 178
- [Storage Map Template 2 for the Second BA370 Enclosure](#), page 179
- [Storage Map Template 3 for the TSingle-Bushird BA370 Enclosure](#), page 180
- [Storage Map Template 4 for the Model 4214R Disk Enclosure](#), page 181
- [Storage Map Template 5 for the Model 4254 Disk Enclosure](#), page 183
- [Storage Map Template 6 for the Model 4310R Disk Enclosure](#), page 185
- [Storage Map Template 7 for the Model 4350R Disk Enclosure](#), page 187
- [Storage Map Template 8 for the Model 4314R Disk Enclosure](#), page 188
- [Storage Map Template 9 for the Model 4354R Disk Enclosure](#), page 190

Storage set Profile

Type of Storage set:

<input type="checkbox"/> Mirrorset	<input checked="" type="checkbox"/> RAIDset	<input type="checkbox"/> Stripeset	<input type="checkbox"/> Striped	<input type="checkbox"/> JBOD
Mirrorset				

Storage set Name

Disk Drives

Unit Number

Partitions:

RAIDset Switches:

<input type="checkbox"/> Normal (default)	<input type="checkbox"/> No (default)	<input type="checkbox"/> Best performance (default)
<input type="checkbox"/> Fast	<input type="checkbox"/> Yes, missing:	<input type="checkbox"/> Best fit
		<input type="checkbox"/> None

Mirrorset Switches:

<input type="checkbox"/> Best performance (default)	<input type="checkbox"/> Normal (default)	<input type="checkbox"/> Least busy (default)
<input type="checkbox"/> Best fit	<input type="checkbox"/> Fast	<input type="checkbox"/> Round robin
<input type="checkbox"/> None	<input type="checkbox"/> Disk drive:	

Initialize Switches:

<input type="checkbox"/> Automatic (default)	<input type="checkbox"/> No (default)	<input type="checkbox"/> Destroy (default)
<input type="checkbox"/> 64 blocks	<input type="checkbox"/> Yes	<input type="checkbox"/> Retain
<input type="checkbox"/> 128 blocks		
<input type="checkbox"/> 256 blocks		
<input type="checkbox"/> Other:		

Unit Switches:

Read caching_____	_____
Read-ahead caching_____	_____
Write-back caching_____	_____
Write-through caching_____	_____

Storage Map Template 1 for the BA370 Enclosure

Use this template for:

- BA370 single-enclosure subsystems
- first enclosure of multiple BA370 enclosure subsystems

Port								Targets
1	2	3	4	5	6			
Power Supply							Power Supply	
	D10300	D20300	D30300	D40300	D50300	D60300		
Power Supply							Power Supply	
	D10200	D20200	D30200	D40200	D50200	D60200		
Power Supply							Power Supply	
	D10100	D20100	D30100	D40100	D50100	D60100		
Power Supply							Power Supply	
	D10000	D20000	D30000	D40000	D50000	D60000		

Storage Map Template 2 for the Second BA370 Enclosure

Use this template for the second enclosure of multiple BA370 enclosure subsystems.

	Port						
	1	2	3	4	5	6	
Power Supply	D11100	D21100	D31100	D41100	D51100	D61100	Power Supply
Power Supply	D11000	D21000	D31000	D41000	D51000	D61000	Power Supply
Power Supply	D10900	D20900	D30900	D40900	D50900	D60900	Power Supply
Power Supply	D10800	D20800	D30800	D40800	D50800	D60800	Power Supply

11
10
9
8

Targets

Storage Map Template 3 for the TSingle-Bushird BA370 Enclosure

Use this template for the third enclosure of multiple BA370 enclosure subsystems.

Port								Targets
1	2	3	4	5	6			
Power Supply							Power Supply	
	D11500	D21500	D31500	D41500	D51500	D61500		
Power Supply							Power Supply	
	D11400	D21400	D31400	D41400	D51400	D61400		
Power Supply							Power Supply	
	D11300	D21300	D31300	D41300	D51300	D61300		
Power Supply							Power Supply	
	D11200	D21200	D31200	D41200	D51200	D61200		

Storage Map Template 4 for the Model 4214R Disk Enclosure

Use this template for a subsystem with a three-shelf Model 4214R disk enclosure (single-bus). You can have up to six Model 4214R disk enclosures per controller shelf.

Model 4214R Disk Enclosure Shelf 1 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk10900	Disk11000	Disk11100	Disk11200	Disk11300	Disk11400	Disk11500
Model 4214R Disk Enclosure Shelf 2 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk20900	Disk21000	Disk21100	Disk21200	Disk21300	Disk21400	Disk21500

(Continued)

Model 4214R Disk Enclosure Shelf 3 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk30900	Disk31000	Disk31100	Disk31200	Disk31300	Disk31400	Disk31500

Storage Map Template 5 for the Model 4254 Disk Enclosure

Use this template for a subsystem with a three-shelf Model 4254 disk enclosure (dual-bus). You can have up to three Model 4254 disk enclosures per controller shelf.

Model 4254 Disk Enclosure Shelf 1 (Dual-Bus)														
Bus A								Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800

Model 4254 Disk Enclosure Shelf 2 (Dual-Bus)														
Bus A								Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800

(Continued)

Model 4254 Disk Enclosure Shelf 3 (Dual-Bus)														
Bus A								Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800

Storage Map Template 6 for the Model 4310R Disk Enclosure

Use this template for a subsystem with a six-shelf Model 4310R disk enclosure (single-bus). You can have up to six Model 4310R disk enclosures per controller shelf.

Model 4310R Disk Enclosure Shelf 6 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800	Disk61000	Disk61100	Disk61200
Model 4310R Disk Enclosure Shelf 5 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk51000	Disk51100	Disk51200
Model 4310R Disk Enclosure Shelf 4 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk41000	Disk41100	Disk41200

Model 4310R Disk Enclosure Shelf 1 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk11000	Disk11100	Disk11200
Model 4310R Disk Enclosure Shelf 2 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk21000	Disk21100	Disk21200
Model 4310R Disk Enclosure Shelf 3 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk31000	Disk31100	Disk31200

Storage Map Template 7 for the Model 4350R Disk Enclosure

Use this template for a subsystem with a three-shelf Model 4350R disk enclosure (single-bus). You can have up to three Model 4350R disk enclosures per controller shelf.

Model 4350R Disk Enclosure Shelf 6 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800	Disk61000	Disk61100	Disk61200
Model 4350R Disk Enclosure Shelf 5 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk51000	Disk51100	Disk51200
Model 4350R Disk Enclosure Shelf 4 (Single-Bus)										
Bay	1	2	3	4	5	6	7	8	9	10
SCSI ID	00	01	02	03	04	05	08	10	11	12
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk41000	Disk41100	Disk41200

Storage Map Template 8 for the Model 4314R Disk Enclosure

Use this template for a subsystem with a six-shelf Model 4314R disk enclosure. You can have a maximum of six Model 4314R disk enclosures with each Model 2200 controller enclosure.

Model 4314R Disk Enclosure Shelf 6 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800	Disk60900	Disk61000	Disk61100	Disk61200	Disk61300	Disk61400	Disk61500
Model 4314R Disk Enclosure Shelf 5 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk50900	Disk51000	Disk51100	Disk51200	Disk51300	Disk51500	Disk51500
Model 4314R Disk Enclosure Shelf 4 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800	Disk40900	Disk41000	Disk41100	Disk41200	Disk41300	Disk41400	Disk41500

continued from previous page														
Model 4314R Disk Enclosure Shelf 1 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk10900	Disk11000	Disk11100	Disk11200	Disk11300	Disk11400	Disk11500
Model 4314R Disk Enclosure Shelf 2 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800	Disk20900	Disk21000	Disk21100	Disk21200	Disk21300	Disk21400	Disk21500
Model 4314R Disk Enclosure Shelf 3 (Single-Bus)														
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	09	10	11	12	13	14	15
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk30900	Disk31000	Disk31100	Disk31200	Disk31300	Disk31400	Disk31500

Storage Map Template 9 for the Model 4354R Disk Enclosure

Use this template for a subsystem with a three-shelf Model 4354R disk enclosure (dual-bus). You can have up to three Model 4354R disk enclosures per controller shelf.

Model 4354R Disk Enclosure Shelf 1 (Dual-Bus)														
	SCSI Bus A							SCSI Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk10000	Disk10100	Disk10200	Disk10300	Disk10400	Disk10500	Disk10800	Disk20000	Disk20100	Disk20200	Disk20300	Disk20400	Disk20500	Disk20800
Model 4354R Disk Enclosure Shelf 2 (Dual-Bus)														
	SCSI Bus A							SCSI Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk30000	Disk30100	Disk30200	Disk30300	Disk30400	Disk30500	Disk30800	Disk40000	Disk40100	Disk40200	Disk40300	Disk40400	Disk40500	Disk40800
Model 4354R Disk Enclosure Shelf 3 (Dual-Bus)														
	SCSI Bus A							SCSI Bus B						
Bay	1	2	3	4	5	6	7	8	9	10	11	12	13	14
SCSI ID	00	01	02	03	04	05	08	00	01	02	03	04	05	08
DISK ID	Disk50000	Disk50100	Disk50200	Disk50300	Disk50400	Disk50500	Disk50800	Disk60000	Disk60100	Disk60200	Disk60300	Disk60400	Disk60500	Disk60800

Installing, Configuring, and Removing the Client



The following information is included in this appendix:

- [Why Install the Client?](#), page 192
- [Before You Install the Client](#), page 193
- [Installing the Client](#), page 194
- [Installing the Integration Patch](#), page 195
- [Troubleshooting Client Installation](#), page 197
- [Adding Storage Subsystem and its Host to Navigation Tree](#), page 199
- [Removing Command Console Client](#), page 201
- [Where to Find Additional Information](#), page 202

Why Install the Client?

The Client monitors and manages a storage subsystem by performing the following tasks:

- Create mirrored device group (RAID 1)
- Create striped device group (RAID 0)
- Create striped mirrored device group (RAID 0+1)
- Create striped parity device group (3/5)
- Create an individual device (JBOD)
- Monitor many subsystems at once
- Set up pager notification

Before You Install the Client

1. Verify you are logged into an account that is a member of the administrator group.
2. Check the software product description that came with the software for a list of supported hardware.
3. Verify that you have the SNMP service installed on the computer. SNMP must be installed on the computer for this software to work properly. The Client software uses SNMP to receive traps from the Agent. The SNMP service is available on the Windows NT/Windows 2000/Windows Server 2003 (32-bit) installation CD-ROM. To verify that you have the SNMP service:
 - For Windows NT, double-click Services in *Start > Settings > Control Panel*. The entry for SNMP is shown in this window. If you install the SNMP service and you already have Windows NT Service Pack 6A on the computer, reinstall the service pack after installing the SNMP service.
 - For Windows 2000, click *Start > Settings > Control Panel > Administrative Tools > Component Services*. The entry for SNMP is shown in the Component Services window.
 - For Windows 2003 (32-bit), click *Start > Settings > Control Panel > Administrative Tools > Component Services*. The entry for SNMP is shown in the Component Services window.
4. Read the release notes.
5. Read [“Installing the Integration Patch”](#) on page 195 in this appendix.
6. If you have the Command Console Client open, exit the Command Console Client.
7. If you have Command Console Client version 1.1b or earlier, remove the program with the Windows Add/Remove Programs utility.
8. If you have a previous version of Command Console, you can save the Navigation Tree configuration by copying the *SWCC2.MDB* file to another directory. After you have installed the product, move *SWCC2.MDB* to the directory to which you installed SWCC.
9. Install the HS-Series Agent. For more information, see Chapter 4.

Installing the Client

The following restriction should be observed when installing SWCC on Windows NT 4.0 Workstations.

If you select all of the applets during installation, the installation will fail on the HSG60 applet and again on one of the HSG80 applets. The workaround is to install all of the applets you want except for the HSG60 applet and the HSG80 ACS 8.5 applet. You can then return to the setup program and install the one that you need.

1. In a SAN environment where you would need both HSG60 and HSG80 subsystems, StorageWorks recommends you install both, but one at a time. This problem is not seen under Windows NT 4.0 Server.
2. Insert the CD-ROM into a computer running Windows 2000 with Service Pack 3 or 4, or Windows NT 4.0 (Intel) with Service Pack 6.0A, or Windows Server 2003 (32-bit).
3. A dialog box should automatically appear.
4. One of the items in the dialog box should say “SWCC Client Software” and has a button that says “INSTALL” next to it. Click on the button to start the SWCC client installation procedure.
5. Select *HSG80 Controller for ACS87 or newer* menu option to properly install SWCC client, and click **Next**.

If this method does not work, go to the \windows directory on the CD-ROM and run the *setup.exe* program.

Note: If the computer does not find a previous installation, it will install the SWCC Navigation Window and the CLI Window.

6. Follow the instructions on the screen. After you install the software, the Asynchronous Event Service (AES) starts. AES is a service that runs in the background. It collects and passes traps from the subsystems to the Navigation Tree and to individual pagers (for example, to show that a disk has failed). AES needs to be running for the client system to receive updates.

Note: For more information on AES, see *HP StorageWorks Command Console Version 2.5, User Guide*.

Installing the Integration Patch

The integration patch determines which version of firmware the controller is using and launches the appropriate StorageWorks Command Console (SWCC) Storage Window within Insight Manager (CIM) version 4.23.

Should I Install the Integration Patch?

Install this patch if your HSG80 controller uses ACS 8.7 or later. This patch enables you to use the controller's SWCC Storage Window within CIM to monitor and manage the controller.

Performing the Integration Patch Installation

Perform the following steps to install the integration patch.

1. Verify that you have installed the HSG80 Storage Window for ACS 8.7 or later in the Add/Remove Programs in the Windows Control Panel. The HSG80 Storage Window for ACS 8.7 or later is needed to display the correct Storage Window for your version of the firmware.
2. Verify that you have installed HSG80 Storage Window version 2.1 in the Add/Remove Programs (StorageWorks HSG80 V2.1) in the Windows Control Panel. The HSG80 Storage Window version 2.1 is required to run the integration patch.
3. Verify that you have installed CIM version 4.23.
4. Install the integration patch from the Solution Software CD-ROM by double-clicking on setup.exe in the following directory:

`\Client\HSG80shim`

The patch is installed in the same location as the original SWCC installation.



Caution: Do not remove the HSG80 Client from your computer. If you remove the HSG80 Client, you will no longer be able to access its Storage Window.



Caution: If you remove the integration patch, HSG80 Storage Window V2.1 will no longer work and you will need to reinstall HSG80 Storage Window V2.1. The integration patch uses some of the same files as the HSG80 Storage Window V2.1.

Integrating Controller's SWCC Storage Window with CIM

You can open the controller's Storage Window from within the Windows-based CIM version 4.23 by doing the following:

1. Verify that you have installed the following by looking in Add/Remove Programs in Control Panel:
 - The HSG80 Storage Window for ACS 8.6 or later (Required to open the correct Storage Window for your firmware).
 - The HSG80 Storage Window version 2.1 (StorageWorks HSG80 V2.1) The CIM integration patch uses files in this program.CIM version 4.23.
 - CIM integration patch (HSG80 Insight Manager Shim).
2. Verify that you have installed the CIM Agent and the StorageWorks Command Console HS-Series Agent on the same computer.
3. Add the name of the client system that has CIM to the Agent's list of client system entries and choose SNMP as a notification scheme.
4. Open Insight Manager.
5. To open the Server window, click on the device you want to observe in the CIM Navigation window.
6. Click on the Mass Storage button in the Server window. The CIM Navigation Tree is displayed.
7. Click on the + symbol next to RAID Storage System. The Navigation Tree expands to display a listing called Storage System Information.
8. Double-click Storage System Information. You are given the status of the system.
9. Click Launch. The controller's Storage Window is displayed.

Finding the Controller's Storage Window

If you installed Insight Manager before SWCC, Insight Manager will be unable to find the controller's Storage Window. To find the controller's Storage Window, perform the following procedure:

1. Double-click the Insight Agents icon (Start > Settings > Control Panel). A window appears showing you the active and inactive Agents under the Services tab.
2. Highlight the entry for Fibre Array Information and click Add. The Fibre Array Information entry is moved from Inactive Agents to Active Agents.

Troubleshooting Client Installation

This section provides information on how to resolve some of the problems that may appear when installing the Client software:

- Invalid Network Port Assignments During Installation
- "There is no disk in the drive" Message

Invalid Network Port Assignments During Installation

SWCC Clients and Agents communicate by using sockets. The SWCC installation attempts to add entries into each system list of services (services file or for UCX, the local services database). If the SWCC installation finds an entry in the local services file with the same name as the one it wants to add, it assumes the one in the file is correct.

The SWCC installation may display a message, stating that it cannot upgrade the services file. This happens if it finds an entry in the local services file with the same number as the one it wants to add, but with a different name. In that case, appropriate port numbers must be obtained for the network and added manually to the services file.

There are two default port numbers, one for Command Console (4998) and the other for the device-specific Agent and Client software, such as the Fibre Channel Interconnect Client and Agent (4989). There are two exceptions. The following software has two default port numbers:

- The KZPCC Agent and Client, (4991 and 4985)
- The RA200 Agent and Client, (4997 and 4995)

If the Network Information Services (NIS) are being used to provide named port lookup services, contact the network administrator to add the correct ports.

The following shows how the network port assignments appear in the services file:

spgui	4998/tcp	#Command Console
ccdevmgt	4993/tcp	#Device Management Client and Agent
kzpccconnectport	4991/tcp	#KZPCC Client and Agent
kzpccdiscoverypport	4985/tcp	#KZPCC Client and Agent
ccfabric	4989/tcp	#Fibre Channel Interconnect Agent
spagent	4999/tcp	#HS-Series Client and Agent
spagent3	4994/tcp	#HSZ22 Client and Agent
ccagent	4997/tcp	#RA200 Client and Agent
spagent2	4995/tcp	#RA200 Client and Agent

“There is no disk in the drive” Message

When you install the Command Console Client, the software checks the shortcuts on the desktop and in the Start menu. The installation will check the shortcuts of all users for that computer, even if they are not currently logged on. You may receive an error message if any of these shortcuts point to empty floppy drives, empty CD-ROM drives, or missing removable disks. Do one of the following:

- Ignore the error message by clicking **Ignore**.
- Replace the removable disks, and place a disk in the floppy drive and a CD-ROM in the CD-ROM drive. Then, click **Retry**.

Adding Storage Subsystem and its Host to Navigation Tree

The Navigation Tree enables you to manage storage over the network by using the Storage Window. If you plan to use pager notification, you must add the storage subsystem to the Navigation Tree.

1. Verify that you have properly installed and configured the HS-Series Agent on the storage subsystem host.
2. Click *Start > Programs > Command Console > StorageWorks Command Console*. Client displays the Navigation Window. The Navigation Window lets you monitor and manage many storage subsystems over the network.

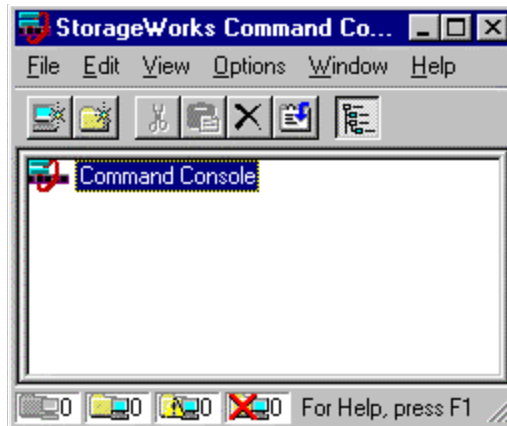


Figure 38: Navigation Window

3. Click *File > Add System*. The Add System window appears.
4. Type the host name or its TCP/IP address and click *Apply*.
5. Click *Close*.

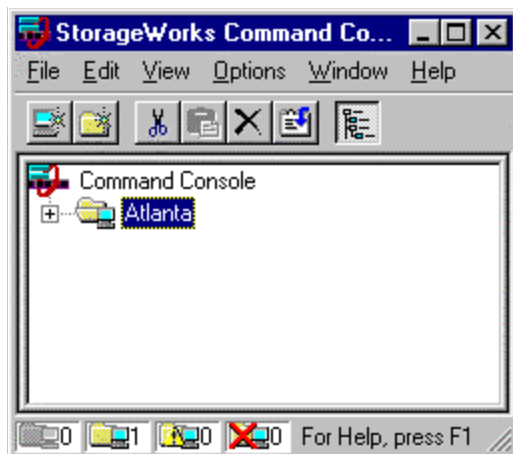


Figure 39: Navigation window showing storage host system “Atlanta”

6. Click the plus sign to expand the host icon. When expanded, the Navigation Window displays an icon for the storage subsystem. To access the Storage Window for the subsystem, double-click the Storage Window icon.

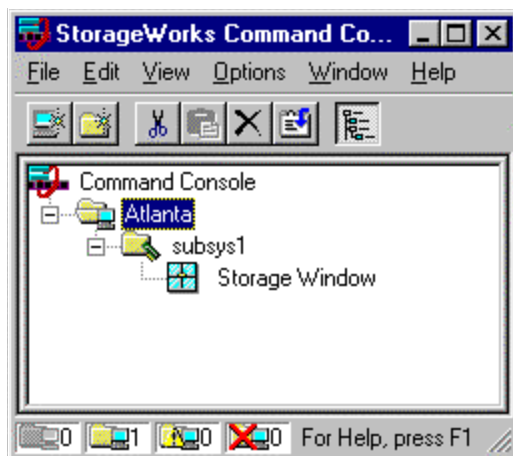


Figure 40: Navigation window showing expanded “Atlanta” host icon

Note: You can create virtual disks by using the Storage Window. For more information on the Storage Window, refer to *HP StorageWorks Command Console Version 2.5, User Guide*.

Removing Command Console Client

Before you remove the Command Console Client (CCL) from the computer, remove AES. This will prevent the system from reporting that a service failed to start every time the system is restarted. Steps 2 through 5 describe how to remove the CCL.

Note: When you remove the CCL, the *SWCC2.MDB* file is deleted. This file contains the Navigation Tree configuration. If you want to save this information, move the file to another directory.

1. Click *Start > Programs > Command Prompt* and change to the directory in which you installed the CCL.
2. Enter the following command:

```
C:\Program Files\Compaq\SWCC> AsyncEventService -remove
```
3. Do one of the following:
 - On Windows NT 4.0, click *Start > Settings > Control Panel*, and double-click the Add/Remove Programs icon in the Control Panel. The Add/Remove Program Properties window appears.
 - On Windows 2000, click *Start > Settings > Control Panel > Add/Remove Programs*. The Add/Remove Program window appears.
4. Select Command Console in the window.
5. Do one of the following:
 - On Windows NT 4.0, click *Add/Remove*.
 - On Windows 2000 and Windows Server 2003 (32-bit), click *Change/Remove*.
6. Follow the instructions on the screen.

Note: This procedure removes only the Command Console Client (SWCC Navigation Window). You can remove the HSG80 Client by using the Add/Remove program.

Where to Find Additional Information

You can find additional information about SWCC by referring to the online Help and to *HP StorageWorks Command Console Version 2.5, User Guide*.

About the User Guide

HP StorageWorks Command Console Version 2.5, User Guide contains additional information on how to use SWCC. Some of the topics in the user guide are the following:

- About AES
- Adding Devices
- Adding Virtual Disks
- Setting Up Pager Notification
- How to Integrate SWCC with Insight Manager
- Troubleshooting Information

About the Online Help

Most of the information about the Client is provided in the online Help. Online Help is provided in two places:

- Navigation Window – Online Help provides information on pager notification and a tour of the Command Console Client, in addition to information on how to add a system to the Navigation Tree.
- Storage Window – Online Help provides detailed information about the Storage Window, such as how to create virtual disks.

glossary

This glossary defines terms pertaining to the ACS solution software. It is not a comprehensive glossary of computer terms

8B/10B	A type of byte definition encoding and decoding to reduce errors in data transmission patented by the IBM Corporation. This process of encoding and decoding data for transmission has been adopted by ANSI.
adapter	A device that converts the protocol and hardware interface of one bus type into another without changing the function of the bus.
ACS	<i>See</i> array controller software.
AL_PA	<i>See</i> arbitrated loop physical address.
alias address	An AL_PA value recognized by an arbitrated loop port in addition to the assigned AL_PA.
ANSI	Pronounced “ann-see.” Acronym for the American National Standards Institute. An organization who develops standards used voluntarily by many manufacturers within the USA. ANSI is not a government agency.
arbitrate	A process of selecting one L_Port from a collection of several ports that request use of the arbitrated loop concurrently.
arbitrated loop	A loop type of topology where two or more ports can be interconnected, but only two ports at a time can communicate.
arbitrated loop physical address	Abbreviated AL_PA. A one-byte value used to identify a port in an Arbitrated Loop topology.
array controller	<i>See</i> controller.
array controller software	Abbreviated ACS. Software contained on a removable ROM program card that provides the operating system for the array controller.

association set	<p>A group of remote copy sets that share selectable attributes for logging and failover. Members of an association set transition to the same state simultaneously. For example, if one association set member assumes the failsafe locked condition, then other members of the association set also assume the failsafe locked condition.</p> <p>An association set can also be used to share a log between a group of remote copy set members that require efficient use of the log space.</p>
asynchronous	<p>Pertaining to events that are scheduled as the result of a signal asking for the event; pertaining to that which is without any specified time relation. <i>See also</i> synchronous.</p>
autospare	<p>A controller feature that automatically replaces a failed disk drive. To aid the controller in automatically replacing failed disk drives, you can enable the AUTOSPARE switch for the failedset causing physically replaced disk drives to be automatically placed into the spareset. Also called “AUTONEWSPARE.”</p>
bad block	<p>A data block that contains a physical defect.</p>
bad block replacement	<p>Abbreviated BBR. A replacement routine that substitutes defect-free disk blocks for those found to have defects. This process takes place in the controller, transparent to the host.</p>
backplane	<p>The electronic printed circuit board into which you plug subsystem devices—for example, the SBB or power supply.</p>
battery hysteresis	<p>The ability of the software to allow write-block caching during the time a battery is charging, but only when a previous down time has not drained more than 50 percent of rated battery capacity.</p>
BBR	<p><i>See</i> bad block replacement.</p>
BIST	<p><i>See</i> built-in self-test.</p>
bit	<p>A single binary digit having a value of either 0 or 1. A bit is the smallest unit of data a computer can process.</p>
block	<p>Also called a sector. The smallest collection of consecutive bytes addressable on a disk drive. In integrated storage elements, a block contains 512 bytes of data, error codes, flags, and the block address header.</p>
bootstrapping	<p>A method used to bring a system or device into a defined state by means of its own action. For example, a machine routine whose first few instructions are enough to bring the rest of the routine into the computer from an input device.</p>

built-in self-test	A diagnostic test performed by the array controller software on the controller policy processor.
byte	A binary character string made up of 8 bits operated on as a unit.
cache memory	A portion of memory used to accelerate read and write operations.
cache module	A fast storage buffer
CCL	CCL-Command Console LUN, a “SCSI Logical Unit Number” virtual-device used for communicating with Command Console Graphical User Interface (GUI) software.
channel	An interface that allows high speed transfer of large amounts of data. Another term for a SCSI bus. <i>See also</i> SCSI.
chunk	A block of data written by the host.
chunk size	The number of data blocks, assigned by a system administrator, written to the primary RAIDset or stripeset member before the remaining data blocks are written to the next RAIDset or stripeset member.
CLCP	An abbreviation for code-load code-patch utility. This utility is used to upgrade the controller and EMU software. It can also be used to patch the controller software.
CLI	See Command Line Interface.
coax	A two-conductor wire in which one conductor completely wraps the other with the two separated by insulation.
cold swap	A method of device replacement that requires the entire subsystem to be turned off before the device can be replaced. <i>See also</i> hot swap and warm swap.
command line interface	CLI. A command line entry utility used to interface with the HS-series controllers. CLI enables the configuration and monitoring of a storage subsystem through textual commands.
concat commands	Concat commands implement storageset expansion features.
configuration file	A file that contains a representation of a storage subsystem configuration.
container	1) Any entity that is capable of storing data, whether it is a physical device or a group of physical devices. (2) A virtual, internal controller structure representing either a single disk or a group of disk drives linked as a storageset. Stripesets and mirrorsets are examples of storageset containers the controller uses to create units.

controller	A hardware device that, with proprietary software, facilitates communications between a host and one or more devices organized in an array. The HSG80 family controllers are examples of array controllers.
copying	A state in which data to be copied to the mirrorset is inconsistent with other members of the mirrorset. <i>See also</i> normalizing.
copying member	Any member that joins the mirrorset after the mirrorset is created is regarded as a copying member. Once all the data from the normal member (or members) is copied to a normalizing or copying member, the copying member then becomes a normal member. <i>See also</i> normalizing member.
CSR	An acronym for control and status register.
daemon	Pronounced “demon.” A program usually associated with a UNIX systems that performs a utility (housekeeping or maintenance) function without being requested or even known of by the user. A daemon is a diagnostic and execution monitor.
data center cabinet	A generic reference to large subsystem cabinets, such as the cabinets in which StorageWorks components can be mounted.
data striping	The process of segmenting logically sequential data, such as a single file, so that segments can be written to multiple physical devices (usually disk drives) in a round-robin fashion. This technique is useful if the processor is capable of reading or writing data faster than a single disk can supply or accept the data. While data is being transferred from the first disk, the second disk can locate the next segment.
DDL	Dual data link. The ability to operate on the CI bus using both paths simultaneously to the same remote node.
device	<i>See</i> node and peripheral device.
differential I/O module	A 16-bit I/O module with SCSI bus converter circuitry for extending a differential SCSI bus. <i>See also</i> I/O module.
differential SCSI bus	A bus in which a signal level is determined by the potential difference between two wires. A differential bus is more robust and less subject to electrical noise than is a single-ended bus.
DIMM	Dual inline Memory Module.
dirty data	The write-back cached data that has not been written to storage media, even though the host operation processing the data has completed.
DMA	Direct Memory Access.

DOC	DWZZA-On-a-Chip. SCSI bus extender chip used to connect a SCSI bus in an expansion cabinet to the corresponding SCSI bus in another cabinet (See DWZZA).
driver	A hardware device or a program that controls or regulates another device. For example, a device driver is a driver developed for a specific device that allows a computer to operate with the device, such as a printer or a disk drive.
dual-redundant configuration	A controller configuration consisting of two active controllers operating as a single controller. If one controller fails, the other controller assumes control of the failing controller devices.
dual-simplex	A communications protocol that allows simultaneous transmission in both directions in a link, usually with no flow control.
DUART	Dual universal asynchronous receiver and transmitter. An integrated circuit containing two serial, asynchronous transceiver circuits.
DWZZA	A StorageWorks SCSI bus signal converter used to connect 8-bit single-ended devices to hosts with 16-bit differential SCSI adapters. This converter extends the range of a single-ended SCSI cable to the limit of a differential SCSI cable.
DWZZB	A StorageWorks SCSI bus signal converter used to connect a variety of 16-bit single-ended devices to hosts with 16-bit differential SCSI adapters.
ECB	External cache battery. The unit that supplies backup power to the cache module in the event the primary power source fails or is interrupted.
ECC	Error checking and correction.
EDC	Error detection code.
EIA	The abbreviation for Electronic Industries Association. EIA is a standards organization specializing in the electrical and functional characteristics of interface equipment.
EMU	Environmental monitoring unit. A unit that provides increased protection against catastrophic failures. Some subsystem enclosures include an EMU which works with the controller to detect conditions such as failed power supplies, failed blowers, elevated temperatures, and external air sense faults. The EMU also controls certain cabinet hardware including DOC chips, alarms, and fan speeds.

ESD	Electrostatic discharge. The discharge of potentially harmful static electrical voltage as a result of improper grounding.
extended subsystem	A subsystem in which two cabinets are connected to the primary cabinet.
external cache battery	See ECB.
F_Port	A port in a fabric where an N_Port or NL_Port may attach.
fabric	A group of interconnections between ports that includes a fabric element.
failback	The process of restoring data access to the newly-restored controller in a dual-redundant controller configuration. See also failover.
failedset	A group of failed mirrorset or RAIDset devices automatically created by the controller.
failover	<p>The process that takes place when one controller in a dual-redundant configuration assumes the workload of a failed companion controller. Failover continues until the failed controller is repaired or replaced.</p> <p>The ability for HSG80 controllers to transfer control from one controller to another in the event of a controller failure. This ensures uninterrupted operation. Use Transparent Failover mode for single HBA configurations. Use multiple-bus failover mode for Secure Path based configurations.</p>
FCA	Fibre Channel Adapter
FC-AL	The Fibre Channel Arbitrated Loop standard. See <i>Fibre Channel</i> .
FC-ATM	ATM AAL5 over Fibre Channel
FC-FG	Fibre Channel Fabric Generic Requirements
FG-FP	Fibre Channel Framing Protocol (HIPPI on FC)
FC-GS-1	Fibre Channel Generic Services-1
FC-GS-2	Fibre Channel Generic Services-2
FC-IG	Fibre Channel Implementation Guide
FC-LE	Fibre Channel Link Encapsulation (ISO 8802.2)
FC-PH	The Fibre Channel Physical and Signaling standard.
FC-SB	Fibre Channel Single Byte Command Code Set
FC-SW	Fibre Channel Switched Topology and Switch Controls

FCC	Federal Communications Commission. The federal agency responsible for establishing standards and approving electronic devices within the United States.
FCC Class A	This certification label appears on electronic devices that can only be used in a commercial environment within the United States.
FCC Class B	This certification label appears on electronic devices that can be used in either a home or a commercial environment within the United States.
FCP	The mapping of SCSI-3 operations to Fibre Channel.
FDDI	Fiber Distributed Data Interface. An ANSI standard for 100 megabaud transmission over fiber optic cable.
FD SCSI	The fast, narrow, differential SCSI bus with an 8-bit data transfer rate of 10 MB/s. <i>See also</i> FWD SCSI and SCSI.
fiber	A fiber or optical strand. Spelled <i>fib</i> re in Fibre Channel.
fiber optic cable	A transmission medium designed to transmit digital signals in the form of pulses of light. Fiber optic cable is noted for its properties of electrical isolation and resistance to electrostatic contamination.
Fibre Channel	A high speed, high-bandwidth serial protocol for channels and networks that interconnect over twisted pair wires, coaxial cable or fiber optic cable. The Fibre Channel Switched (FC-SW) (fabric) offers up to 16 million ports with cable lengths of up to 10 kilometers. The Fibre Channel Arbitrated Loop (FC-AL) topology offers speeds of up to 100 Mbytes/seconds and up to 127 nodes, all connected in serial. In contrast to SCSI technology, Fibre Channel does not require ID switches or terminators. The FC-AL loop may be connected to a Fibre Channel fabric for connection to other nodes.
Fibre Channel topology	An interconnection scheme that allows multiple Fibre Channel ports to communicate with each other. For example, point-to-point, Arbitrated Loop, and switched fabric are all Fibre Channel topologies.
FL_Port	A port in a fabric where N_Port or an NL_Port may be connected.
flush	The act of writing dirty data from cache to a storage media.
FMU	Fault management utility.
forced errors	A data bit indicating a corresponding logical data block contains unrecoverable data.
frame	An invisible unit used to transfer information in Fibre Channel.

FRU	Field replaceable unit. A hardware component that can be replaced at the customer location by service personnel or qualified customer service personnel.
FRUTIL	Field Replacement utility.
full duplex (n)	A communications system in which there is a capability for 2-way transmission and acceptance between two sites at the same time.
full duplex (adj)	Pertaining to a communications method in which data can be transmitted and received at the same time.
FWD SCSI	A fast, wide, differential SCSI bus with a maximum 16-bit data transfer rate of 20 MB/s. <i>See also</i> SCSI and FD SCSI.
GBIC	Gigabit Interface Converter. GBICs convert electrical signals to optical signals (and vice-versa.) They are inserted into the ports of the Fibre Channel switch and hold the Fibre Channel cables.
GLM	Gigabit link module
giga	A prefix indicating a billion (10^9) units, as in gigabaud or gigabyte.
gigabaud	An encoded bit transmission rate of one billion (10^9) bits per second.
gigabyte	A value normally associated with a disk drives storage capacity, meaning a billion (10^9) bytes. The decimal value 1024 is usually used for one thousand.
half-duplex (adj)	Pertaining to a communications system in which data can be either transmitted or received but only in one direction at one time.
hard address	The AL_PA which an NL_Port attempts to acquire during loop initialization.
heterogeneous host support	Also called <i>noncooperating host support</i> .
HIPPI-FC	Fibre Channel over HIPPI
host	The primary or controlling computer to which a storage subsystem is attached.
host adapter	A device that connects a host system to a SCSI bus. The host adapter usually performs the lowest layers of the SCSI protocol. This function may be logically and physically integrated into the host system.
HBA	Host bus adapter

host compatibility mode	A setting used by the controller to provide optimal controller performance with specific operating systems. This improves the controller performance and compatibility with the specified operating system.
hot disks	A disk containing multiple hot spots. Hot disks occur when the workload is poorly distributed across storage devices which prevents optimum subsystem performance. <i>See also</i> hot spots.
hot spots	A portion of a disk drive frequently accessed by the host. Because the data being accessed is concentrated in one area, rather than spread across an array of disks providing parallel access, I/O performance is significantly reduced. <i>See also</i> hot disks.
hot swap or hot-pluggable	A method of device replacement that allows normal I/O activity on a device bus to remain active during device removal and insertion. The device being removed or inserted is the only device that cannot perform operations during this process. <i>See also</i> cold swap and warm swap.
hub	<p>A device (concentrator) which performs some or all of the following functions:</p> <ul style="list-style-type: none">■ Automatic insertion of operational loop devices without disrupting the existing configuration.■ Automatic removal of failed loop devices without impacting the existing configuration.■ Provides a centralized (star) wiring configuration and maintenance point.■ Provides central monitoring and management.
IBR	Initial Boot Record.
ILF	Illegal function.
INIT	Initialize input and output.
initiator	A SCSI device that requests an I/O process to be performed by another SCSI device, namely, the SCSI target. The controller is the initiator on the device bus. The host is the initiator on the host bus.
instance code	A four-byte value displayed in most text error messages and issued by the controller when a subsystem error occurs. The instance code indicates when during software processing the error was detected.
interface	A set of protocols used between components, such as cables, connectors, and signal levels.

I/O	Refers to input and output functions.
I/O driver	The set of code in the kernel that handles the physical I/O to a device. This is implemented as a fork process. Same as driver.
I/O interface	<i>See</i> interface.
I/O module	A 16-bit SBB shelf device that integrates the SBB shelf with either an 8-bit single ended, 16-bit single-ended, or 16-bit differential SCSI bus (see SBB).
I/O operation	The process of requesting a transfer of data from a peripheral device to memory (or visa versa), the actual transfer of the data, and the processing and overlaying activity to make both of those happen.
IPI	Intelligent Peripheral Interface. An ANSI standard for controlling peripheral devices by a host computer.
IPI-3 Disk	Intelligent Peripheral Interface Level 3 for Disk
IPI-3 Tape	Intelligent Peripheral Interface Level 3 for Tape
JBOD	Just a bunch of disks. A term used to describe a group of single-device logical units.
kernel	The most privileged processor access mode.
LBN	Logical Block Number.
L_port	A node or fabric port capable of performing arbitrated loop functions and protocols. NL_Ports and FL_Ports are loop-capable ports.
LED	Light Emitting Diode.
link	A connection between two Fibre Channel ports consisting of a transmit fibre and a receive fibre.
local connection	A connection to the subsystem using either its serial maintenance port or the host SCSI bus. A local connection enables you to connect to one subsystem controller within the physical range of the serial or host SCSI cable.
local terminal	A terminal plugged into the EIA-423 maintenance port located on the front bezel of the controller. <i>See also</i> maintenance terminal.
logical bus	A single-ended bus connected to a differential bus by a SCSI bus signal converter.
logical unit	A physical or virtual device addressable through a target ID number. LUNs use their target bus connection to communicate on the SCSI bus.

logical unit number	LUN. A value that identifies a specific logical unit belonging to a SCSI target ID number. A number associated with a physical device unit during a task I/O operations. Each task in the system must establish its own correspondence between logical unit numbers and physical devices.
logon	Also called login. A procedure whereby a participant, either a person or network connection, is identified as being an authorized network participant.
loop	<i>See</i> arbitrated loop.
loop_ID	A seven-bit value numbered contiguously from zero to 126-decimal and represent the 127 legal AL_PA values on a loop (not all of the 256 hex values are allowed as AL_PA values per FC-AL.)
loop tenancy	The period of time between the following events: when a port wins loop arbitration and when the port returns to a monitoring state.
L_Port	A node or fabric port capable of performing Arbitrated Loop functions and protocols. NL_Ports and FL_Ports are loop-capable ports.
LUN	<i>See</i> logical unit number.
LRU	Least recently used. A cache term used to describe the block replacement policy for read cache.
Mbps	Approximately one million (10^6) bits per second—that is, megabits per second.
maintenance terminal	An EIA-423-compatible terminal used with the controller. This terminal is used to identify the controller, enable host paths, enter configuration information, and check the controller status. The maintenance terminal is not required for normal operations. <i>See also</i> local terminal.
member	A container that is a storage element in a RAID array.
metadata	The data written to a disk for the purposes of controller administration. Metadata improves error detection and media defect management for the disk drive. It is also used to support storageset configuration and partitioning. Nontransportable disks also contain metadata to indicate they are uniquely configured for StorageWorks environments. Metadata can be thought of as “data about data.”
mirroring	The act of creating an exact copy or image of data.

mirrored write-back caching	A method of caching data that maintains two copies of the cached data. The copy is available if either cache module fails.
mirrorset	<i>See</i> RAID level 1.
MIST	Module Integrity Self-Test.
multibus failover	Allows the host to control the failover process by moving the units from one controller to another.
N_port	A port attached to a node for use with point-to-point topology or fabric topology.
NL_port	A port attached to a node for use in all topologies.
network	In data communication, a configuration in which two or more terminals or devices are connected to enable information transfer.
node	In data communications, the point at which one or more functional units connect transmission lines.
Non-L_Port	A Node of Fabric port that is not capable of performing the Arbitrated Loop functions and protocols. N_Ports and F_Ports loop-capable ports.
non-participating mode	A mode within an L_Port that inhibits the port from participating in loop activities. L_Ports in this mode continue to retransmit received transmission words but are not permitted to arbitrate or originate frames. An L_Port in non-participating mode may or may not have an AL_PA. <i>See also</i> participating mode.
nominal membership	The desired number of mirrorset members when the mirrorset is fully populated with active devices. If a member is removed from a mirrorset, the actual number of members may fall below the “nominal” membership.
node	In data communications, the point at which one or more functional units connect transmission lines. In Fibre Channel, a device that has at least one N_Port or NL_Port.
nonredundant controller configuration	(1) A single controller configuration. (2) A controller configuration that does not include a second controller.
normal member	A mirrorset member that, block-for-block, contains the same data as other normal members within the mirrorset. Read requests from the host are always satisfied by normal members.

normalizing	Normalizing is a state in which, block-for-block, data written by the host to a mirrorset member is consistent with the data on other normal and normalizing members. The normalizing state exists only after a mirrorset is initialized. Therefore, no customer data is on the mirrorset.
normalizing member	A mirrorset member whose contents are the same as all other normal and normalizing members for data that has been written since the mirrorset was created or lost cache data was cleared. A normalizing member is created by a normal member when either all of the normal members fail or all of the normal members are removed from the mirrorset. <i>See also</i> copying member.
NVM	Non-Volatile Memory. A type of memory where the contents survive power loss. Also sometimes referred to as NVMEM.
OCP	Operator control panel. The control or indicator panel associated with a device. The OCP is usually mounted on the device and is accessible to the operator.
offset	A relative address referenced from the base element address. Event Sense Data Response Templates use offsets to identify various information contained within one byte of memory (bits 0 through 7).
other controller	The controller in a dual-redundant pair that is connected to the controller serving the current CLI session. <i>See also</i> this controller.
outbound fiber	One fiber in a link that carries information away from a port.
parallel data transmission	A data communication technique in which more than one code element (for example, bit) of each byte is sent or received simultaneously.
parity	A method of checking if binary numbers or characters are correct by counting the ONE bits. In odd parity, the total number of ONE bits must be odd; in even parity, the total number of ONE bits must be even.
parity bit	A binary digit added to a group of bits that checks to see if errors exist in the transmission.
parity check	A method of detecting errors when data is sent over a communications line. With even parity, the number of ones in a set of binary data should be even. With odd parity, the number of ones should be odd.
parity RAID	<i>See</i> RAIDset.
participating mode	A mode within an L_Port that allows the port to participate in loop activities. A port must have a valid AL_PA to be in participating mode.
partition	A logical division of a container, represented to the host as a logical unit.

PCMCIA	Personal Computer Memory Card Industry Association. An international association formed to promote a common standard for PC card-based peripherals to be plugged into notebook computers. The card commonly known as a PCMCIA card is about the size of a credit card.
PDU	Power distribution unit. The power entry device for StorageWorks cabinets. The CDU provides the connections necessary to distribute power to the cabinet shelves and fans.
peripheral device	Any unit, distinct from the CPU and physical memory, that can provide the system with input or accept any output from it. Terminals, printers, tape drives, and disks are peripheral devices.
pluggable	A replacement method that allows the complete system to remain online during device removal or insertion. The system bus must be halted, or quiesced, for a brief period of time during the replacement procedure. See also hot-pluggable.
point-to-point connection	A network configuration in which a connection is established between two, and only two, terminal installations. The connection may include switching facilities.
port	(1) In general terms, a logical channel in a communications system. (2) The hardware and software used to connect a host controller to a communications bus, such as a SCSI bus or serial bus. Regarding the controller, the port is (1) the logical route for data in and out of a controller that can contain one or more channels, all of which contain the same type of data. (2) The hardware and software that connects a controller to a SCSI device.
port_name	A 64-bit unique identifier assigned to each Fibre Channel port. The Port_Name is communicated during the login and port discovery process.
preferred address	The AL_PA which an NL_Port attempts to acquire first during initialization.
primary cabinet	The primary cabinet is the subsystem enclosure that contains the controllers, cache modules, external cache batteries, and the PVA module.
private NL_Port	An NL_Port which does not attempt login with the fabric and only communicates with NL_Ports on the same loop.
program card	The PCMCIA card containing the controller operating software.

protocol	The conventions or rules for the format and timing of messages sent and received.
PTL	Port-Target-LUN. The controller method of locating a device on the controller device bus.
PVA module	Power Verification and Addressing module.
quiesce	The act of rendering bus activity inactive or dormant. For example, “quiesce the SCSI bus operations during a device warm-swap.”
RAID	Redundant Array of Independent Disks. Represents multiple levels of storage access developed to improve performance or availability or both.
RAID level 0	A RAID storage set that stripes data across an array of disk drives. A single logical disk spans multiple physical disks, enabling parallel data processing for increased I/O performance. While the performance characteristics of RAID level 0 is excellent, this RAID level is the only one that does not provide redundancy. Raid level 0 storage sets are sometimes referred to as stripe sets.
RAID level 0+1	A RAID storage set that stripes data across an array of disks (RAID level 0) and mirrors the striped data (RAID level 1) to provide high I/O performance and high availability. This RAID level is alternatively called a striped mirror set.
RAID level 1	A RAID storage set of two or more physical disks that maintain a complete and independent copy of the entire virtual disk's data. This type of storage set has the advantage of being highly reliable and extremely tolerant of device failure. Raid level 1 storage sets are sometimes referred to as mirror sets.
RAID level 3	A RAID storage set that transfers data parallel across the array disk drives a byte at a time, causing individual blocks of data to be spread over several disks serving as one enormous virtual disk. A separate redundant check disk for the entire array stores parity on a dedicated disk drive within the storage set. <i>See also</i> RAID level 5.
RAID level 5	A RAID storage set that, unlike RAID level 3, stores the parity information across all of the disk drives within the storage set. <i>See also</i> RAID level 3.

RAID level 3/5	A RAID storageset that stripes data and parity across three or more members in a disk array. A RAIDset combines the best characteristics of RAID level 3 and RAID level 5. A RAIDset is the best choice for most applications with small to medium I/O requests, unless the application is write intensive. A RAIDset is sometimes called parity RAID.
RAIDset	<i>See</i> RAID level 3/5.
RAM	Random access memory.
read ahead caching	A caching technique for improving performance of synchronous sequential reads by prefetching data from disk.
read caching	A cache management method used to decrease the subsystem response time to a read request by allowing the controller to satisfy the request from the cache memory rather than from the disk drives.
reconstruction	The process of regenerating the contents of a failed member data. The reconstruct process writes the data to a spareset disk and incorporates the spareset disk into the mirrorset, striped mirrorset, or RAIDset from which the failed member came. <i>See also</i> regeneration.
reduced	Indicates that a mirrorset or RAIDset is missing one member because the member has failed or has been physically removed.
redundancy	The provision of multiple interchangeable components to perform a single function in order to cope with failures and errors. A RAIDset is considered to be redundant when user data is recorded directly to one member and all of the other members include associated parity information.
regeneration	(1) The process of calculating missing data from redundant data. (2) The process of recreating a portion of the data from a failing or failed drive using the data and parity information from the other members within the storageset. The regeneration of an entire RAIDset member is called reconstruction. <i>See also</i> reconstruction.
remote copy	A feature intended for disaster tolerance and replication of data from one storage subsystem or physical site to another subsystem or site. Remote copy also provides methods of performing a backup at either the local or remote site. With remote copy, user applications continue to run while data movement goes on in the background. Data warehousing, continuous computing, and enterprise applications all require remote copy capabilities.

remote copy set	A bound set of two units, one located locally and one located remotely, for long-distance mirroring. The units can be a single disk, or a storageset, mirrorset, or RAIDset. A unit on the local controller is designated as the “initiator” and a corresponding unit on the remote controller is designated as the “target”.
request rate	The rate at which requests are arriving at a servicing entity.
RFI	Radio frequency interference. The disturbance of a signal by an unwanted radio signal or frequency.
replacement policy	The policy specified by a switch with the SET FAILEDSET command indicating whether a failed disk from a mirrorset or RAIDset is to be automatically replaced with a disk from the spareset. The two switch choices are AUTOSPARE and NOAUTOSPARE.
SBB	StorageWorks building block. (1) A modular carrier plus the interface required to mount the carrier into a standard StorageWorks shelf. (2) any device conforming to shelf mechanical and electrical standards installed in a 3.5-inch or 5.25-inch carrier, whether it is a storage device or power supply.
SCSI	Small computer system interface. (1) An ANSI interface standard defining the physical and electrical parameters of a parallel I/O bus used to connect initiators to devices. (2) a processor-independent standard protocol for system-level interfacing between a computer and intelligent devices including hard drives, floppy disks, CD-ROMs, printers, scanners, and others.
SCSI-A cable	A 50-conductor (25 twisted-pair) cable generally used for single-ended, SCSI-bus connections.
SCSI bus signal converter	Sometimes referred to as an adapter. (1) A device used to interface between the subsystem and a peripheral device unable to be mounted directly into the SBB shelf of the subsystem. (2) a device used to connect a differential SCSI bus to a single-ended SCSI bus. (3) A device used to extend the length of a differential or single-ended SCSI bus. <i>See also</i> DOC (DWZZA-On-a-chip) and I/O module.
SCSI device	(1) A host computer adapter, a peripheral controller, or an intelligent peripheral that can be attached to the SCSI bus. (2) Any physical unit that can communicate on a SCSI bus.
SCSI device ID number	A bit-significant representation of the SCSI address referring to one of the signal lines, numbered 0 through 7 for an 8-bit bus, or 0 through 15 for a 16-bit bus. <i>See also</i> target ID number.

SCSI ID number	The representation of the SCSI address that refers to one of the signal lines numbered 0 through 15.
SCSI-P cable	A 68-conductor (34 twisted-pair) cable generally used for differential bus connections.
SCSI port	(1) Software: The channel controlling communications to and from a specific SCSI bus in the system. (2) Hardware: The name of the logical socket at the back of the system unit to which a SCSI device is connected.
serial transmission	A method transmission in which each bit of information is sent sequentially on a single channel rather than simultaneously as in parallel transmission.
signal converter	<i>See</i> SCSI bus signal converter.
single ended I/O module	A 16-bit I/O module. <i>See also</i> I/O module.
single-ended SCSI bus	An electrical connection where one wire carries the signal and another wire or shield is connected to electrical ground. Each signal logic level is determined by the voltage of a single wire in relation to ground. This is in contrast to a differential connection where the second wire carries an inverted signal.
spareset	A collection of disk drives made ready by the controller to replace failed members of a storage set.
storage array	An integrated set of storage devices.
storage array subsystem	<i>See</i> storage subsystem.
storage set	(1) A group of devices configured with RAID techniques to operate as a single container. (2) Any collection of containers, such as stripesets, mirrorsets, striped mirrorsets, and RAIDsets.
storage set expansion	The dynamic expansion of the storage capacity (size) of a unit. A storage container is created in the form of a concatenation set which is added to the existing storage set defined as a unit.
storage subsystem	The controllers, storage devices, shelves, cables, and power supplies used to form a mass storage subsystem.
storage unit	The general term that refers to storage sets, single-disk units, and all other storage devices that are installed in your subsystem and accessed by the host. A storage unit can be any entity that is capable of storing data, whether it is a physical device or a group of physical devices.

StorageWorks	<p>A family of modular data storage products that allow customers to design and configure their own storage subsystems. Components include power, packaging, cabling, devices, controllers, and software. Customers can integrate devices and array controllers in StorageWorks enclosures to form storage subsystems.</p> <p>StorageWorks systems include integrated SBBs and array controllers to form storage subsystems. System-level enclosures to house the shelves and standard mounting devices for SBBs are also included.</p>
stripe	<p>The data divided into blocks and written across two or more member disks in an array.</p>
striped mirrorset	<p><i>See</i> RAID level 0+1.</p>
stripeset	<p><i>See</i> RAID level 0.</p>
stripe size	<p>The stripe capacity as determined by $n-1$ times the chunksize, where n is the number of RAIDset members.</p>
striping	<p>The technique used to divide data into segments, also called chunks. The segments are striped, or distributed, across members of the stripeset. This technique helps to distribute hot spots across the array of physical devices to prevent hot spots and hot disks.</p> <p>Each stripeset member receives an equal share of the I/O request load, improving performance.</p>
surviving controller	<p>The controller in a dual-redundant configuration pair that serves its companion devices when the companion controller fails.</p>
switch	<p>A method that controls the flow of functions and operations in software.</p>
synchronous	<p>Pertaining to a method of data transmission which allows each event to operate in relation to a timing signal. <i>See also</i> asynchronous.</p>
tape	<p>A storage device supporting sequential access to variable sized data records.</p>
target	<p>(1) A SCSI device that performs an operation requested by an initiator. (2) Designates the target identification (ID) number of the device.</p>
target ID number	<p>The address a bus initiator uses to connect with a bus target. Each bus target is assigned a unique target address.</p>
this controller	<p>The controller that is serving your current CLI session through a local or remote terminal. <i>See also</i> other controller.</p>

tape inline exerciser	(TILX) The controller diagnostic software to test the data transfer capabilities of tape drives in a way that simulates a high level of user activity.
topology	An interconnection scheme that allows multiple Fibre Channel ports to communicate with each other. For example, point-to-point, Arbitrated Loop, and switched fabric are all Fibre Channel topologies.
transfer data rate	The speed at which data may be exchanged with the central processor, expressed in thousands of bytes per second (kbytes).
transparent failover	Keeps the storage array available to the hosts by allowing the surviving controller of a dual redundant pair to take over total control of the subsystem and is transparent (invisible) to the hosts.
ULP	Upper Layer Protocol.
ULP process	A function executing within a Fibre Channel node which conforms to the Upper Layer Protocol (ULP) requirements when interacting with other ULP processes.
Ultra SCSI	A Fast-20 SCSI bus. <i>See also</i> Wide Ultra SCSI.
unit	A container made accessible to a host. A unit may be created from a single disk drive or tape drive. A unit may also be created from a more complex container such as a RAIDset. The controller supports a maximum of eight units on each target. <i>See also</i> target and target ID number.
unwritten cached data	Sometimes called unflushed data. <i>See</i> dirty data.
UPS	Uninterruptible power supply. A battery-powered power supply guaranteed to provide power to an electrical device in the event of an unexpected interruption to the primary power supply. Uninterruptible power supplies are usually rated by the amount of voltage supplied and the length of time the voltage is supplied.
VHDCI	Very high-density-cable interface. A 68-pin interface. Required for Ultra-SCSI connections.
virtual terminal	A software path from an operator terminal on the host to the controller's CLI interface, sometimes called a host console. The path can be established via the host port on the controller or via the maintenance port through an intermediary host.
VTDPY	An abbreviation for Virtual Terminal Display Utility.

warm swap	A device replacement method that allows the complete system to remain online during device removal or insertion. The system bus may be halted, or quiesced, for a brief period of time during the warm-swap procedure.
Wide Ultra SCSI	Fast/20 on a Wide SCSI bus.
Worldwide name	A unique 64-bit number assigned to a subsystem by the Institute of Electrical and Electronics Engineers (IEEE) and set by manufacturing prior to shipping. This name is referred to as the node ID within the CLI.
write-back caching	A cache management method used to decrease the subsystem response time to write requests by allowing the controller to declare the write operation “complete” as soon as the data reaches its cache memory. The controller performs the slower operation of writing the data to the disk drives at a later time.
write-through caching	Write-through caching always writes directly to disk, ensuring that the application is never tricked into believing that the data is on the disk when it may not be. This results in highest data integrity, through with slightly reduced performance.
write hole	The period of time in a RAID level 1 or RAID level 5 write operation when an opportunity emerges for undetectable RAIDset data corruption. Write holes occur under conditions such as power outages, where the writing of multiple members can be abruptly interrupted. A battery backed-up cache design eliminates the write hole because data is preserved in cache and unsuccessful write operations can be retried.
write-through cache	<p>A cache management technique for retaining host write requests in read cache. When the host requests a write operation, the controller writes data directly to the storage device. This technique allows the controller to complete some read requests from the cache, greatly improving the response time to retrieve data. The operation is complete only after the data to be written is received by the target storage device.</p> <p>This cache management method may update, invalidate, or delete data from the cache memory accordingly, to ensure that the cache contains the most current data.</p>

A

- accessing the CLI, SWCC 39, 148
- accessing the configuration menu
 - Agent 119, 122
- ADD CONNECTIONS
 - multiple-bus failover 36
- ADD UNIT
 - multiple-bus failover 36, 37
- adding
 - client system entry
 - Agent 119, 122
 - subsystem entry
 - Agent 119, 122
 - virtual disks 202
- adding a disk drive to the spareset
 - configuration options 150
- adding disk drives
 - configuration options 150
- Agent
 - accessing the configuration menu 119, 122
 - client system entry
 - adding 119, 122
 - configuration menu 119, 122
 - configuring 119, 122
 - adding a client system entry 119, 122
 - adding a subsystem entry 119, 122
 - changing password 119, 122
 - deleting a client system entry 119, 122
 - deleting a subsystem entry 119, 122
 - stopping and starting the Agent 119, 122
 - viewing subsystem entries 119, 122
 - viewing the client systems 119, 122

- deleting a client system entry 119, 122
- deleting a subsystem entry 119, 122
- disabling startup 119, 122
- enabling startup 119, 122
- functions 112
- installing 117, 119
- running 116
- starting 119, 122
- stopping 119, 122
- subsystem entry
 - adding 119, 122
- togglng startup 119, 122
- using the configuration menu 119, 122
- array of disk drives 62
- assigning unit numbers 36
- assignment
 - unit numbers
 - fabric topology 147
 - unit qualifiers
 - fabric topology 147
- assignment of unit numbers
 - fabric topology
 - partition 148
 - single disk 147
- asynchronous event service 202
- autospare
 - enabling
 - fabric topology 151
- availability 69

B

- Back up, Clone, Move Data 165
- backup

- cloning data [167](#)
- subsystem configuration [166](#)

C

cabling

- controller pair [135](#)
- multiple-bus failover
 - fabric topology configuration [134](#)
- single controller [128](#)

cache modules

- location [26](#), [27](#)
- read caching [31](#)
- write-back caching [31](#)
- write-through caching [31](#)

caching techniques

- mirrored [32](#)
- read caching [31](#)
- read-ahead caching [31](#)
- write-back caching [31](#)
- write-through caching [31](#)

changing switches

- configuration options [153](#)

chunk size

- choosing for RAIDsets and stripesets [77](#)
- controlling stripesize [77](#)
- using to increase request rate [78](#)
- using to increase write performance [79](#)

CHUNKSIZE [77](#)

CLI commands

- installation verification [133](#), [141](#)
- specifying identifier for a unit [39](#), [148](#)

CLI configuration

- example [158](#)

CLI prompt

- changing
 - fabric topology [150](#)

Client

- removing [201](#)
- uninstalling [201](#)

client system entry

- Agent
 - adding [119](#), [122](#)

CLONE utility

- backup [167](#)

cloning

- backup [167](#)

command console LUN [33](#)

- SCSI-2 mode [38](#)

- SCSI-3 mode [37](#)

configuration

- backup [166](#)
- fabric topology
 - devices [141](#)
 - multiple-bus failover
 - cabling [134](#)
 - multiple-bus failover using CLI [158](#)
 - single controller cabling [127](#)
- restoring [79](#)
- rules [49](#)

Configuration Flowchart [20](#)

configuration menu

- Agent [119](#), [122](#)

configuration options

- fabric topology
 - adding a disk drive to the spareset [150](#)
 - adding disk drives [150](#)
 - changing switches
 - device [153](#)
 - displaying the current switches [153](#)
 - initialize [153](#)
 - RAIDset and mirrorset [153](#)
 - unit [153](#)
- changing switches for a storageset or device [152](#)
- changing the CLI prompt [150](#)
- deleting a storageset [152](#)
- enabling autospare [151](#)
- removing a disk drive from the spareset [151](#)

configuring

- Agent [119](#), [122](#)
- pager notification [202](#)

configuring devices

- fabric topology [141](#)

- configuring storage
 - SWCC 38
- connections 34
 - naming 34
- containers
 - attributes 60
 - illustrated 61, 142
 - mirrorsets 68
 - planning storage 60
 - stripesets 66
- controller
 - verification of installation 141
- controller verification
 - installation 133, 141
- controllers
 - cabling 128, 135
 - location 26, 27
 - node IDs 44
 - verification of installation 133, 141
 - worldwide names 44
- conventions
 - document 16
- creating
 - storage set and device profiles 63
- Creating Clones for Backup 167

D

- deleting a client system entry
 - Agent 119, 122
- deleting a subsystem entry
 - Agent 119, 122
- Destroy/Node destroy parameters 80
- device switches
 - changing
 - fabric topology 153
- devices
 - changing switches
 - fabric topology 152
 - configuration
 - fabric topology 141
 - creating a profile 63
- disabling Agent startup 119, 122

- disabling startup
 - Agent 119, 122
- disk drives
 - adding
 - fabric topology 150
 - adding to the spareset
 - fabric topology 150
 - array 62
 - corresponding storage sets 81
 - dividing 73
 - removing from the spareset
 - fabric topology 151
- displaying the current switches
 - fabric topology 153
- dividing storage sets 73
- document
 - conventions 16

E

- enabling
 - switches 75
- enabling Agent startup 119, 122
- enabling startup
 - Agent 119, 122
- erasing metadata 80
- establishing a local connection 126

F

- fabric topology
 - configuration
 - single controller cabling 127
- failover 29
 - multiple-bus 29
- First enclosure of multiple-enclosure subsystem
 - storage map template 1 178, 181, 183, 185, 187, 188, 190
- functions
 - Agent 112

G

- geometry

initialize switches [80](#)
Geometry parameters [80](#)

H

Host access
 restricting in multiple-bus failover mode
 disabling access paths [41](#)
host access
 restricting by offsets
 multiple-bus failover [43](#)
 restricting in multiple-bus failover mode [41](#)
 restricting in transparent failover mode
 disabling access paths [40](#)
host adapter
 installation [92](#)
 preparation [92](#)
host connections [34](#)
 naming [34](#)
Host storage configuration
 verify [154](#)
HSG Agent
 install and configure [111](#)
 network connection [114](#)
 overview [113](#)
 remove agent [123](#)

I

initialize switches
 changing
 fabric topology [153](#)
 CHUNKSIZE [77](#)
 geometry [80](#)
 NOSAVE_CONFIGURATION [79](#)
 SAVE_CONFIGURATION [79](#)
Insight Manager [202](#)
installation
 controller verification [133](#), [141](#)
 invalid network port assignments [197](#)
 there is no disk in the drive message [198](#)
installation verification
 CLI commands [133](#), [141](#)

installing
 Agent [117](#), [119](#)
integrating SWCC [202](#)
invalid network port assignments [197](#)

J

JBOD [62](#)

L

LOCATE
 find devices [81](#)
location
 cache module [26](#), [27](#)
 controller [26](#), [27](#)
LUN IDs
 general description [46](#)

M

maintenance port connection
 establishing a local connection [126](#)
 illustrated [126](#)
mapping storagesets [81](#)
messages
 there is no disk in the drive [198](#)
mirrored caching
 enabling [32](#)
 illustrated [32](#)
mirrorset switches
 changing
 fabric topology [153](#)
mirrorsets
 planning considerations [68](#)
 important points [69](#)
 switches [76](#)
Model 2200 Storage Maps
 examples [53](#)
moving storagesets [171](#)
multiple-bus failover
 restricting host access by offsets [43](#)
multiple-bus failover [29](#)
 ADD CONNECTIONS command [36](#)

- ADD UNIT command [36](#)
- ADD UNITcommand [37](#)
- CLI configuration procedure
 - fabric topology [158](#)
- fabric topology
 - preferring units [149](#)
- fabric topology configuration
 - cabling [134](#)
- host connections [36](#)
- restricting host access [41](#)
 - disabling access paths [41](#)
- SET CONNECTIONS command [36](#)
- SET UNITcommand [37](#)

N

- network port assignments [197](#)
- new features [95](#)
- node IDs [44](#)
 - restoring [45](#)
- NODE_ID
 - worldwide name [44](#)
- NOSAVE_CONFIGURATION [79](#)

O

- offset
 - restricting host access
 - multiple-bus failover [43](#)
- online help
 - SWCC [202](#)
- options
 - for mirrorsets [76](#)
 - for RAIDsets [76](#)
 - initialize [77](#)
- other controller [27](#)

P

- pager notification [202](#)
 - configuring [202](#)
- partitions
 - assigning a unit number
 - fabric topology [148](#)

- defining [74](#)
 - planning considerations [73](#)
 - guidelines [74](#)
- performance [69](#)
- Physical connection, making [92](#)
- planning [47](#)
 - overview [63](#)
 - striped mirrorsets [72](#)
 - stripesets [66](#)
- planning configurations
 - where to start [48](#)
- planning considerations [69](#)
- planning storage
 - containers [60](#)
- planning storage sets
 - characteristics
 - changing switches [75](#)
 - enabling switches [75](#)
 - initialization switch [75](#)
 - storage set switch [75](#)
 - unit switch [75](#)
 - switches
 - initialization [77](#)
 - storage set [76](#)
- preferring units
 - multiple-bus failover
 - fabric topology [149](#)
- profiles
 - creating [63](#)
 - description [63](#)
 - storage set [175](#)
 - example [176](#)

R

- RAIDset switches
 - changing
 - fabric topology [153](#)
- RAIDsets
 - choosing chunk size [77](#)
 - maximum membership [71](#)
 - planning considerations [69](#)
 - important points [70](#)

- switches [76](#)
- read caching
 - enabled for all storage units [31](#)
 - general description [31](#)
- read requests
 - decreasing the subsystem response time with read caching [31](#)
- read-ahead caching [31](#)
 - enabled for all disk units [31](#)
- removing
 - Client [201](#)
- removing a subsystem entry
 - Agent [119](#), [122](#)
- request rate [78](#)
- requirements
 - host adapter installation [92](#)
 - storage configuration [38](#)
- restricting host access
 - disabling access paths
 - multiple-bus failover [41](#)
 - transparent failover [40](#)
 - multiple-bus failover [41](#)
- running
 - Agent [116](#)

S

- SAVE_CONFIGURATION [79](#)
- saving configuration [79](#)
- SCSI-2
 - assigning unit numbers [37](#)
 - command console lun [38](#)
- SCSI-3
 - assigning unit numbers [37](#)
 - command console lun [37](#)
- Second enclosure of multiple-enclosure subsystem
 - storage map template 2 [179](#)
- selective storage presentation [39](#)
- SET CONNECTIONS
 - multiple-bus failover [36](#)
- SET UNIT
 - multiple-bus failover [37](#)
- setting
 - controller configuration handling [79](#)
- single disk (JBOD)
 - assigning a unit number
 - fabric topology [147](#)
- Single-enclosure subsystem
 - storage map template 1 [178](#)
- specifying identifier for a unit
 - CLI commands [39](#), [148](#)
- specifying LUN ID alias
 - SWCC [39](#), [149](#)
- starting
 - Agent [119](#), [122](#)
- stopping
 - Agent [119](#), [122](#)
- storage
 - creating map [81](#)
 - profile
 - example [176](#)
- storage configurations [47](#)
- storage map [81](#)
- Storage map template 1 [178](#)
 - first enclosure of multiple-enclosure subsystem [178](#)
 - single enclosure subsystem [178](#)
- Storage map template 2 [179](#)
 - second enclosure of multiple-enclosure subsystem [179](#)
- Storage map template 3 [180](#)
 - third enclosure of multiple-enclosure subsystem [180](#)
- Storage map template 4
 - first enclosure of multiple-enclosure subsystem [181](#)
- Storage map template 5
 - first enclosure of multiple-enclosure subsystem [183](#)
- Storage map template 6
 - first enclosure of multiple-enclosure subsystem [185](#)
- Storage map template 7

- first enclosure of multiple-enclosure subsystem [187](#)
- Storage map template 8
 - first enclosure of multiple-enclosure subsystem [188](#)
- Storage map template 9
 - first enclosure of multiple-enclosure subsystem [190](#)
- storageset
 - deleting
 - fabric topology [152](#)
 - fabric topology
 - changing switches [152](#)
 - planning considerations [64](#)
 - mirrorsets [68](#)
 - partitions [73](#)
 - RAIDsets [69](#)
 - striped mirrorsets [71](#)
 - stripesets [64](#)
 - profile [63](#)
 - profiles [175](#)
- storageset profile [63](#)
- storageset switches
 - SET command [76](#)
- storagesets
 - creating a profile [63](#)
 - moving [171](#)
- striped mirrorsets
 - planning [72](#)
 - planning considerations [71](#)
- stripesets
 - distributing members across buses [67](#)
 - planning [66](#)
 - planning considerations [64](#)
 - important points [66](#)
- subsystem
 - saving configuration [79](#)
- subsystem configuration
 - backup [166](#)
- subsystem entry
 - Agent
 - adding [119](#), [122](#)

- SWCC [112](#)
 - accessing the CLI [39](#), [148](#)
 - additional information [202](#)
 - configuring storage [38](#)
 - integrating [202](#)
 - online help [202](#)
 - specifying LUN ID alias [39](#), [149](#)
- switches
 - changing [75](#)
 - changing characteristics [75](#)
 - CHUNKSIZE [77](#)
 - enabling [75](#)
 - mirrorsets [76](#)
 - NOSAVE_CONFIGURATION [79](#)
 - RAIDset [76](#)
 - SAVE_CONFIGURATION [79](#)
- switches for storagesets
 - overview [75](#)

T

- templates
 - subsystem profile [175](#)
- terminology
 - other controller [27](#)
 - this controller [27](#)
- Third enclosure of multiple-enclosure subsystem
 - storage map template 3 [180](#)
- this controller [27](#)
- togglng startup
 - Agent [119](#), [122](#)
- transparent failover
 - restricting host access
 - disabling access paths [40](#)
- troubleshooting
 - invalid network port assignments [197](#)
 - there is no disk in the drive message [198](#)

U

- uninstalling
 - Client [201](#)
- unit numbers

- assigning [36](#)
 - fabric topology [147](#)
- assigning depending on SCSI version [37](#)
- assigning in fabric topology
 - partition [148](#)
 - single disk [147](#)
- unit qualifiers
 - assigning
 - fabric topology [147](#)
- unit switches
 - changing
 - fabric topology [153](#)
- units
 - LUN IDs [46](#)
- Upgrade procedures
 - solution software [93](#)
- using the configuration menu
 - Agent [119](#), [122](#)

V

- verification
 - controller installation [133](#), [141](#)

- verification of installation
 - controller [133](#), [141](#)
- Verifying/Installing Required Versions [93](#)
- virtual disks
 - adding [202](#)

W

- worldwide names [44](#)
 - NODE_ID [44](#)
 - REPORTED PORT_ID [44](#)
 - restoring [45](#)
- write performance [79](#)
- write requests
 - improving the subsystem response time with
 - write-back caching [31](#)
 - placing data with with write-through caching [32](#)
- write-back caching
 - general description [31](#)
- write-through caching
 - general description [31](#)